




Special Instructions to Mount End Caps on Granular Spreaders


INSTALLER: Read these instructions before installing the end caps and use them in conjunction with the end cap instructions in the SRT-2 OWNERS MANUAL

NOTE: This kit contains 5/16" x 1" stainless steel bolts with nuts and 3/8" x 1" stainless steel bolts with out nuts. Use 5/16" bolts in places that allow nuts on back. Use 3/8" ss bolts in places where nuts cannot be used on back. Drill 5/16" hole and use 3/8" x 1" self threading bolt (non-stainless steel included in kit) to cut threads in hole. Then remove self threader and turn a 3/8" x 1" SS bolt in for final attachment.


STEP 1: Attach front and rear end caps as shown in diagrams below. Also see Step 1 in SRT-2 Owner Manual. The long narrow cut out on the rear over hang end cap allows room for hoses on some models.

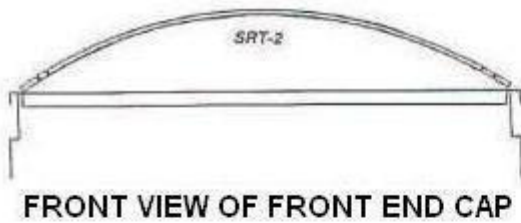

FRONT VIEW OF FRONT END CAP

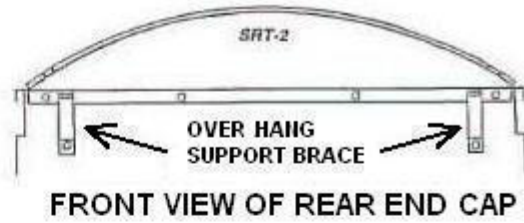


FRONT VIEW OF REAR END CAP

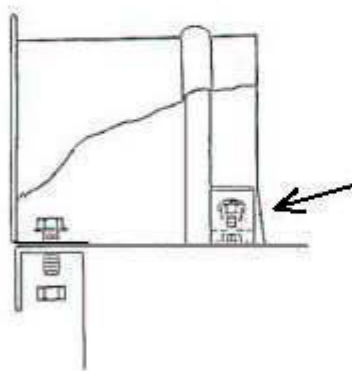

SIDE VIEW OF FRONT END CAP

END CAP ZEE BRACKET
(bolt short leg to top of box and long leg to bottom side of cap)

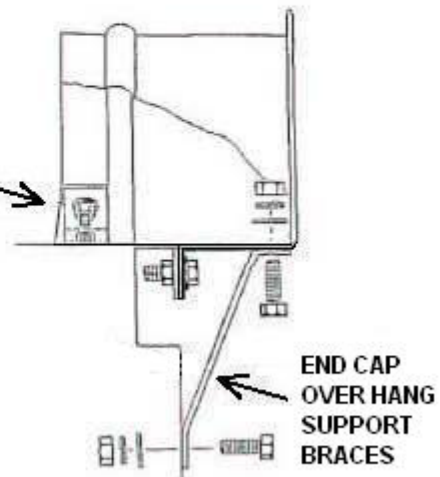

SIDE VIEW OF REAR END CAP