



(available at adarac.com)

- Always distribute weight evenly
- Verify ADARAC™ and Anchor Cleats are mounted securely before loading cargo or operating truck
- Always use caution when loading or unloading cargo
- Adhere to safety warnings and cautions outlined in ADARAC™ Installation Instructions

SAFETY INFORMATION

▲ WARNING: Each Anchor Cleat has a maximum load capacity of 100 lbs. DO NOT EXCEED this capacity.


Installation only)

TOOLS: Protective eyewear, ratchet with 7/32" hex bit socket; Phillips screwdriver and 9/16" socket (rack rail

with mounting channels

REQUIREMENT: ADARAC™ Rails or Cross Bars

ANCHOR CLEAT INSTALLATIONS

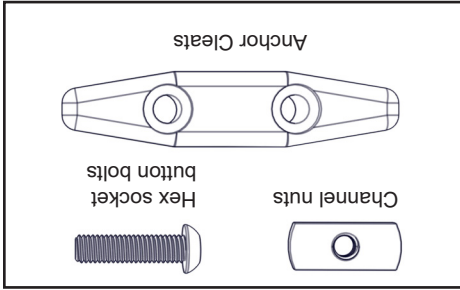

CONTENTS: (2) Anchor Cleats, (4) channel nuts and (4) 3/8" x 1-1/2" hex socket button bolts



ANCHOR CLEAT KIT

- Quickly and easily secure cargo
- Freely reposition along cross bar
- Simple installation



ANCHOR CLEAT INSTALLATION

CROSS BAR INSTALLATION:

- A. Under cross bar, tilt (2) channel nuts into mounting channel with extended threads facing up.
- B. Align Anchor Cleats with channel nuts then insert bolts and tighten using ratchet with 7/32" hex bit socket.
- D. Fully tighten and secure bolts.
- E. Repeat for remaining Anchor Cleats.

IMPORTANT: Verify Anchor Cleats are mounted securely before loading cargo or operating truck.

