

LOAD DIVIDERS



ADARAC™ Load Dividers provide a versatile and practical solution for organizing and securing cargo on your ADARAC™ Truck Bed Rack. Extending 3 in. above cross bars, these load dividers stabilize gear, prevent shifting and keep loads safely in place during transport. Freely repositioning along the cross bars to accommodate a wide variety of load sizes for maximum flexibility.

Maximum capacity: 100 lbs. per load divider.

See inside for instructions.

100725 2000296_C



WARNING:

Cancer and Reproductive Harm
www.P65Warnings.ca.gov

Black Qty 4 PN 4004455
Silver Qty 4 PN 4001551

LOAD DIVIDER INSTRUCTIONS

REQUIREMENT: ADARAC™ Cross Bars with mounting channels.

TOOLS: Protective eyewear, ft-lb torque wrench and 9/16" socket.

▲ WARNING: Each load divider has a maximum load capacity of 100 lbs. DO NOT EXCEED this capacity.

NOTE: Hardware appearance and components may vary.

SAFETY INFORMATION

Always follow safety information in ADARAC™ Installation Instructions (available at adarac.com).

A. Under cross bar, tilt channel nut into mounting channel with extended thread facing up.

NOTE: It is not required to remove cross bars from uprights when inserting channel nuts.

B. With load divider in desired orientation, align mounting hole with channel nut. ○

C. Insert bolt with lock washer and finger tighten.

D. Place top cap on free end of load divider. ○

E. Torque bolts to 32 ft-lbs.

