 


# TOW FLAP HEAT SHIELD INSTRUCTIONS

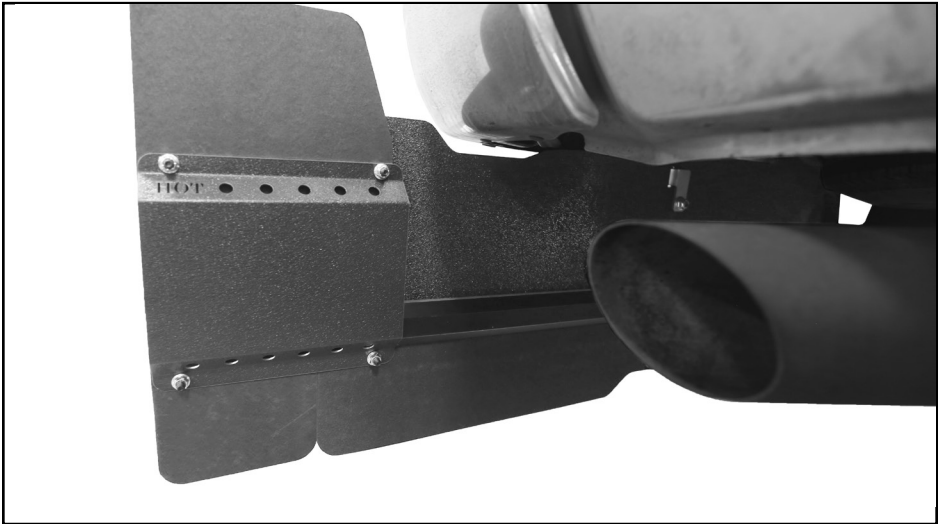

Read and follow these instructions along with the standard instructions carefully before installing or using this tow flap.

**NOTICE TO INSTALLER:** Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read instructions. Save these instructions for future reference.

# PREPARATION

## COMPONENTS

- Heat shield
- Hardware

## TOOLS NEEDED

- Ratchet with 1/2" socket
- 1/2" Wrench
- Drill with 11/32" drill bit

 
**⚠ CAUTION:** Over tightening hardware may damage components or truck.

**⚠ CAUTION:** After installation, do not touch Heat Shield, hot exhaust results in high temperatures on Heat Shield.


**IMPORTANT:** Ensure exhaust fumes are not directed or redirected toward vehicle or mud flaps. Additional precautionary measures may need to be taken to divert exhaust.

# 1: INSTALLING TOW FLAP HEAT SHIELD

A. With tow flaps installed on truck, align heat shield with exhaust stream. Mark (4) holes using heat shield as a template.

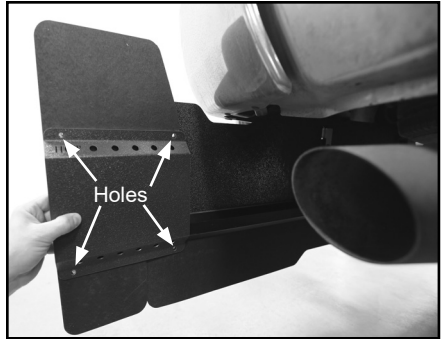

 B. Drill (4) holes with 11/32" drill bit.

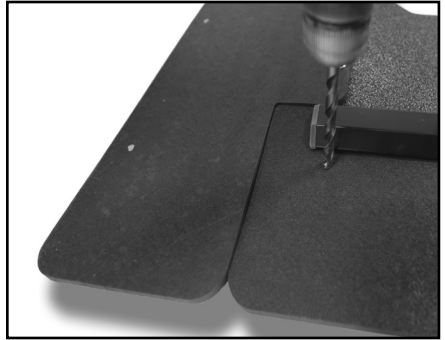

C. Align holes on heat shield and tow flap half. Insert 5/16" x 1" bolts through diamond plate side of tow flap and tighten. Secure with nylock flange nut and tighten.

**NOTE:** If necessary, use (2) 5/16" nuts as spacer between tow flap metal and heat shield.

