



### **JUMPER WIRE INSTRUCTIONS**

Use these instructions to install a jumper wire for select New Leader models with ISO-BUS body module. Read and follow these instructions along with the standard instructions carefully before installing or using tarp system.

**NOTICE TO INSTALLER:** Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle components with care. If you have questions or problems, call customer service. When done, these instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read safety and maintenance sections of these instructions. Save these instructions for future reference.



### **PREPARATION**

Follow OEM instructions to power off machine and batteries then proceed to model specific section below.


#### **TOOLS NEEDED**

Screwdriver (optional)

▲ CAUTION: Always disconnect power before servicing system or electrical components and refer to OEM documentation before installing.

NOTE: Hardware appearance and components may vary.


**REQUIREMENT:** If needed follow OEM instructions to install ISO-BUS body module (PN 310736) and body module harness (PN 316136) prior to installation of this product.

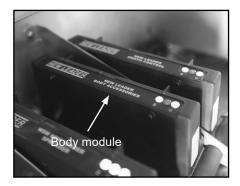


PN 310736

# 1: INSTALLING JUMPER WIRE


A. Locate ACI Switch Box and accessory wire.

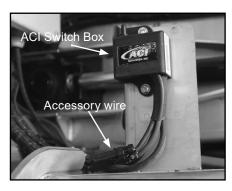


B. Push red locking tab away from accessory wire plug and pull plug cap to remove.

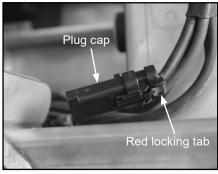


C. Plug three-prong end of jumper wire into accessory wire plug, then push red locking tab.

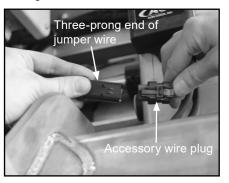

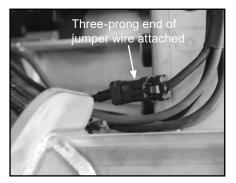


# 1: INSTALLING JUMPER WIRE (Continued)


D. Route jumper wire to body module area.

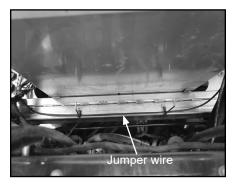

E. Locate access panel and remove cover.

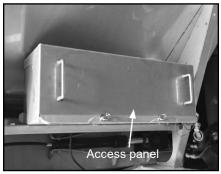


F. Locate body module and body module harness.

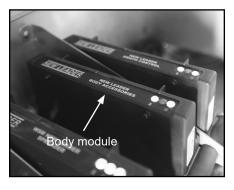

# 1: INSTALLING JUMPER WIRE (Continued)

G. Remove cap from body module harness.

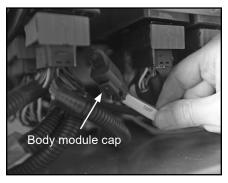

H. Plug two-prong end of jumper wire into body module plug.



**▲ CAUTION:** Ensure people and objects are clear of tarp system before and during operation.


I. Follow OEM instructions to power on battery supply and machine, then test open and close tarp functions.

**NOTE:** Periodically check jumper wire connections are secure.

## 2: OPERATING TARP USING CAB MONITOR

- A. Open New Leader menu.
- B. Select Tools.



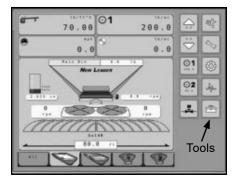

C. Select Body Module.





- D. Press and hold the Open button to open tarp.
- E. Press and hold the Close button to close tarp.

