



## JOHN DEERE LIFTING HOOK REMOVAL SPECIAL INSTRUCTIONS

Use these instructions to remove John Deere lifting hook. Read and follow these instructions along with the standard instructions carefully before installing or using tarp system.

**NOTICE TO INSTALLER:** Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. If you have questions or problems, call customer service. When done, these instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read special instructions. Save these instructions for future reference.

# PREPARATION

## TOOLS NEEDED


- Ratchet with 9/16" and 17mm socket
- 7/32" Allen wrench
- Protective eyewear

**⚠ CAUTION:** To avoid galling of stainless steel hardware, use anti-galling spray, grease or lubricant on threads and avoid high speed when fastening. Do not use impact tools for stainless steel hardware.

**NOTE:** These instructions are used to eliminate ratchet strap interference with lifting hook.

## 1: REMOVING LIFTING HOOK

A. Remove (8) bolts securing lifting hook on driver side and remove lifting hook.

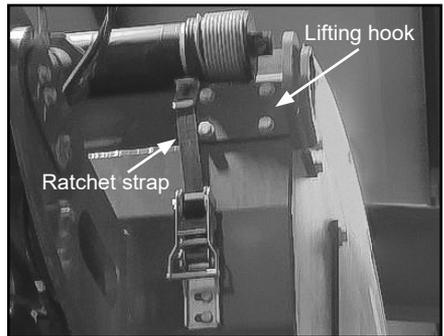

B. Install (2) Allen button head bolts where lifting hook was interfering with ratchet strap. Install (6) factory bolts at remaining locations.

**NOTE:** Save lifting hook and (2) bolts and return this hardware to owner.

C. For remaining installation, refer to standard instructions.

