



2022-ON HYUNDAI SANTA CRUZ

Thank you for purchasing a LOMAX® STANCE™ Hard Cover. Agri-Cover, Inc. proudly manufactured this cover using superior quality materials and workmanship. With proper care, your cover will provide years of service and enjoyment.

NOTICE TO INSTALLER: Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle cover and components with care. If you have questions or problems, have serial number ready and call customer service. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read operating, maintenance and safety sections. Save these instructions for future reference.

FOR YOUR RECORDS

DATE PURCHASED: _____

WHERE PURCHASED: _____

SERIAL NUMBER: _____

(Located on decal under rear panel)



Questions? 844-566-2987
agricover.com

PREPARATION

IMPORTANT: Truck is equipped with a trunk-like lid on box floor. Lid remains functional, however, restricted from fully opening. Avoid forcing lid beyond its limit.

COMPONENTS

- (8) Clamps
- (2) Anchors
- Driver side rail
- Passenger side rail
- Pre-folded cover assembly
- Seal gasket
- Side seal
- Header bar
- Alcohol pad
- Primer

TOOLS NEEDED

- Ratchet with 10mm and T-30 Torx sockets
- 10mm wrench
- In-lbs torque wrench
- Cutting tool
- Protective eyewear
- Marking tool
- Gloves
- 7/16" Wrench (optional)

NOTE: For additional protection against the elements, locate and seal miscellaneous factory holes, crevices, stake pockets, etc. that may be in box (sealant not included).

⚠ CAUTION: Over torquing hardware may damage components.


⚠ CAUTION: Before using primer, read and understand all directions, warnings and precautions. For more information, visit primer manufacturer's website.

⚠ DANGER: Highly flammable liquid and vapor. Do not use or store primer near fire or flame. Use in well ventilated area. No smoking. Avoid contact with eyes. Do not breathe vapor. Keep out of reach of children. Wear protective gloves and eye/face protection. May be fatal if swallowed and enters airways. May cause an allergic skin reaction. May cause drowsiness or dizziness.

NOTE: For best adhesion, ensure air and surface temperatures are above 60° F.

PARTS DIAGRAM


Front (closest to cab)

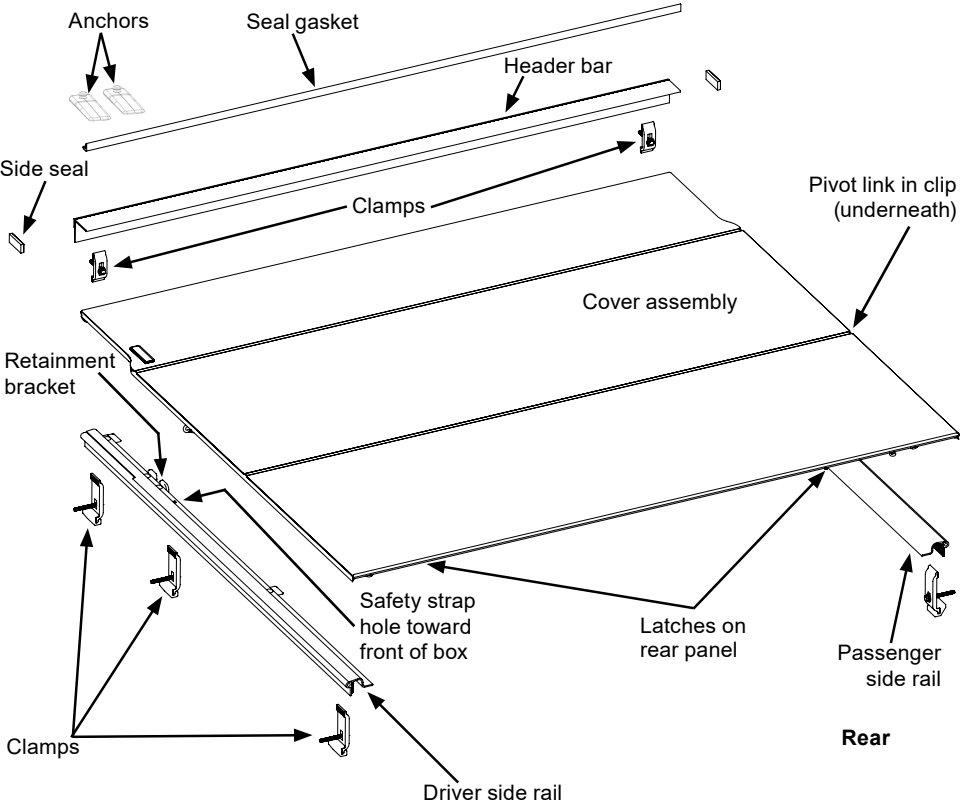



1: SIDE RAILS AND HEADER BAR INSTALL

A. Use T-30 Torx socket to remove first, second and fourth bolts on both sides of truck bed and outer (2) bolts on bulkhead.

NOTE: These bolts will be replaced with new hardware in Step 1B. Installers should return these bolts to the owner.

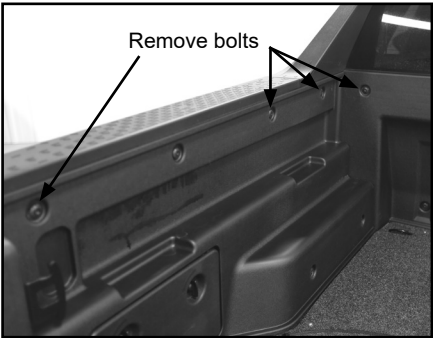

B. Place lock washer and flat washer on bolts. Insert 50mm bolts into small clamps and 60mm bolts into large clamps, slide spacers onto long leg of large clamps.

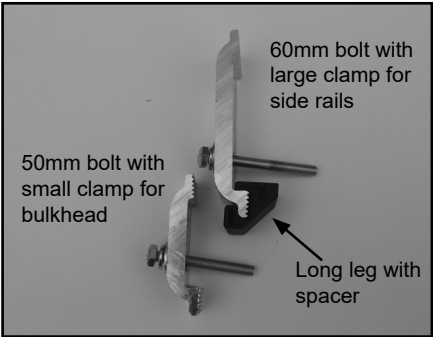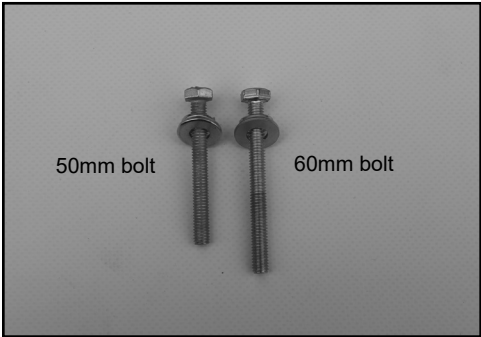


1: SIDE RAILS AND HEADER BAR INSTALL

(Continued)


NOTE: For best adhesion, ensure air and surface temperatures are above 60° F.

C. Ensure side of box is clean, wipe surface with alcohol pad. Apply side seal flush with top of bulkhead.

IMPORTANT: Save alcohol pad for later use.

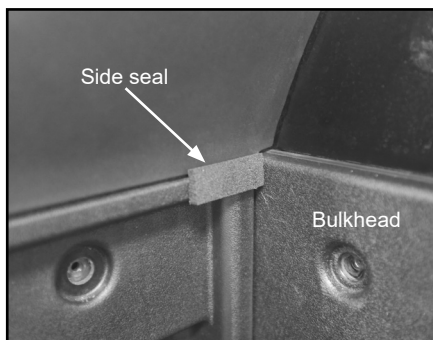

D. Place header bar against bulkhead ensuring header bar seal contacts bulkhead and side seal is slightly exposed above header bar.

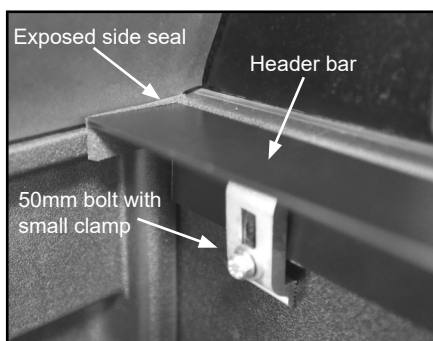


E. Install 50mm bolt and clamp assembly into factory hole, finger tighten.

F. Repeat on opposite side of header bar, torque both bolts to 70 in-lbs (5.8 ft-lbs).

G. Install 60mm bolts and side rail clamp assemblies into factory holes. Leave clamps loose for now.

H. Position side rail with weather strip against inside lip of box, safety strap hole toward front of box. Push side rail forward until it touches the header bar.

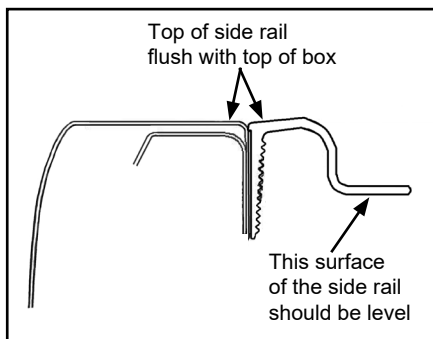

1: SIDE RAILS AND HEADER BAR INSTALL (Continued)

I. Starting at the front, adjust top of side rail until flush with top of box. Tighten 60mm bolts and clamp assemblies into factory holes.

J. Verify side rail is level. If side rail is not level, perform one of the following:



If side rail tilts up: loosen and lower clamp, engage teeth and then retighten clamp.

If side rail tilts down: loosen and raise clamp, engage teeth and then retighten clamp.

K. Torque bolts to 70 in-lbs (5.8 ft-lbs).

L. Repeat Steps 1G-K to install side rail on opposite side.


NOTE: If box has bed lights, ensure rear clamp is not touching bed light cover.

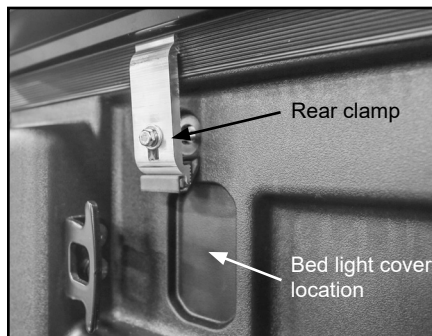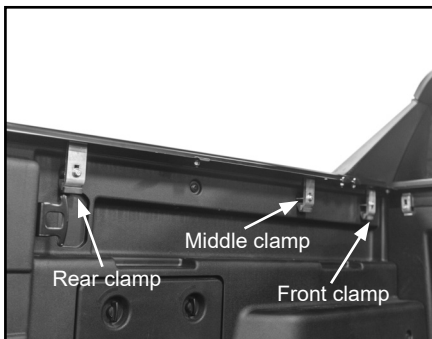

M. Ensure header bar is clean, wipe top surface with alcohol pad.


N. Starting at one end, peel protective backing off seal gasket. Ensure seal gasket is touching both side rail and plastic molding. Adhere along header bar to opposite corner and cut to length.

IMPORTANT: Ensure raised portion of seal gasket is against inside edge of header bar while unraised portion is toward cab.

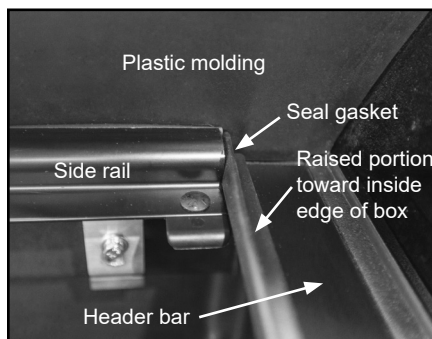


2: INSTALLING COVER

A. At front of box, carefully place header panel on side rails. Hold cover's rear edge 1" above side rails and slide cover hooks underneath front rail catch on each side.

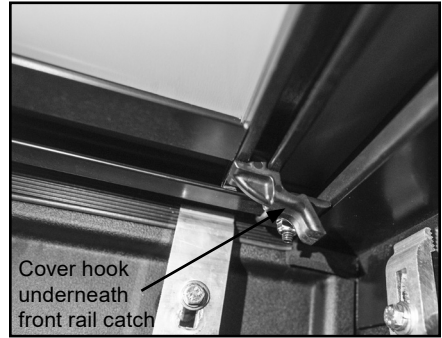

B. Lower cover to engage latches in retainment brackets on each side.


IMPORTANT: Always ensure hooks and latches fully engage side rails.

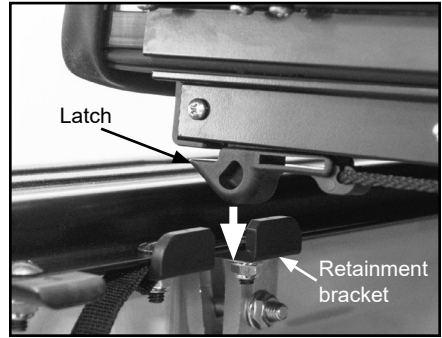

C. Open cover to attach safety straps to side rails on each side.

IMPORTANT: Always ensure safety straps are attached to cover and side rails.


NOTE: Use caution if resting cover on cab during install.

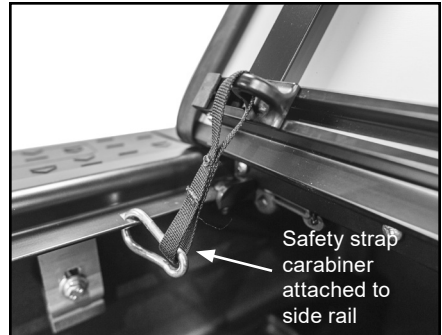

2: INSTALLING COVER (Continued)

▲ CAUTION: Air and surface temperatures must be above 60° F for proper adhesion.


D. Swing pivot links out from clips and attach anchors.

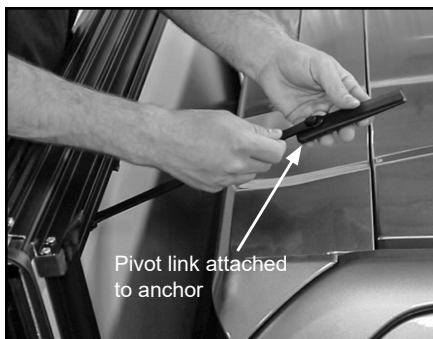

E. With anchor post toward cover, test placement on top of cab in flat area between ribs. Ensure pivot link is flat against anchor post, then mark location. Repeat for opposite side.

IMPORTANT: Ensure minimum 1" space between cover and closest point on cab.

NOTE: Improper placement of anchors will require ordering replacements.

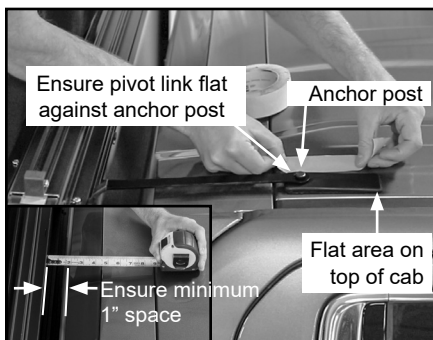

F. Release pivot link from anchor and secure in clip on each side.

G. Clean marked locations with alcohol pad.

H. Shake primer, squeeze at black dot to start liquid flow, then prime locations and allow to dry.

NOTE: Refer to primer manufacturers website for dry time.



▲ CAUTION: Strong magnetic pull may cause improper placement.

I. Peel adhesive liner from anchors and adhere to marked locations. Apply pressure for 10 seconds, then close cover.

NOTE: After installation, cover should remain in closed position for at least 48 hours. During this time period, anchors bond to cab and cover typically conforms to truck box.



TROUBLESHOOTING

PROBLEM

SOLUTION

Top of tailgate hits cover when attempting to close

Verify side rail guide is set on top of box. Side rails are not level or set too low at rear of cover, raise rails at rear of box until cover no longer interferes with tailgate operation (see Step 1).

Gap between cover and truck box or tailgate

Verify side rail guide is set on top of box. Side rails are not level or set too high (see Step 1).

Seal on edge of cover is not sealing tight with top of side rail and truck box

Verify side rail guide is set on top of box. Check side rails for height and level (see Step 1).

Latch doesn't engage

Check side rails for height and level (see Step 1). Inspect latches for jammed or broken parts.

Cover is not parallel with side rails

With cover installed on box, loosen hardware on both retainment brackets with 7/16" wrench (DO NOT REMOVE HARDWARE). Unfold cover to closed position and square up with box. Carefully fold cover back to open position and retighten retainment brackets' hardware.

3: OPENING FOLDING COVER

IMPORTANT: To avoid damage or misalignment of hinge points, open cover in a smooth, fluid manner.

IMPORTANT: Remove debris or snow from hinges before opening cover.

A. Open tailgate, pull release latch.



B. Fold panel toward the cab.



C. Release additional latch and carefully tilt cover forward.

D. Secure pivot link to anchor on each side.



CLOSING FOLDING COVER


IMPORTANT: To avoid damage or misalignment of hinge points, close cover in a smooth, fluid manner. Avoid dropping or slamming cover.

IMPORTANT: Remove debris or snow from hinges before closing cover.


A. Open tailgate. Release pivot link and lower onto side rails.



TIP: For easier removal of pivot link, push down on anchor post with thumb.

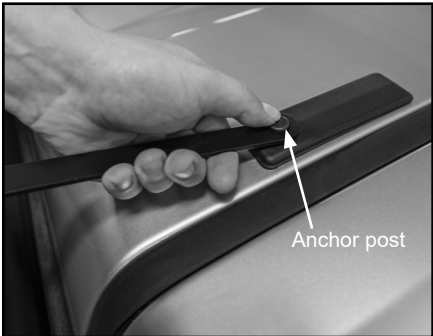


B. Always ensure hooks and latches fully engage side rails. Close tailgate.

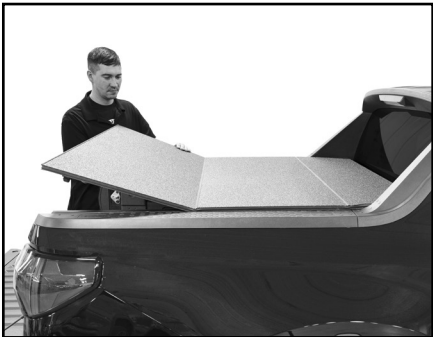

REMOVING AND REINSTALLING COVER


REMOVE COVER

- A. With cover open, detach safety straps from side rails.
- B. Pull release latch on header panel and lift rear edge of cover 1" above side rails (Figure 1).
- C. Slide cover back to disengage hooks, then lift to remove (Figure 2).

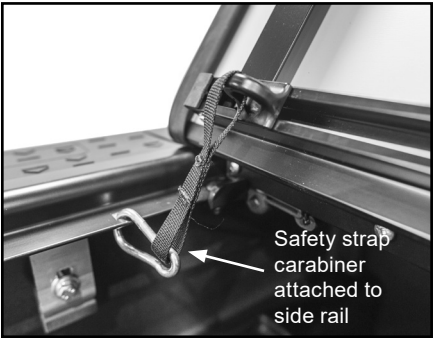

REINSTALL COVER


- A. At front of box, set front edge of header panel on side rails and hold rear edge 1" above rails (Figure 1).
- B. Slide cover forward to engage hooks underneath catches (Figure 2).
- C. Lower cover to engage latches in retainment brackets.
- D. Secure safety straps to side rails.

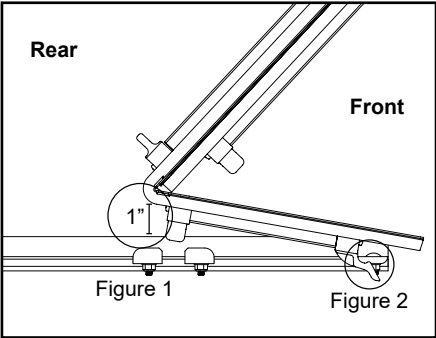

ALWAYS PROPERLY SECURE COVER

⚠ WARNING: Failure to execute these steps may result in severe damage and will void your warranty.

1. Cover hooks engaged underneath rail catches.
2. Latches engaged in retainment brackets.
3. Safety straps attached to side rails.
4. Pivot links secured to anchors without interference.

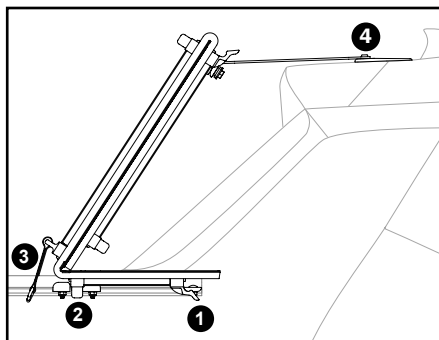

TIPS FOR A LONGER LASTING COVER

- Keep cover closed when not in use.
- Avoid storing cover in opened position for long periods of time.
- Avoid dropping or slamming cover into closed position.
- Ensure cover is properly latched while traveling and before entering automatic drive-through car washes.
- When cleaning, use mild liquid soap and water. Periodically treat cover and hinges with our COVER CARE® Cleaners and UV protectant. Never clean with petroleum or citrus based products. Petroleum based products may dry out and damage cover seal.

SAFETY INFORMATION

- Always ensure hooks and latches fully engage side rails.
- Ensure safety straps are attached to side rails when cover is installed.
- Ensure anchors are clear, free of interference.
- Never rest cover against cab after installation.
- Do not tow vehicle backward with cover on your truck.
- Do not cover cargo that is higher than the cover.
- Do not place object(s) on or against the cover or its framework at any time.
- Always secure cargo to ensure it does not damage cover or framework.
- Remove debris, snow or ice from cover and hinges before opening or closing cover.
- Do not use the cover's framework to tie down cargo.
- Never stand, sit or ride on the cover or allow others to do so.
- Cover does not eliminate moisture and dust from entering the truck box. Special wrappings or packaging of the cargo may be necessary.
- Due to poor ventilation, if you allow a pet/animal in the box, leave cover open. Do not allow people or animals to occupy box with the cover closed.
- Avoid excessive speeds and high winds when cover is in vertical position.
- Do not clean cover with a pressure washer.
- Keep cover completely closed or in approved vertical position. Do not drive with only the rear panel open.
- Before entering low clearance areas, check height restrictions to ensure safe entry.
- Keep cover closed when going through automatic car washes.
- Keep hands and fingers away from all pinch points.
- Never use latch cord to lift or fold cover.
- Use caution when operating cover in windy conditions.


INSPECTION AND MAINTENANCE

The operator can perform most inspection and maintenance. It may be necessary to review the installation and operating instructions.

- Periodically check and retighten safety strap hardware. If safety straps are damaged, replace with new hardware.
- Periodically check and retighten clamps as needed.
- Periodically check latch cords to ensure latches fully engage side rails.
- Periodically inspect cover assembly and the condition of all parts. Check for loose bolts and parts, tighten if needed. Test the operation to ensure parts are functioning properly and cover is in top operational condition.
- If latches have been damaged, replace with new ones.
- Periodically ensure anchors are clear, free of interference. If anchors have been damaged, replace with new ones.

NOTE: Inspection and maintenance should also be performed anytime a malfunction is observed or suspected. If you need assistance inspecting or servicing your cover, or if you want to order a replacement part, call the customer service number on the back page. Always use original equipment replacement parts for your cover.

Serial Number can be found under rear panel on driver side.

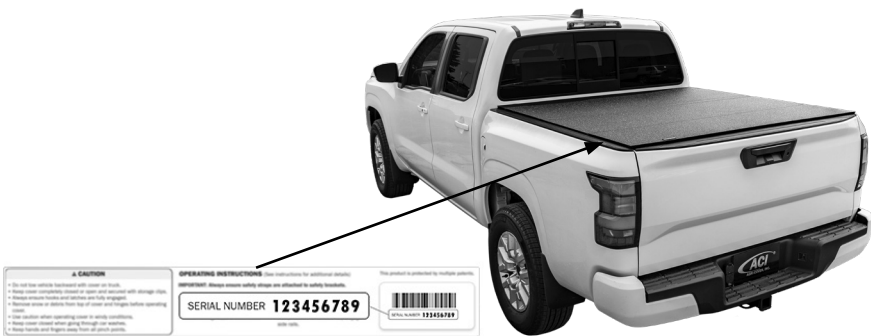

MANUFACTURER'S LIMITED WARRANTY

Agri-Cover, Inc. extends the following three (3) year Limited Warranty for the LOMAX® STANCE™ Hard Cover:

Agri-Cover, Inc. warrants a period of three (3) years from the date of manufacture that its LOMAX® STANCE™ Hard Cover is free from defects in workmanship under normal use for the truck model it was intended for. This Limited Warranty does not cover any damage due to accident, abuse, misuse, alteration, neglect, improper installation, or ordinary wear and tear.

Agri-Cover, Inc.'s sole obligation under this Limited Warranty is limited to the repair or replacement at its option, of defective parts only. No labor or service allowance is given or implied. IN NO EVENT SHALL AGRI-COVER, INC. BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES. AGRI-COVER, INC. EXPRESSLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY, AND THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE LIMITED WARRANTY DESCRIPTION CONTAINED HEREIN.

For warranty, have serial number ready and fill out the warranty claim form at agricover.com/warrantyclaim or call Customer Service Department at 844-566-2987 to determine if only a replacement part is needed or if the cover needs to be returned for inspection and repair. Goods to be returned must have a pre-authorized RA # (Return Authorization Number) - obtained by calling the number above. Mark the number on the package and ship it freight prepaid to address below. Agri-Cover, Inc. will pay freight to return goods to sender.

This Limited Warranty gives you specific legal rights and you may have other rights, which vary, from state to state.

For replacement parts shop at lomaxparts.com or call Customer Service at 844-566-2987.



Agri-Cover, Inc.
Customer Service Dept
3000 Hwy 281 SE
Jamestown, ND 58401
Phone: 844-566-2987

Hours: 8:00 am - 5:00 pm CST Monday through Friday, except Holidays