

adarak.com)

- Always distribute weight evenly
- Verify ADARAC™ and extensions are mounted securely before loading cargo or operating truck
- Always use caution when loading or unloading cargo
- Adhere to safety warnings and cautions outlined in ADARAC™ Installation Instructions (available at adarak.com)

SAFETY INFORMATION

▲WARNING: Refer to standard instructions for load capacity. DO NOT EXCEED this capacity.

TOOLS: Protective eyewear, ratchet and 9/16" socket

(not included).


NOTE: Models with hex bolts require 2-1/4" hex bolt

with mounting channels

REQUIREMENT: ADARAC™ Aluminum Rack Models

UPRIGHT EXTENSION INSTRUCTIONS

-

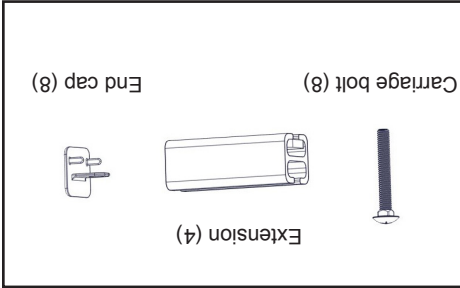

CONTENTS: (4) Extensions, (8) End caps and (8) 3/8" x 2-3/4" Carriage bolts



UPRIGHT EXTENSIONS

- Maximize cab clearance
- Increase truck bed capacity
- Simple installation



EXTENSION INSTALLATION

A. On one side, loosen bolt holding end cap on cross bar and remove.

B. Under upright, remove (2) nuts attaching upright to cross bar. Raise cross bar, remove carriage bolts and mounting bracket through open end of nut channel. Save mounting bracket and nuts for reinstallation. Repeat on opposite side.

C. Place (2) $\frac{3}{8}$ " x $2\text{-}\frac{3}{4}$ " carriage bolts into mounting bracket and insert into cross bar, aligning with holes in uprights. Repeat on opposite side.

D. Insert (2) extension plugs into extension. Place extension on upright, insert bolts through extension and upright, finger tighten nuts. Repeat on opposite side.

E. Reinstall end cap, fully tighten all hardware.

F. Repeat Steps 1 A-E for other cross bar.

G. Refer to standard instructions to ensure proper installation.

