



## 2024-ON CHEVY SILVERADO/GMC SIERRA EV INSTALLATION INSTRUCTIONS

Thank you for purchasing a LOMAX® STANCE™ Hard Cover. Agri-Cover, Inc. proudly manufactured this cover using superior quality materials and workmanship. With proper care, your cover will provide years of service and enjoyment.

**NOTICE TO INSTALLER:** Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle cover and components with care. If you have questions or problems, have serial number ready and call customer service. When done, these instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read operating, maintenance and safety sections. Save these instructions for future reference.

### FOR YOUR RECORDS

DATE PURCHASED: \_\_\_\_\_

WHERE PURCHASED: \_\_\_\_\_

SERIAL NUMBER: \_\_\_\_\_

(Located on decal under rear panel)



Questions? 844-566-2987  
agricover.com

# PREPARATION

Unpack cover components and clean truck box if dirty. Ensure air and surface temperatures are above 60° F. For additional assistance, go to [lomaxcovers.com](http://lomaxcovers.com) for install video.

## COMPONENTS

- (8) Clamps
- (2) Anchors
- Driver side rail
- Passenger side rail
- Pre-folded cover assembly
- Alcohol pad
- Primer
- Seals

## TOOLS NEEDED

- 1/2" Wrench
- Ft-lb torque wrench with 1/2" socket
- Marking tool
- Scissors
- Protective eyewear
- Gloves
- 7/16" Wrench - optional
- Spring clamp - optional

**NOTE:** Under the rail drop-in bed liner requires minimal modification at front corner of box and back by tailgate. Over the rail drop-in bed liner requires considerable modification.


**NOTE:** For additional protection against the elements, locate and seal miscellaneous factory holes, crevices, stake pockets, etc. that may be in box (sealant not included).

**⚠ CAUTION:** Over torquing hardware may damage components.

**⚠ CAUTION:** Before using primer, read and understand all directions, warnings and precautions. For more information, visit [primer manufacturer's website](#).


**⚠ DANGER:** Highly flammable liquid and vapor. Do not use or store primer near fire or flame. Use in well ventilated area. No smoking. Avoid contact with eyes. Do not breathe vapor. Keep out of reach of children. Wear protective gloves and eye/face protection. May be fatal if swallowed and enters airways. May cause an allergic skin reaction. May cause drowsiness or dizziness.

# PARTS DIAGRAM

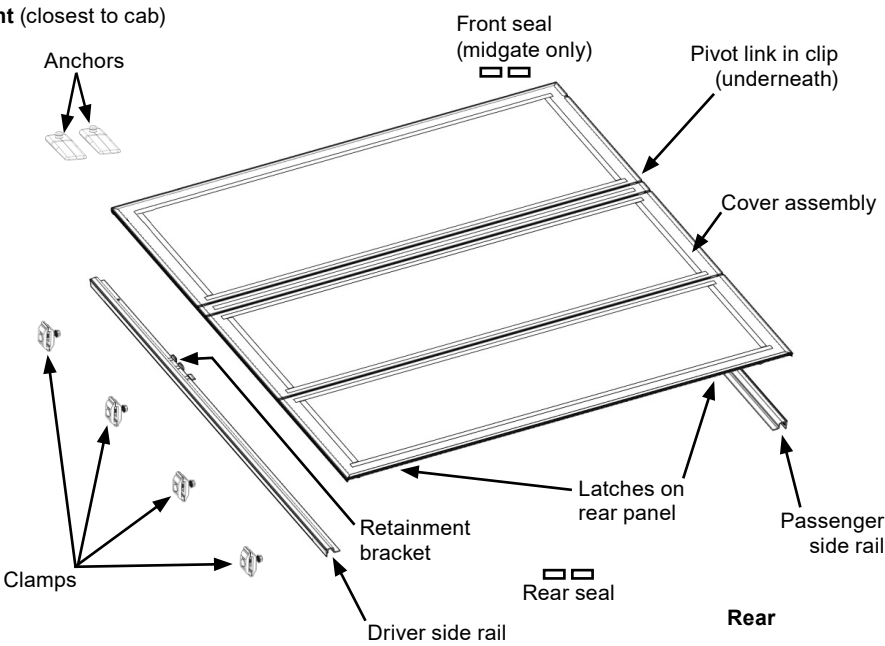


# 1: INSTALLING SIDE RAILS

A. Position side rail with weather strip against inside lip of box, front catch toward front of box and side rail guide set on top of box. Push side rail forward until it touches front of box.

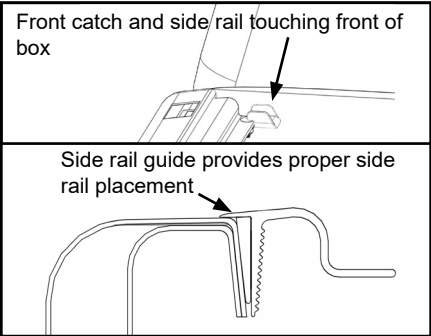


**NOTE:** For vehicles equipped with midgate option, position side rail 1-1/4" from front of box.

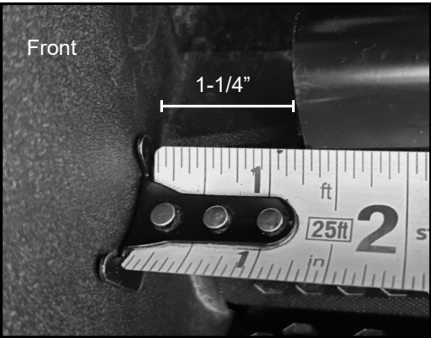

B. At front, hold side rail with assistance of another person or a spring clamp.

C. Install first clamp as close to front of box as possible with clamp orientation that provides best grip, turn nut finger tight, then use 1/2" wrench to tighten.

**IMPORTANT:** To keep side rail secured on truck, ensure clamp teeth engage grooves on side rail.

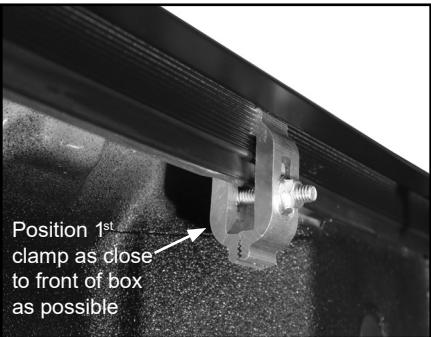


# 1: INSTALLING SIDE RAILS (Continued)

**NOTE:** Images below illustrate clamping options. **Option A** depicts standard clamping orientation lower on the side rail. **Option B** depicts alternate clamping orientation with half of clamp assembly rotated 180° to provide better grip at top of side rail.

D. Verify side rail is level. If side rail is not level, perform one of the following:

**If side rail tilts up:** loosen and lower clamp, engage teeth and then retighten clamp.

**If side rail tilts down:** loosen and raise clamp, engage teeth and then retighten clamp.

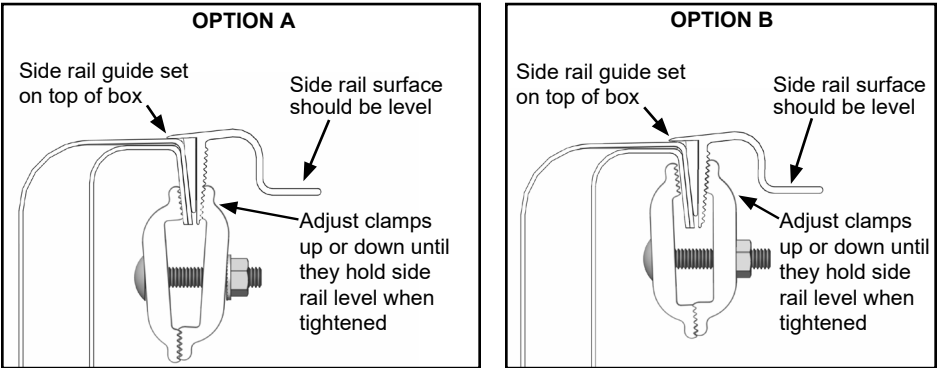


E. With side rail guide set on top of box, install second clamp on side rail 1/3<sup>rd</sup> from front of box. Repeat clamping procedure.

F. With side rail guide set one top of box, install third clamp 2/3<sup>ds</sup> from front of box. Repeat clamping procedure.

G. At rear of box with side rail guide set on top of box, install rear clamp as close to tailgate as possible. Repeat clamping procedure.

**IMPORTANT: Ensure all clamp teeth engage side rail grooves.**

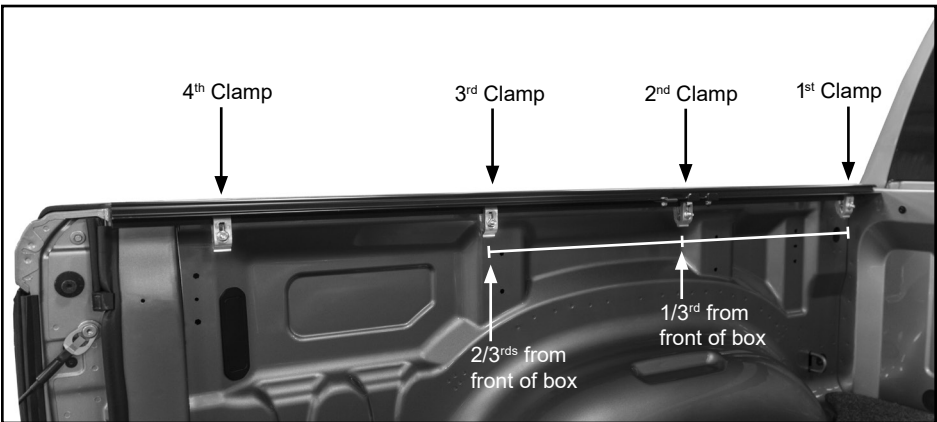

**NOTE:** For trucks with electric tailgates, typically side rail must be installed slightly higher to eliminate interference.

# 1: INSTALLING SIDE RAILS (Continued)

H. Torque all clamps to 20 ft-lbs.

I. Ensure end of bed cap is clean, wipe rear surface of bed cap with alcohol pad (if needed wash and dry surface first).

**IMPORTANT: Save alcohol pad for later use.**


J. With bulb side up align and adhere seal to end of bed cap, ensuring seal contacts side of bed and side rail. Trim excess seal. Firmly press adhesive along seal.

K. Repeat Step 1 to install side rail on opposite side.

## MIDGATE ONLY

A. At front of box, wipe vertical surface of bed cap with alcohol pad (if needed wash and dry surface first). Cut bulb and wiper seal to 1-1/4". With bulb side up, align and adhere seal adhesive flush with bed cap, ensuring seal contacts cab fairing and side rail. Firmly press adhesive along seal.


B. Repeat for opposite side.

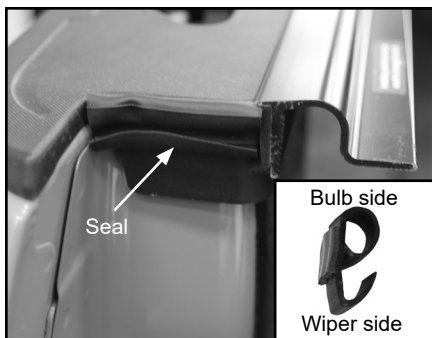


## 2: INSTALLING COVER

A. At front of box, carefully place header panel on side rails.

B. Hold cover's rear edge 1" above side rails and slide forward, then lower support bar into retainment brackets.

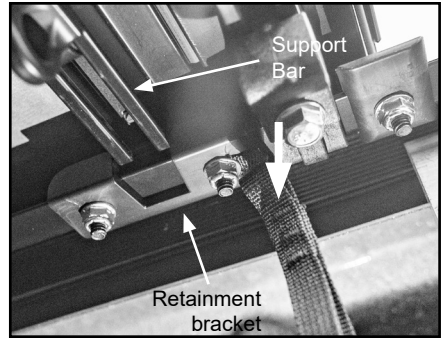

C. Ensure support bar is in retainment bracket and swing latch is underneath catch on both sides.

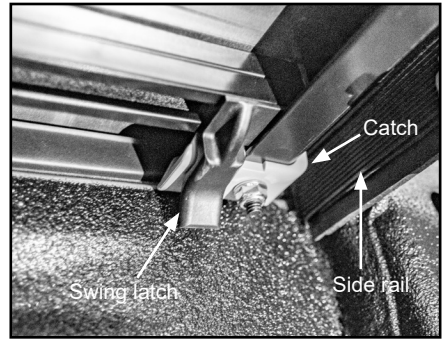


D. With cover in horizontal position, center on side rails, then slide tabs fully under side rails and torque to 20 ft-lbs.

E. Secure safety strap to cover.

F. Close cover to ensure tailgate closes properly.

**IMPORTANT: Always ensure hooks and latches fully engage side rails.**

**IMPORTANT: Always ensure safety straps are attached to cover and side rails.**


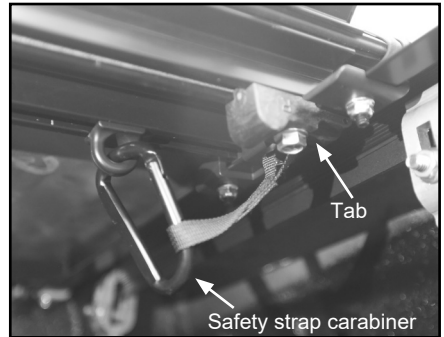


## 2: INSTALLING COVER (Continued)

G. Ensure bolts are clean, then wipe with alcohol pad (if needed wash and dry surface first).

**IMPORTANT: Save alcohol pad for later use.**


H. Cut flat seal in half, then adhere one half of flat seal to each pivot link bolt.

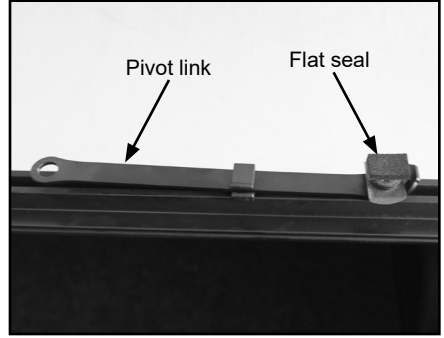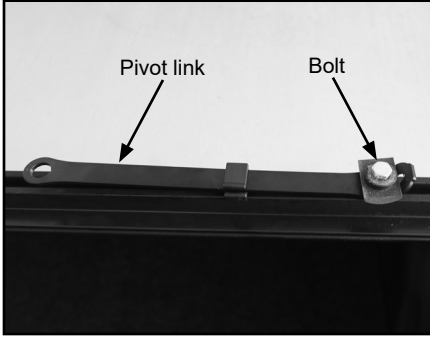

I. Carefully tilt cover into vertical position.

**NOTE:** Use caution if resting cover on cab during install.


J. Swing pivot links out from clips and attach anchors.

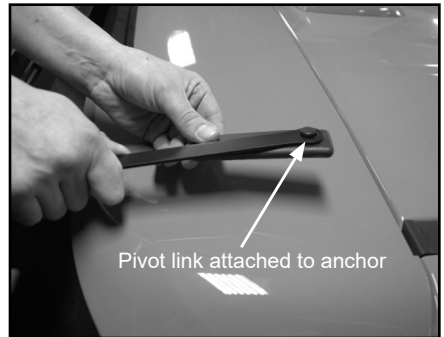

K. With anchor's post away from cover, test placement on top of cab in flat area between ribs. Ensure pivot link is flat against anchor's post, then mark location. Repeat for opposite side.

**IMPORTANT: Ensure minimum 1" space between cover and closest point on cab.**

**NOTE:** Improper placement of anchors will require ordering replacements.

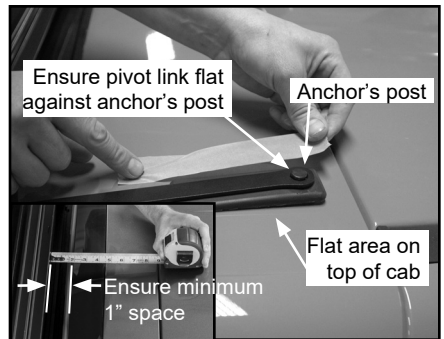

## 2: INSTALLING COVER (Continued)

L. Release pivot link from anchor and secure in clip on each side.

**▲ CAUTION: Air and surface temperatures must be above 60° F for proper adhesion.**

M. Clean marked locations with alcohol pad.



N. Shake primer, squeeze at black dot to start liquid flow, then prime locations and allow to dry.

**NOTE:** Refer to primer manufacturers website for dry time.

**▲ CAUTION: Strong magnetic pull may cause improper placement.**

O. Peel adhesive liner from anchors and adhere to marked locations. Apply pressure for 10 seconds, then close cover.

**NOTE:** After installation, cover should remain in closed position for at least 48 hours. During this time period, anchors bond to cab and cover typically conforms to truck box.

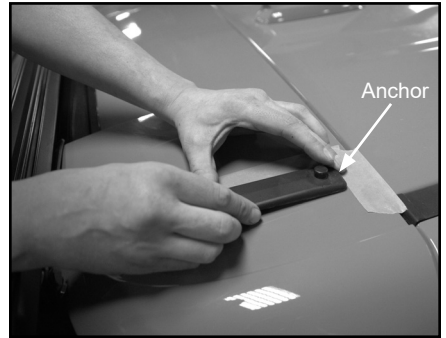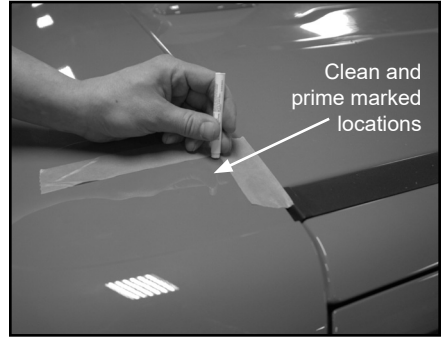



## 3: INSTALLING MIDGATE SEAL

**IF MIDGATE IS NOT PRESENT, SKIP THIS STEP**

A. Ensure front corners of cover seal are clean, then wipe with alcohol pad (if needed wash and dry surface first).

B. Cut bulb and wiper seal to fill gap at midgate edge. With bulb side up align and adhere seal to front cover seal ensuring seal fills gap.

C. Repeat for opposite side.

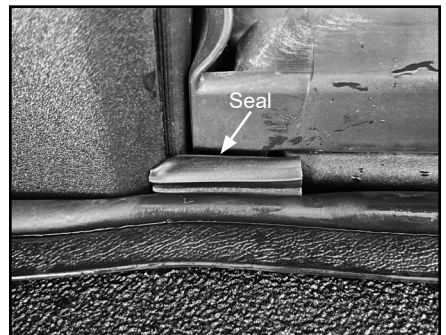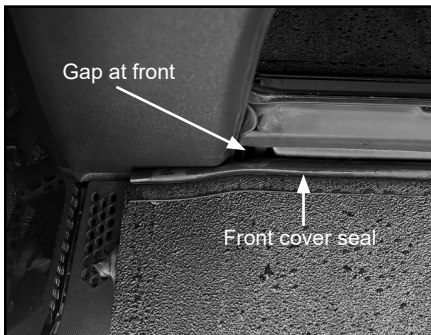

# TROUBLESHOOTING

## PROBLEM

## SOLUTION

Top of tailgate hits cover when attempting to close.

Verify side rail guide is set on top of box. Side rails are not level or set too low at rear of cover, raise rails at rear of box until cover no longer interferes with tailgate operation (see Step 1).

Gap between cover and truck box or tailgate.

Verify side rail guide is set on top of box. Side rails are not level or set too high (see Step 1).

Seal on edge of cover is not sealing tight with top of side rail and truck box.

Verify side rail guide is set on top of box. Check side rails for height and level (see Step 1).

Latch doesn't engage.

Check side rails for height and level (see Step 1). Inspect latches for jammed or broken parts.

Cover is not parallel with side rails.

With cover installed on box, loosen hardware on both retainment brackets with 7/16" wrench (DO NOT REMOVE HARDWARE). Unfold cover to closed position and square up with box. Carefully fold cover back to open position and retighten retainment brackets hardware.

# OPENING FOLDING COVER

**IMPORTANT:** To avoid damage or misalignment of hinge points, open cover in a smooth, fluid manner. Avoid dropping or slamming cover.

**IMPORTANT:** Remove debris or snow from hinges before opening cover.

A. Open tailgate, pull release latch.



B. Fold panels toward the cab.



C. Release additional latch and carefully tilt cover forward.

D. Secure pivot link to anchor on each side.



# CLOSING FOLDING COVER



**IMPORTANT:** To avoid damage or misalignment of hinge points, close cover in a smooth, fluid manner. Avoid dropping or slamming cover.

**IMPORTANT:** Remove debris or snow from hinges before closing cover.

A. Open tailgate. Release pivot link and lower onto side rails.

**TIP:** For easier removal of pivot link, push down on anchor's post with thumb.


B. Always ensure hooks and latches fully engage side rails. Close tailgate.

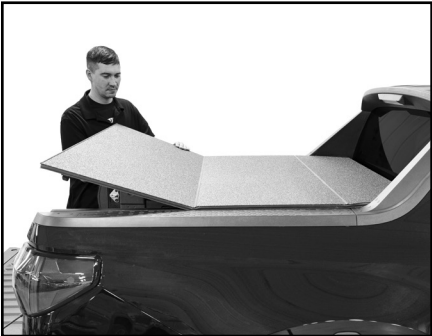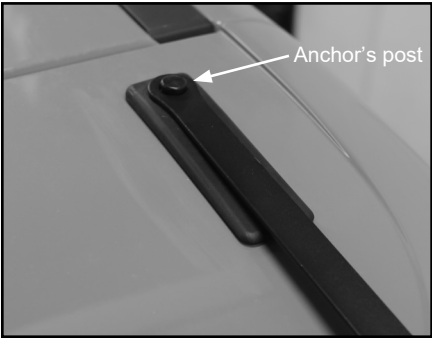

# ALWAYS PROPERLY SECURE COVER

**⚠ WARNING:** Failure to execute these steps may result in severe damage and will void your warranty.

1. Cover hooks engaged underneath rail catches.
2. Safety straps attached to safety brackets.
3. Tabs engaged under side rails and properly torqued.
4. Pivot links secured to anchors without interference.

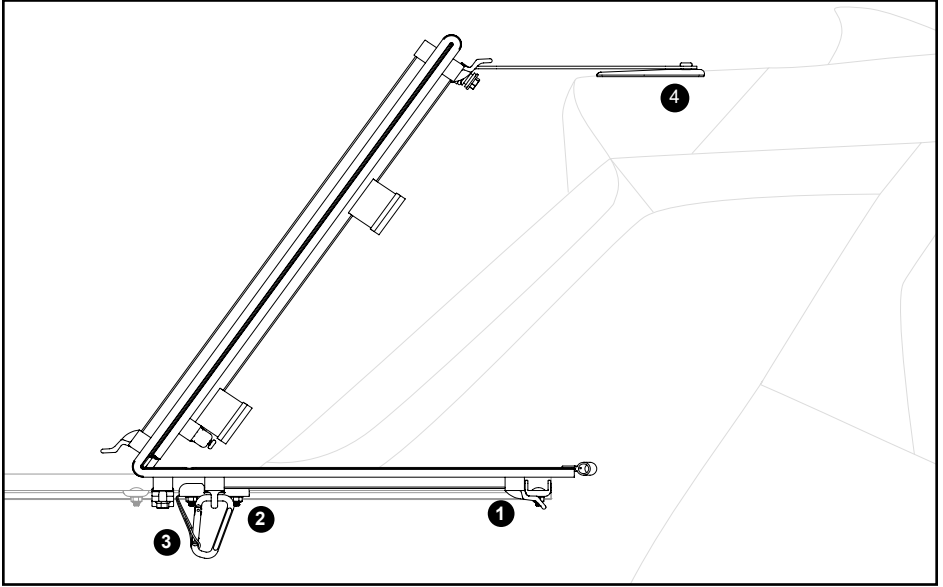

# SAFETY INFORMATION

- Always ensure hooks and latches fully engage side rails.
- Ensure safety straps are attached to cover when cover is installed.
- Ensure anchors are clear, free of interference.
- Never rest cover against cab after installation.
- Do not tow vehicle backward with cover on your truck.
- Do not cover cargo that is higher than the cover.
- Do not place object(s) on or against the cover or its framework at any time.
- Always secure cargo to ensure it does not damage cover or framework.
- Remove debris, snow or ice from cover and hinges before opening or closing cover.
- Do not use the cover's framework to tie down cargo.
- Never stand, sit or ride on the cover or allow others to do so.
- Cover does not eliminate moisture and dust from entering the truck box. Special wrappings or packaging of the cargo may be necessary.
- Due to poor ventilation, if you allow a pet/animal in the box, leave cover open. Do not allow people or animals to occupy box with the cover closed.
- Avoid excessive speeds and high winds when cover is in vertical position.
- Do not clean cover with a pressure washer.
- Keep cover completely closed or in approved vertical position. Do not drive with only the rear panel open.
- Before entering low clearance areas, check height restrictions to ensure safe entry.
- Keep cover closed when going through automatic car washes.
- Keep hands and fingers away from all pinch points.
- Never use latch cord to lift or fold cover.
- Use caution when operating cover in windy conditions.

# TIPS FOR A LONGER LASTING COVER

- Keep cover closed when not in use.
- Avoid storing cover in its horizontal or vertical position for long periods of time.
- Avoid dropping or slamming cover into closed position.
- Always remove foreign substances from cover.
- Ensure cover is properly latched while traveling and before entering automatic drive-through car washes.
- When cleaning, use mild liquid soap and water. Periodically treat cover and hinges with our COVER CARE® Cleaners and UV protectant. Never clean with petroleum or citrus based products. Petroleum based products may dry out and damage cover seal.


# INSPECTION AND MAINTENANCE

The operator can perform most of inspection and maintenance. It may be necessary to review the installation and operating instructions.

- Periodically check and retighten safety strap hardware. If safety straps are damaged, replace with new hardware.
- Periodically check and retighten clamps as needed.
- Periodically check latch cords to ensure latches fully engage side rails.
- Periodically inspect cover assembly and the condition of all parts. Check for loose bolts and parts, tighten if needed. Test the operation to ensure parts are functioning properly and cover is in top operational condition.
- If latches have been damaged, replace with new ones.
- Periodically ensure anchors are clear, free of interference. If anchors have been damaged, replace with new ones.

**NOTE:** Inspection and maintenance should also be performed anytime a malfunction is observed or suspected. If you need assistance inspecting or servicing your cover, or if you want to order a replacement part, call the customer service number on the back page. Always use original equipment replacement parts for your cover.

Serial Number can be found under real panel on driver side.

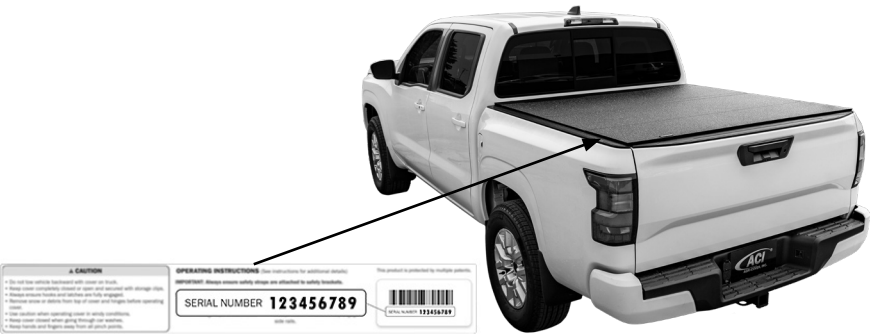

# MANUFACTURER'S LIMITED WARRANTY

Agri-Cover, Inc. extends the following three (3) year Limited Warranty for the LOMAX® STANCE™ Hard Cover:

Agri-Cover, Inc. warrants a period of three (3) years from the date of manufacture that its LOMAX® STANCE™ Hard Cover is free from defects in workmanship under normal use for the truck model it was intended for. This Limited Warranty does not cover any damage due to accident, abuse, misuse, alteration, neglect, improper installation, or ordinary wear and tear.

Agri-Cover, Inc.'s sole obligation under this Limited Warranty is limited to the repair or replacement at its option, of defective parts only. No labor or service allowance is given or implied. IN NO EVENT SHALL AGRI-COVER, INC. BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES. AGRI-COVER, INC. EXPRESSLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY, AND THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE LIMITED WARRANTY DESCRIPTION CONTAINED HEREIN.

For warranty, have serial number ready and fill out the warranty claim form at [agricover.com/warrantyclaim](http://agricover.com/warrantyclaim) or call Customer Service Department at 844-566-2987 to determine if only a replacement part is needed or if the cover needs to be returned for inspection and repair. Goods to be returned must have a pre-authorized RA # (Return Authorization Number) - obtained by calling the number above. Mark the number on the package and ship it freight prepaid to address below. Agri-Cover, Inc. will pay freight to return goods to sender.

This Limited Warranty gives you specific legal rights and you may have other rights, which vary, from state to state.

For replacement parts shop at [lomaxparts.com](http://lomaxparts.com) or call Customer Service at 844-566-2987.



Agri-Cover, Inc.  
Customer Service Dept  
3000 Hwy 281 SE  
Jamestown, ND 58401  
Phone: 844-566-2987

**Hours: 8:00 am - 5:00 pm CST Monday through Friday, except Holidays**