

ROLL UP TRUCK BOX COVER SPECIAL SIDE RAIL AND SEAL INSTRUCTIONS



2005-ON NISSAN FRONTIER

Read and follow these special instructions along with the standard instructions carefully before installing or using this cover.

NOTICE TO INSTALLER: Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these special instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read special instructions. Save these special instructions for future reference.

NOTICE TO CONSUMER/INSTALLER:

1. These instructions supersede the side rail installation step found in the standard instructions. After side rails are installed, resume standard instructions.
2. Some trucks may have Utili-Track with a sliding bed extender. If needed, adapter kit part number 40575 is available to resize bed extender to fit between cover rails.

PREPARATION

TOOLS NEEDED


- (1) 1/2" Wrench
- (1) Foot-pound torque wrench with 1/2" socket
- (1) Protective eyewear

▲ CAUTION: Over torquing hardware may damage components. Do not use impact tools.


NOTE: For best adhesion, ensure air and surface temperatures are above 60° F.

1. SIDE RAIL INSTALLATION

A. Clean surface where seal adheres. Peel off paper backing. Adhere seal flush with top of bulkhead on inside of front corner as illustrated.

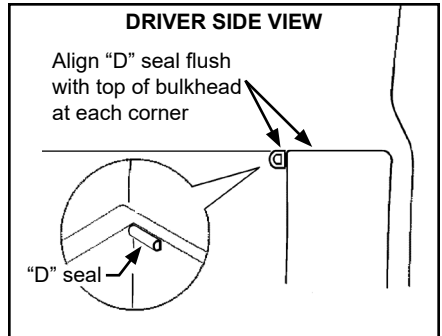

B. Position front of side rail 1/4" away from front of box.

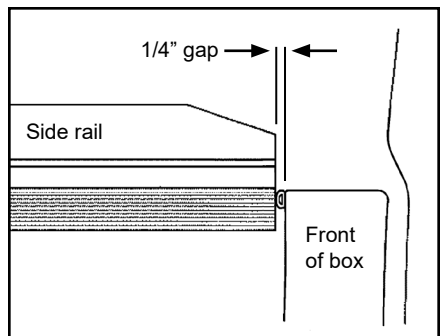


2. CLAMP INSTALLATION

A. Loosen clamps and insert above Utili-Track System. Slide clamps into position along length of box. Use standard instructions for clamp locations and height and position of side rail.

B. Repeat Steps 1 and 2 to install side rail on opposite side.

C. Torque all clamps to 20 ft-lbs.

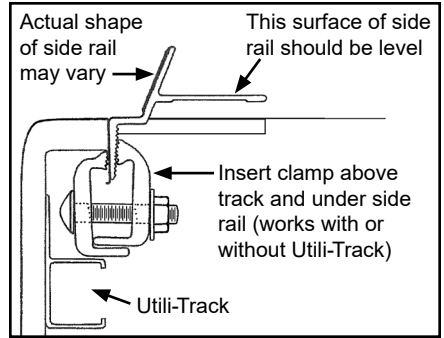

3. ELEMENT SEAL™ GASKET OPTION

For covers that include a front ELEMENT SEAL™ Gasket, use this section in place of standard instructions.

NOTE: Omit this step for covers without ELEMENT SEAL™ Gasket.

A. Install seal to top of bulkhead as illustrated.

B. **For remaining cover installation, refer to standard instructions.**

