
Plow Mount Installation Instructions kit# 30570

Front Mount Parts

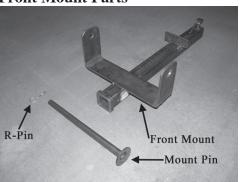

No Tools Needed

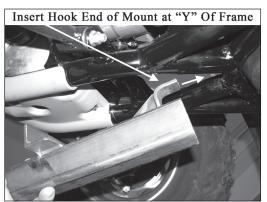


Illustration 1



Illustration 2

Step 1. - Insert hook at rear of mount into "Y" of frame under center of ATV and push to engage hook (Illustration 1). With rear of mount inserted, lift front of mount up tight against frame and push firmly while lifting to ensure hook is fully engaging ATV frame (Illustration 2).

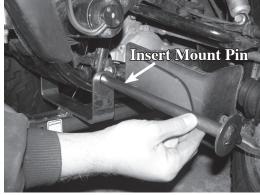


Illustration 3



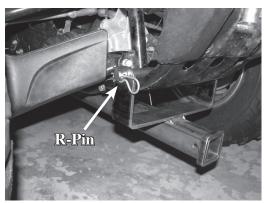


Illustration 4

Step 2. - Turn ATV wheels to side and with mount held in place, insert mount pin in hole (Illustration 3) and slide all the way through hole on opposite side. Then at opposite end of pin, insert R-Pin to secure mount (Illustration 4). Installation is complete.

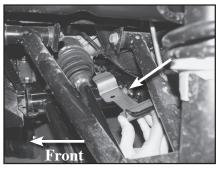


a) From under machine, insert long bolts with flat washer up through hole in rear of mount plate and into hole in rear bracket above.

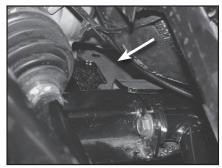


b) Place flat washer over bolt and turn lock nut finger tight on both bolts.



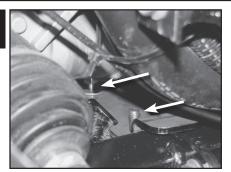

a) At front, tighten both bolts snug tight—while holding nut from top side (hidden from view).

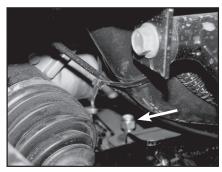


b) At rear, turn both bolts snug tight—while holding nut from top side.

c) Now tighten both front bolts and both rear bolts Then torque each bolt to 31 ft. lbs.





a) Insert prong of receiver into notch under rear of mount plate.

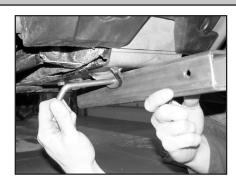

b) Lift front of receiver up and insert hitch pin through holes on mount plate and through receiver to opposite side.



 c) Insert hitch pin clip. Installation is complete. Periodically check torque on bolts and retighten if needed.