

GRAIN CART SQUARE BOW AND RIDGE STRAP ASSEMBLY INSTRUCTIONS

NOTICE TO INSTALLER: Read instructions before installing or using bows and ridge straps. Improvements may be made without prior notice. Always handle components with care. If you have problems or questions call customer service. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read instructions. Save these instructions for future reference.

NOTE: Actual parts may vary from illustrations.




Questions? 800-233-4655
agricover.com

PREPARATION

TOOLS NEEDED

- Electric drill and 5/16" drill bit
- Marking pencil
- Tape measure
- Protective eyewear

INSTALLATION DIAGRAM

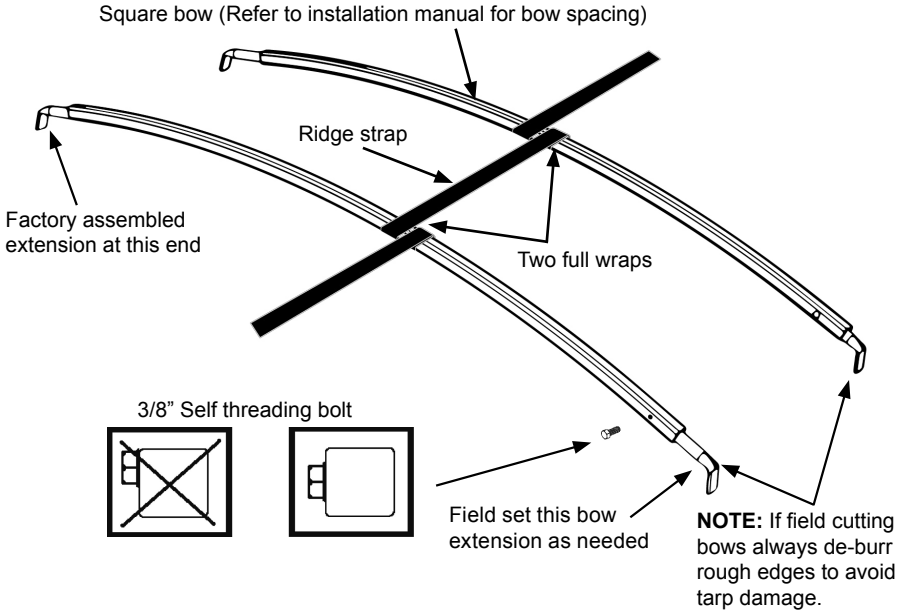


STEP 1: BOW AND BOW EXTENSION

A. Insert bow extension into open end of bow (bows come with 1 extension factory installed). Mount bow pockets to box.

NOTE: Refer to installation manual (available at agricover.com) for spacing and mounting bow pockets.

B. Place extension with bow into bow pockets. Extension may need to be adjusted in or out to match span of box.

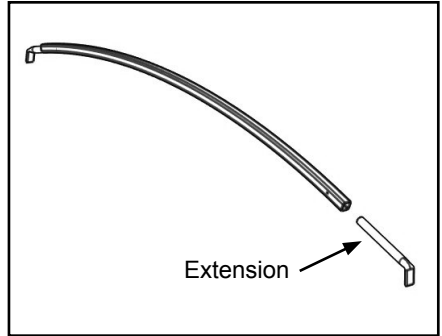

C. Raise bow up to proper height (1-1/2" above end cap vertical to box) and hold. Drill 5/16" hole through one side of bow (ensure location will not cause bolt head to rub on tarp) and bow extension. Turn a 3/8" self threading bolt into holes and tighten.

STEP 2: RIDGE STRAP INSTALLATION

A. Attach hook end of ridge strap to end cap.

B. At each bow, wrap ridge strap around bow 2 full wraps.

C. Attach ratchet end to opposite end cap.

D. Position bows to lean toward hook end of strap (opposite ratchet end).

E. Draw ridge strap snug tight with ratchet (as strap is tightened, it will pull bows toward ratchet).

F. Recheck bows, if any are leaning, push bow until vertically upright with box.

Tip: For new installs, pre-drill screw hole if necessary.

