



2014-18 CHEVY/GMC 1500, 2019 LD/LIMITED & 2015-19 2500/3500 INSTALLATION INSTRUCTIONS

Thank you for purchasing this set of two ROCKSTAR™ Splash Guard Mud Flaps. Agri-Cover, Inc. proudly manufactured these mud flaps using superior quality materials and workmanship. With proper care, your mud flaps will provide years of service and enjoyment.

NOTICE TO INSTALLER: Even if familiar with mud flaps, read instructions prior to installation as improvements may be made without notice. Always handle components with care. If you have questions or problems, call customer service. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read safety and maintenance section of these instructions. Save these instructions for future reference.

FOR YOUR RECORDS

DATE PURCHASED: _____

WHERE PURCHASED: _____



Questions? 888-568-3709
agricover.com

PREPARATION

Unpack set of two mud flaps with components. Clean vehicle wheel wells. For additional installation assistance, go to rockstarmudflaps.com for install video.

MUD FLAP COMPONENTS

- (2) Mud flaps
- (2) #10 x 1-1/4" Self-drilling hex screws
- (2) #10 x 1/2" Washers
- (4) 7 mm Hex screws
- (1) Rear wheel well drill template (GMC only)
- (4) 10-24 x 1-1/2" Truss head screws (GMC only)
- (4) #10 x 1/2" Fender washers
- (4) 10-24 Serrated flange nuts

TOOLS NEEDED


- Angled drill/screwdriver
- Ratchet
- T15 Torx bit, 5/16" socket and 7 mm socket
- Protective eyewear
- Masking tape
- Drill with 1/4" bit

NOTE: These instructions describe installing mud flaps on Chevrolet and GMC trucks, be aware, the front mud flap installation process is the same across brands while the rear is different. Hardware components and appearance may vary.

⚠ CAUTION: These instructions involve drilling holes. Ensure all mounting hole sides are free of wiring, mechanical parts and are structurally sound.

PARTS & FASTENER MOUNTING DIAGRAM

NOTE: Mud flaps may be purchased with or without pre-installed trim plates (not pictured). Trim plates are also available for purchase as an accessory.

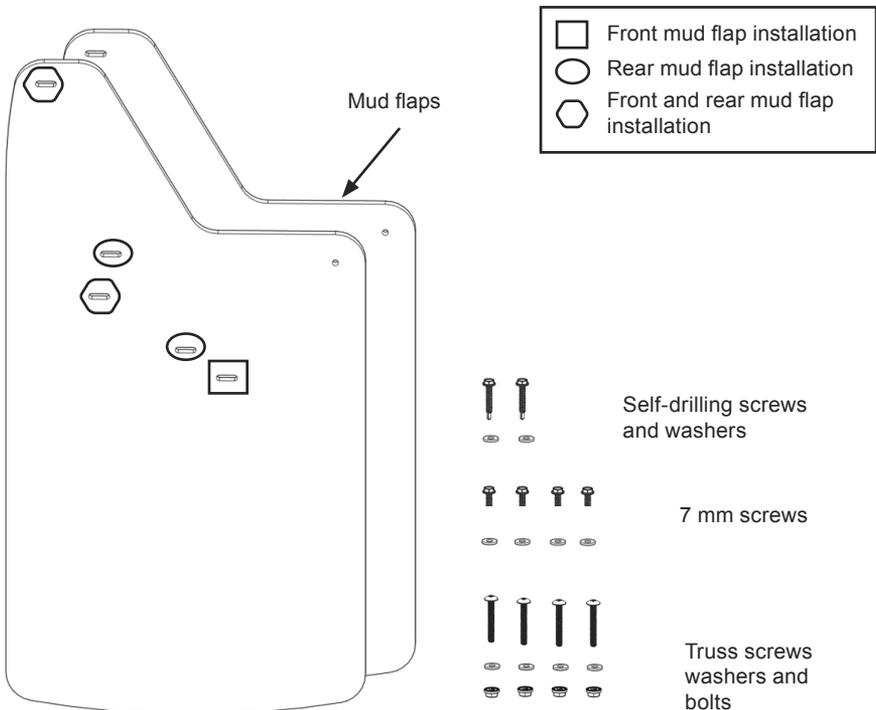

1. PREPARING FOR INSTALLATION

A. Park on level ground with firm surface.


B. Check free space behind front tires when fully turned. Ensure enough space and clearance to accommodate 5/16" thick mud flaps.



NOTE: If trim plates are pre-installed, face them toward tailgate during installation.

C. To install mud flaps, perform one of the following:


- See Step 2 for front wheel well installation
- See Step 3 (page 5) for Chevy rear wheel well installation
- See Step 4 (page 6) for GMC rear wheel well installation

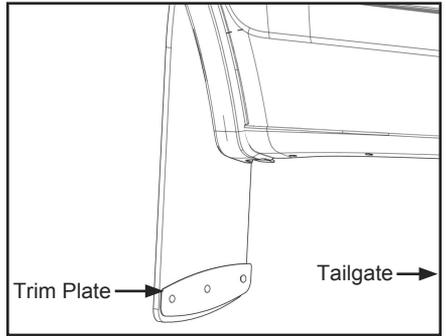

2. INSTALLING MUD FLAPS TO FRONT


NOTE: Front mud flap installation uses 3 holes per mud flap, see PARTS DIAGRAM (page 2) for locations.

A. Use T15 Torx bit to remove lower factory screws indicated in adjacent image.

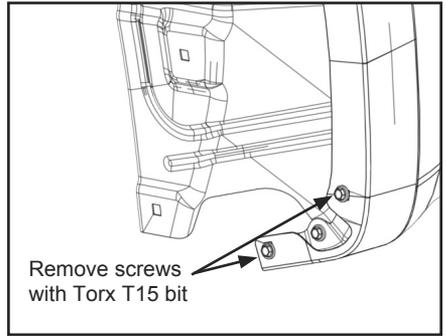

B. Install mud flaps with (2) 7 mm hex screws through 3rd and 5th slotted holes into newly free holes in wheel well. Leave screws loose for now.


C. Level mud flap while adjusting placement to obtain best fit then tighten screws to hold in place.

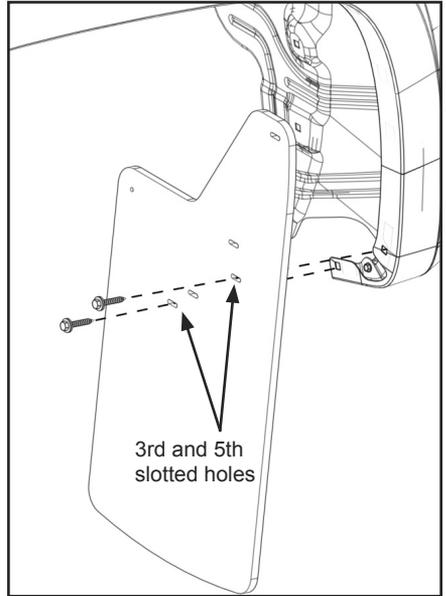

2. INSTALLING MUD FLAPS TO FRONT (Continued)

D. Verify mud flap is level then install (1) 10 x 1-1/4" self-drilling hex screw with washer at upper mounting hole. Ensure screws contact metal backing as much as possible

E. Repeat for remaining front mud flap.

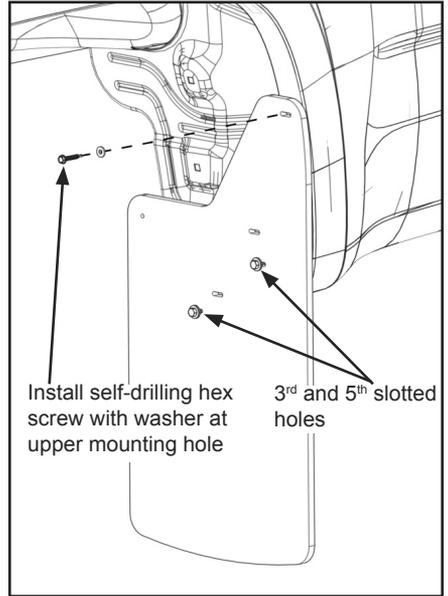


3. CHEVY REAR MUD FLAP INSTALLATION

NOTE: Rear mud flap installation uses 3 mounting holes per mud flap, see PARTS DIAGRAM (page 2) for locations.

A. Repeat front installation except attach mud flap with 7 mm screws with washers at 3rd and 4th holes (instead of 3rd and 5th holes).



B. Repeat for remaining rear mud flap.

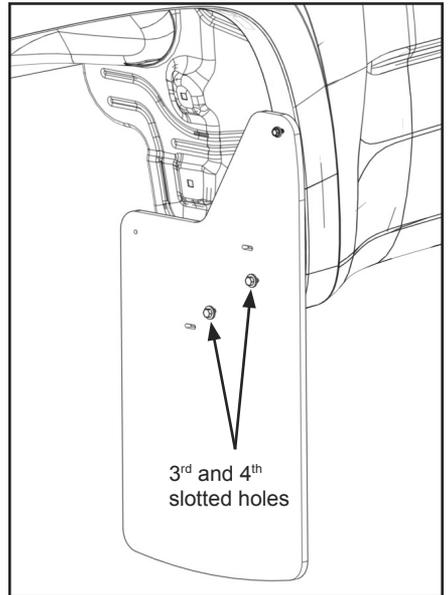

4. GMC REAR MUD FLAP INSTALLATION

NOTE: Rear mud flap installation uses 3 mounting holes per mud flap, see PARTS DIAGRAM (page 2) for locations.


- A. Two templates are supplied on a single sheet of paper. Carefully cut out each template.
- B. Align template with bottom corner of wheel well (behind wheel). Use masking tape to hold in place.
- C. Drill hole in location indicated by template with 1/4" drill bit.
- D. Install mud flaps with (2) 10-24 x 1-1/2" truss head screws and washers through 2nd and 4th slotted holes into newly drilled wheel well holes.
- E. Secure screws with nuts and leave loose for now.
- F. Level mud flap while adjusting placement to obtain best fit then tighten screws to hold in place.

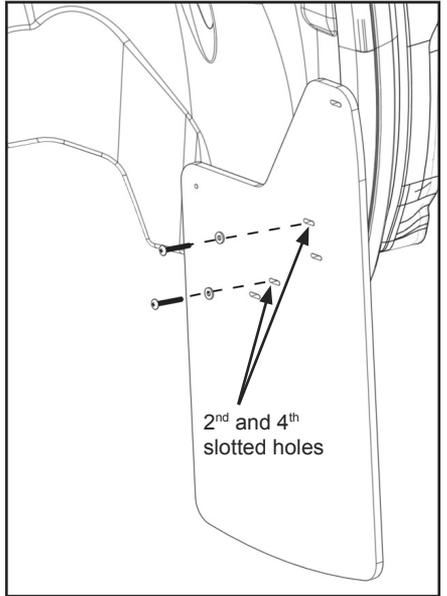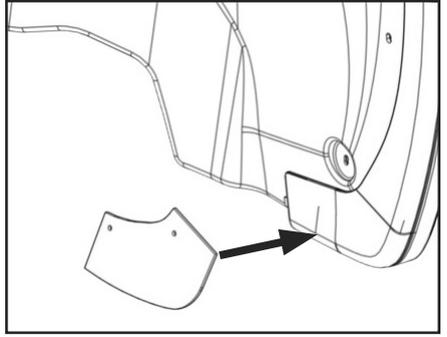

4. GMC REAR MUD FLAP INSTALLATION (Continued)

G. Verify mud flap is level then install (1) 10 x 1-1/4" self-drilling hex screw at upper mounting hole. Ensure screws contact metal backing as much as possible.

H. Repeat for remaining rear mud flap.

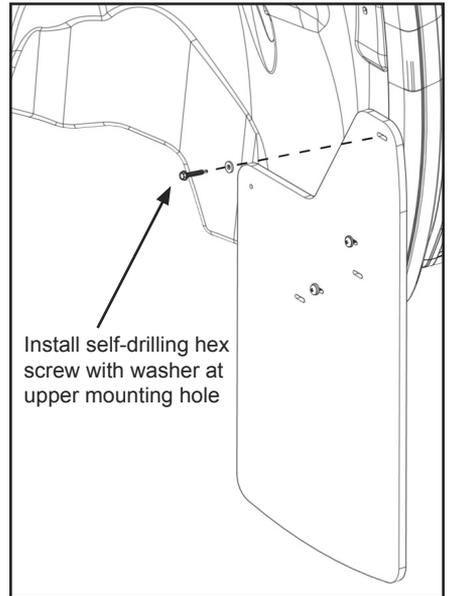

SAFETY AND MAINTENANCE

The operator can perform most of inspection and maintenance. It may be necessary to review the installation instructions.

- Periodically check all screws, washers and nuts, retighten if needed.
- If mud flap has been damaged, replace with new one.

NOTE: Inspection and/or maintenance should be performed anytime a malfunction is observed or suspected. If you need assistance inspecting and/or servicing your mud flaps, call customer service at 888-568-3709. Always use original equipment replacement parts for your mud flaps.

MANUFACTURER'S LIMITED WARRANTY

Agri-Cover, Inc. extends the following (1) year Limited Warranty for the ROCKSTAR™ Splash Guard Mud Flaps:

Agri-Cover, Inc. warrants a period of one (1) year from the date of manufacture that its ROCKSTAR™ Splash Guard Mud Flaps are free from defects in workmanship, under normal use for the truck model it was intended for. This Limited Warranty does not cover any damage due to accident, abuse, misuse, alteration, neglect, improper installation, or ordinary wear and tear.

Agri-Cover, Inc.'s sole obligation under this Limited Warranty is limited to the repair or replacement at its option, of defective parts only. No labor or service allowance is given or implied. IN NO EVENT SHALL AGRI-COVER, INC. BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES. AGRI-COVER, INC. EXPRESSLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY, AND THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE LIMITED WARRANTY DESCRIPTION CONTAINED HEREIN.

For warranty, have serial number ready and fill out the warranty claim form at agricover.com/warrantyclaim or call Customer Service Department at 888-568-3709 to determine if only a replacement part is needed or if the mud flaps needs to be returned for inspection and repair. Goods to be returned must have a pre-authorized RA # (Return Authorization Number) - obtained by calling the number above. Mark the number on the package and ship it freight prepaid to address below. Agri-Cover, Inc. will pay freight to return goods to sender.

This Limited Warranty gives you specific legal rights and you may have other rights, which vary, from state to state.

For replacement parts shop at rockstarmudflaps.com or call Customer Service at 888-568-3709.



Agri-Cover, Inc.
Customer Service Dept
3000 Hwy 281 SE
Jamestown, ND 58401
Phone: 888-568-3709

Hours: 8:00 am - 5:00 pm CST Monday through Friday, except Holidays