


FULL WIDTH TOW FLAP SPECIAL BRACKET INSTRUCTIONS

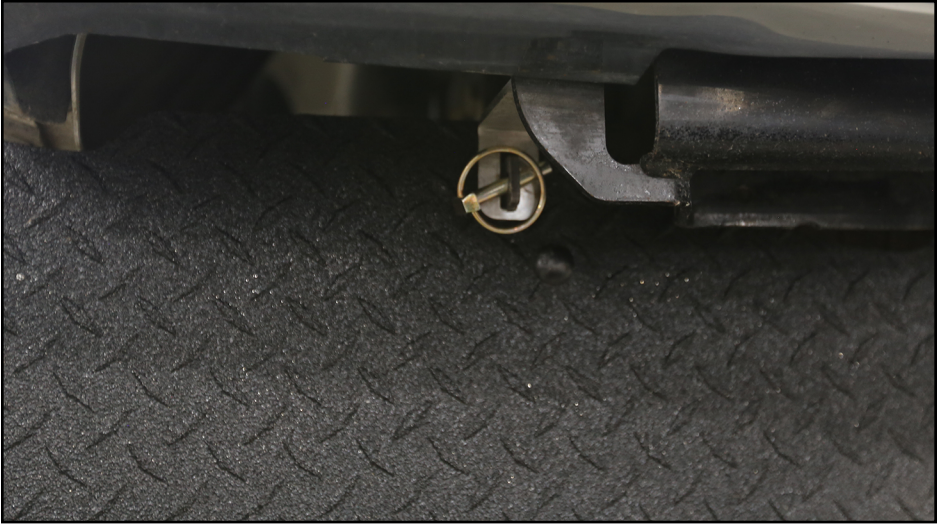

2011-ON FORD SUPER DUTY

Read and follow these special instructions along with the standard instructions carefully before installing or using this tow flap.

NOTICE TO INSTALLER: Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read special instructions. Save these special instructions for future reference.

PREPARATION

TOOLS NEEDED

- Ratchet with T-45 Torx bit
- Ratchet with T-40 Torx bit
- Protective eyewear

NOTE: Size of Torx bit depends on truck year.


▲ CAUTION: Over tightening hardware may damage components or truck.

NOTE: Hardware appearance and components may vary.

1: INSTALLING MOUNTING BRACKETS

A. At rear bumper, remove inner bolt with ratchet and Torx bit.

NOTE: Remove outer bolt for 23-ON models.

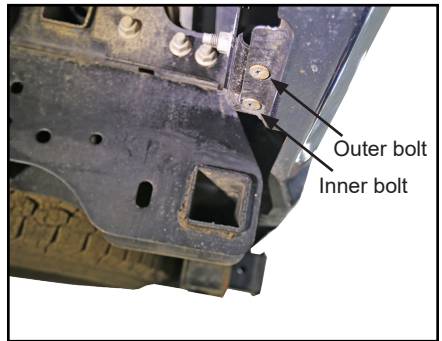


B. Insert bolt through round hole in bracket.

C. Position mounting bracket end with long slot toward front of box and reinsert bolt into bolt hole.

D. Tighten bolt with ratchet with Torx bit until snug, but not completely tight.

NOTE: Bolt will be fully tightened during tow flap installation.

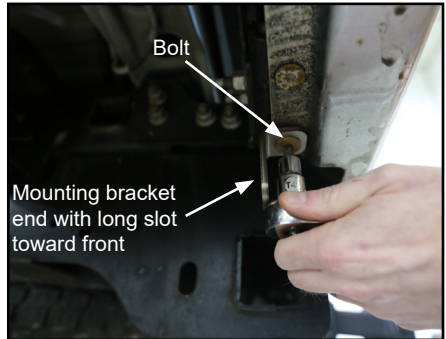

1: INSTALLING MOUNTING BRACKETS (Continued)

E. Repeat Steps 1A-D to install mounting bracket on opposite side.

F. For remaining tow flap installation, refer to standard instructions.

