


FULL WIDTH TOW FLAP SPECIAL BRACKET INSTRUCTIONS

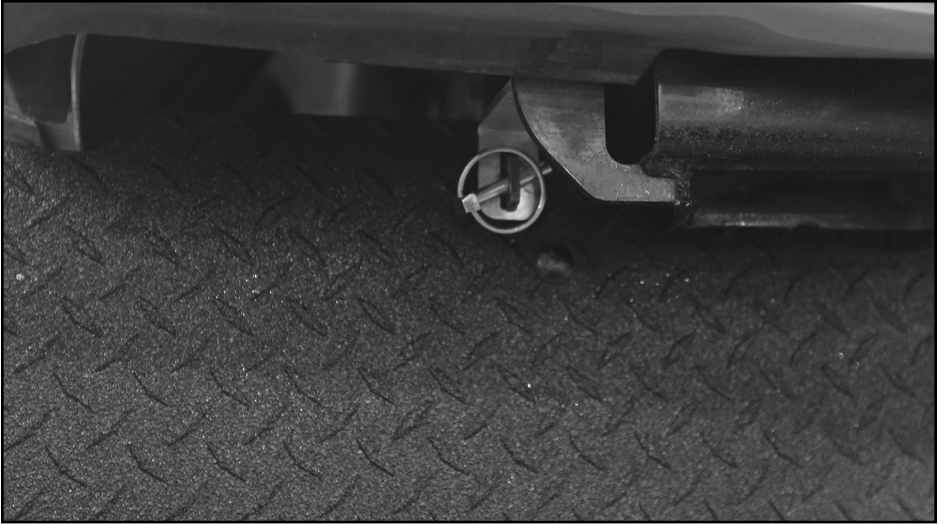

2021-ON FORD F-150 & F-150 TREMOR

Read and follow these special instructions along with the standard instructions carefully before installing or using this tow flap.

NOTICE TO INSTALLER: Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read special instructions. Save these special instructions for future reference.

PREPARATION

TOOLS NEEDED

- Ratchet with T-40 Torx bit and 13 mm socket
- Protective eyewear


▲ CAUTION: Over tightening hardware may damage components or truck.

1: INSTALLING MOUNTING BRACKETS


A. At rear bumper, remove indicated bolt with ratchet and Torx bit.

NOTE: Factory bolts will be replaced by new hardware. Installer should return factory bolts to owner.

B. Place lock washer and flat washer on new bolt. Insert bolt through round hole in mounting bracket.

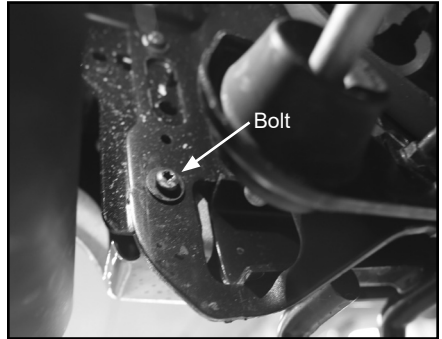

NOTE: Use proper orientation while installing brackets.

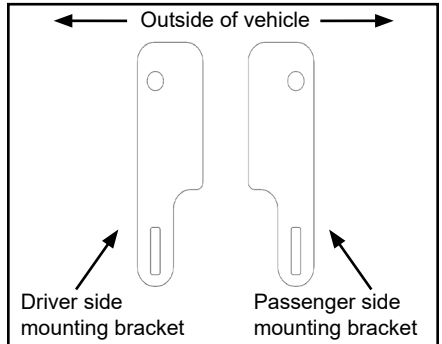

1: INSTALLING MOUNTING BRACKETS (Continued)

C. Align mounting bracket with holes toward outside of truck.

D. Tighten bolt with ratchet and 13 mm socket until snug, but not completely tight.

NOTE: Bolt will be fully tightened during tow flap installation.

E. Repeat Steps 1A-D to install mounting bracket on opposite side.

F. For remaining tow flap installation, refer to standard instructions.

