




# 2004-On Colorado and Canyon Special Clamp Instructions

(All kits No. 224 and 225)

## \*\*NOTE\*\*

The double bolt clamps in this kit function the same as standard clamps shown in the owners manual. Assemble the components as shown at right (2 small clamp sections make up 1 clamp assembly).

Actual shape of side rail may vary

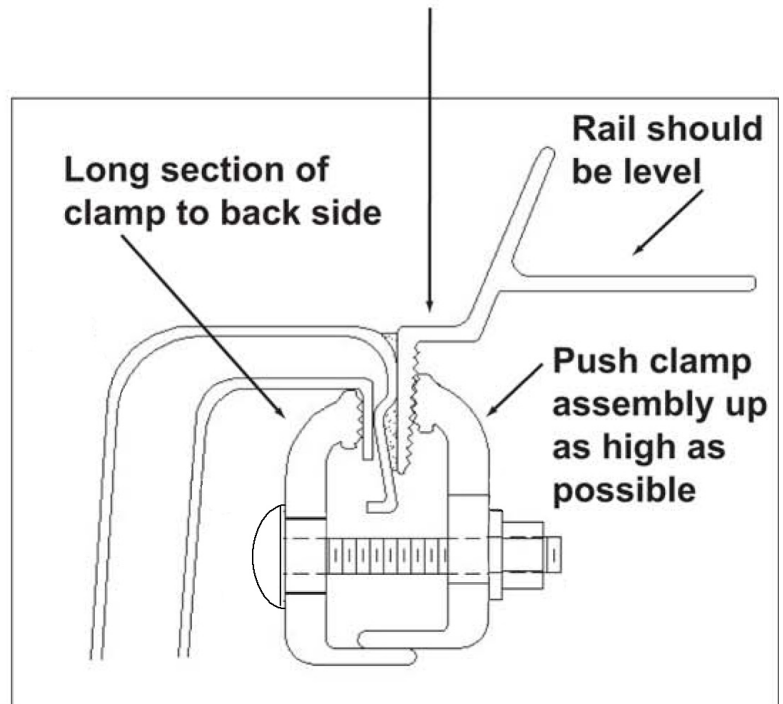


*Illustration 1*

## STEP 1

Install each clamp assembly as shown in *Illustration 1 & 2*. Locate one at the front and one at the rear on each side-rail (use 2 clamp assemblies for each rail).

Tighten with 1/2" wrench.

**\*\*After rails are installed refer to owner's manual for remainder of cover installation.\*\***

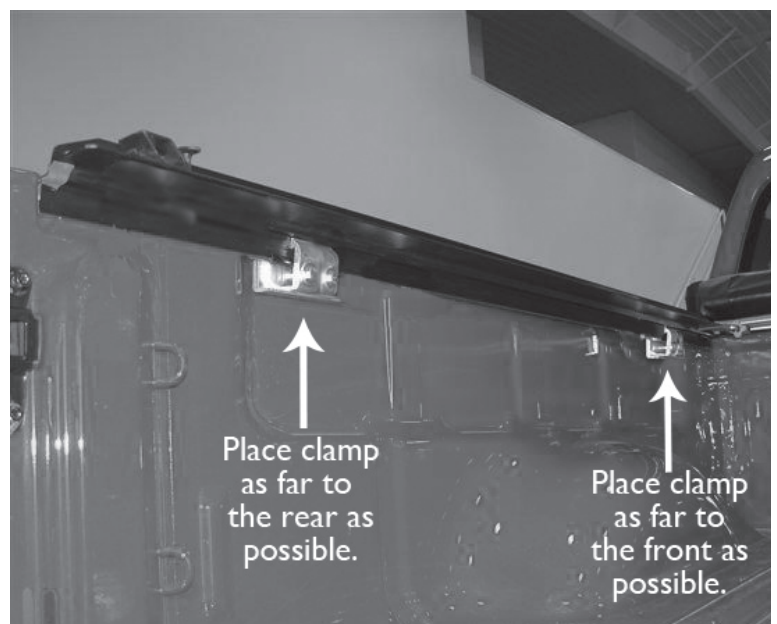

*Illustration 2*