




Plow Mount Installation Instructions kit# 30520

ATV Bombardier/CAN-AM Outlander 500, 650 & 800

Plow Mount Parts

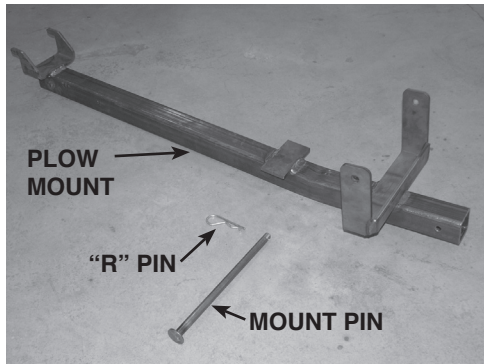


No Tools Needed

STEP 1.




Under ATV frame, engage rear mount hooks (one on each side) to frame of ATV and push toward rear as shown.

STEP 2.

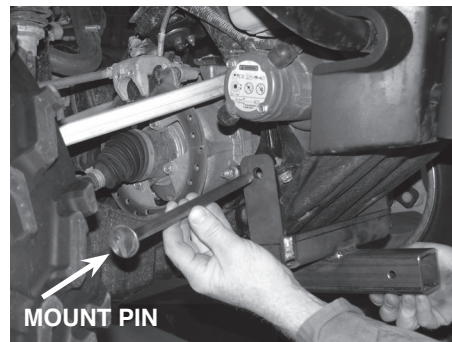

At front, lift mount up against frame. Insert and slide mount pin all the way through other side.

STEP 3.

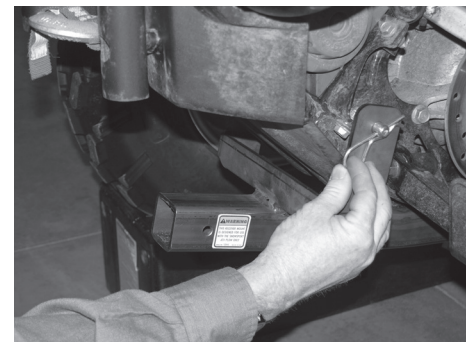

With mount positioned in place as shown, (and mount pin fully inserted) attach R-Pin to secure. Installation is now complete.