



Plow Mount Installation Instructions kit# 40490

Arctic Cat 400 4x4, 500 4x4, & 650 4x4 & 700

Plow Mount Parts

No Tools Needed

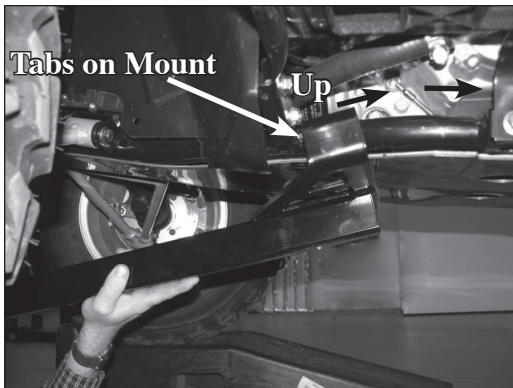
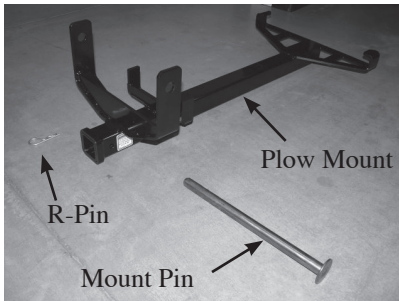


Illustration 1

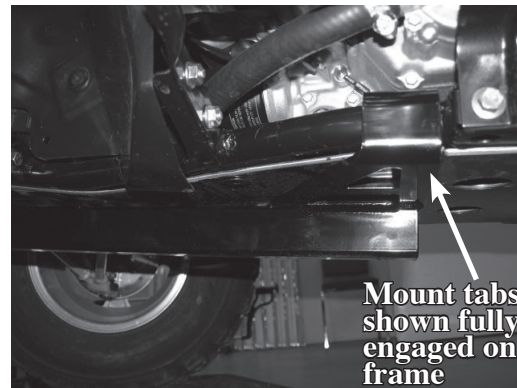


Illustration 2

Step 1. - Insert rear of mount into opening on ATV frame by lifting rear of mount up at an angle (illustration 1) to allow tabs on mount to start engaging ATV frame. Then raise front of mount up and push firmly back until tabs fully engage (illustration 2) frame .

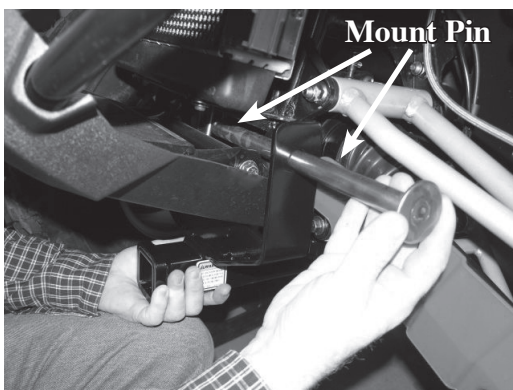


Illustration 3

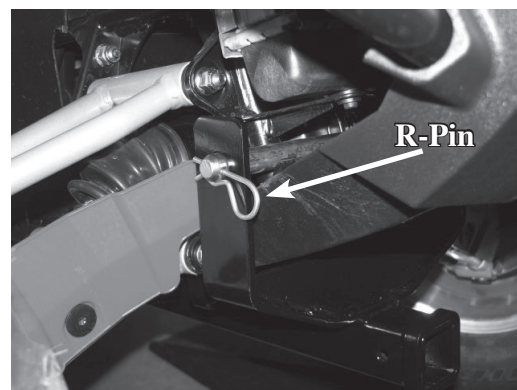


Illustration 4

Step 2. - Turn front wheels toward driver side. Push up on front of mount and hold while inserting mount pin (illustration 3) through hole in mount on near side and continue until pin is through mount hole on far side. Then secure mount pin with R-Pin (illustration 4). Installation is complete.