


Installation Instructions

ATV Plow Mount Kit 40510 (Honda Rubicon 05-07)


Plow Mount Parts

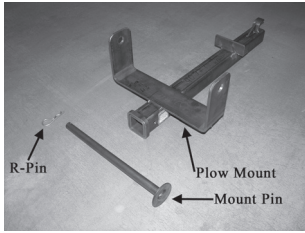


Tools Needed:

- a) nipper cutting tool or dremel
- b) marking pencil
- c) protective eyewear


Insert Hook End of Mount at "Y" Of Frame

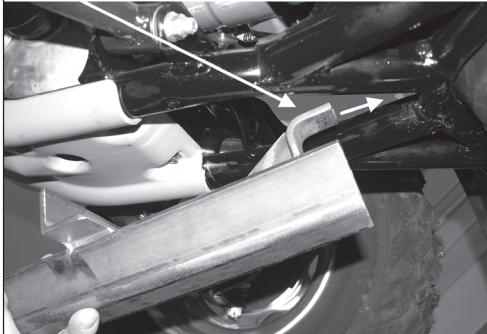


Step 1. Insert hook at rear of mount into "Y" at center of ATV frame and push to engage hook.

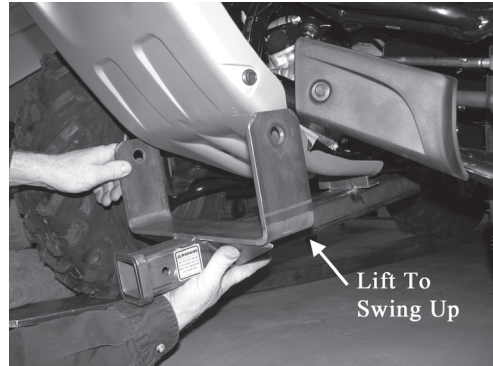


Step 2. With rear of mount inserted, lift front of mount up tight against frame, and push to ensure hook is fully engaging ATV frame

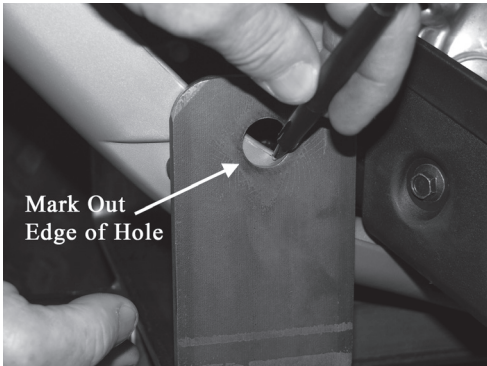


Step 3. With mount held up firmly, use hole to mark for notch cut out of plastic skid plate. Mark both sides.

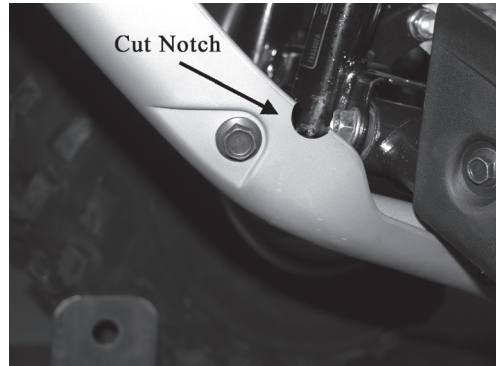

Step 4. Using nipper or dremel, cut notch as shown on both sides of skid plate.

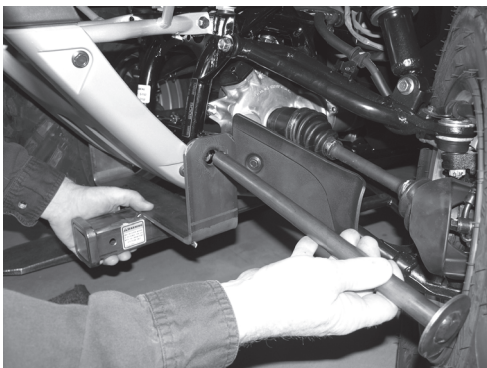

Step 5. Turn ATV wheels to side, and with mount held in place, insert mount pin all the way through.

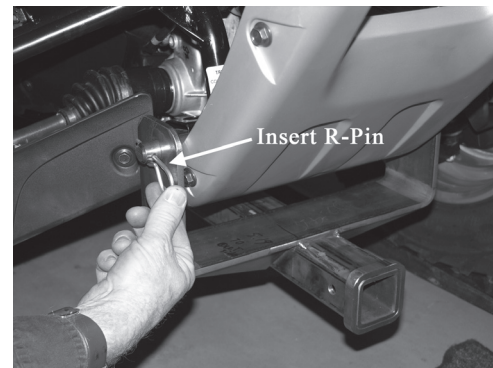

Step 6. With mount pin all the way through opposite side, insert R-pin into small hole of mounting pin.