




Plow Mount Installation Instructions kit# 30500

ATV Polaris Sportsman 700 Twin 4x4 02-07
ATV Polaris Sportsman 800 Twin EFI 05-08
ATV Polaris Sportsman Touring 800 EFI 08-
ATV Polaris Sportsman X2 700 EFI 08-

Plow Mount Parts

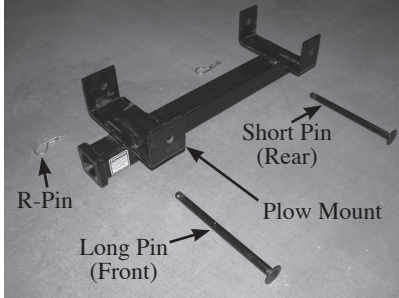

No Tools Needed

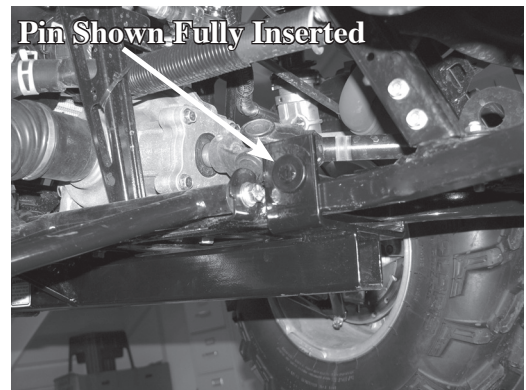
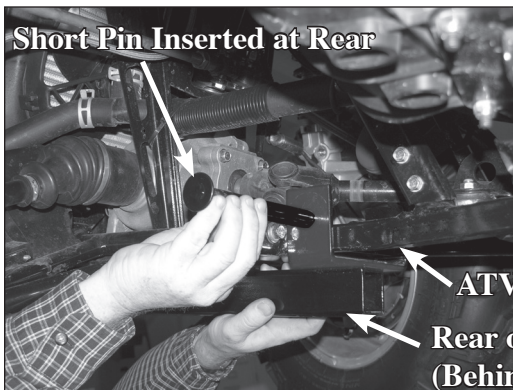


Illustration 1

Illustration 2

Step 1. - Lift front mount up into position under ATV frame and hold in place while inserting short mount pin at rear of receiver (illustration 1). Pin should go through mount hole on near side, slide above frame and through mount hole on far side (illustration 2).

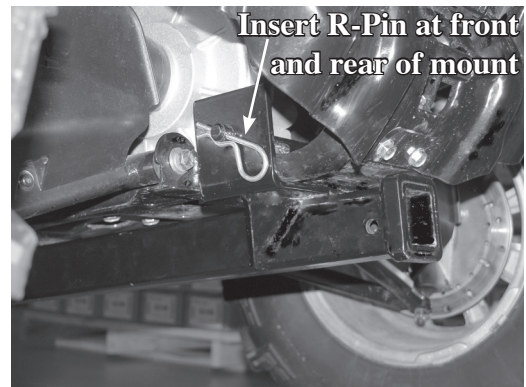


Illustration 3

Illustration 4

Step 2. - Turn front wheels to left. While lifting up at front end of mount, insert long mount pin through near side mount hole (illustration 3) and slide above frame through far side mount hole (illustration 4). Then at opposite end of front pin, insert R-Pin to secure mount (illustration 4). Lastly, go back to rear mount pin and install R-Pin to secure it also. Installation is complete.