





Plow Mount Installation Instructions kit# 40470

UTV John Deere Gator HPX & XUV 2004-09


Tools Needed:

- a) 3/4" or 18mm wrench (2)
- b) flat file
- c) foot pound torque wrench
- d) protective eyewear


Front Mount Parts

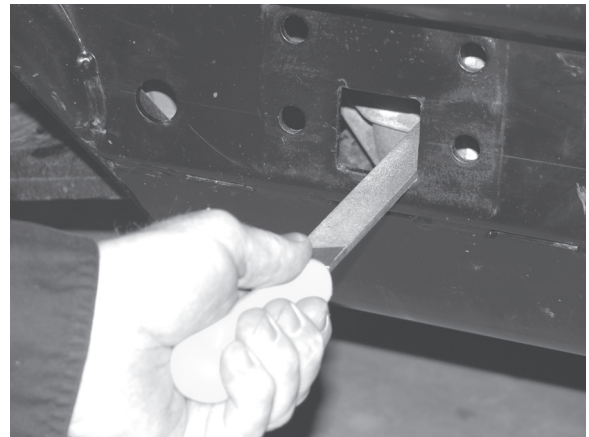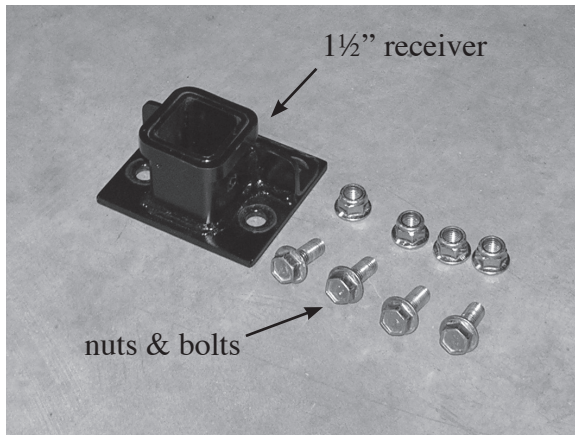

Step 1 - If vehicle is equipped with 1 1/4" receiver, remove and set aside. With flat file, file corner radius square on all four corners of existing opening until new 1 1/2" receiver fits through.

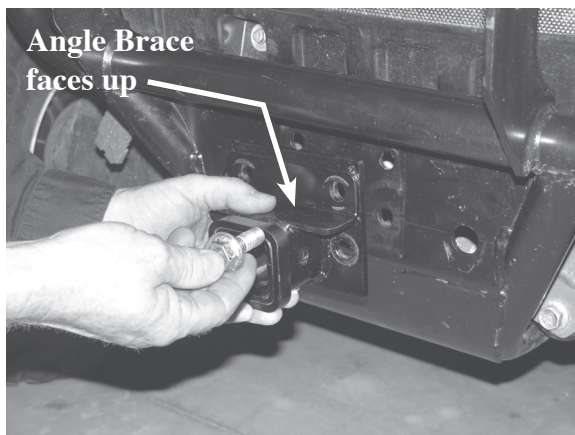

Step 2 - Place new receiver over opening with angle brace facing up (see photo). Insert four bolts from the front. Turn nuts on from backside.

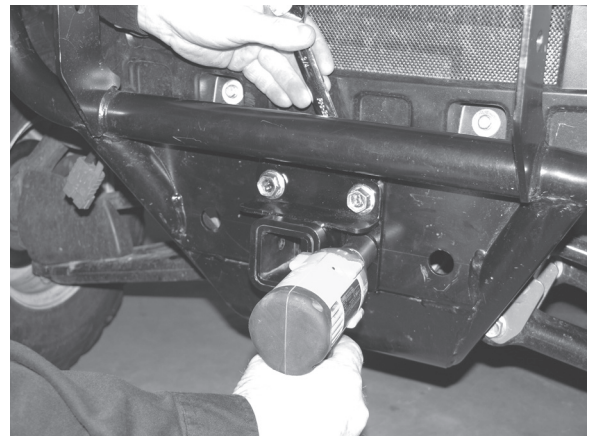

Step 3 - Use wrench to hold nut on back and tighten the four bolts. When done torque all bolts to 75 foot lbs. Check torque periodically and retorque if needed.