


Plow Mount Installation Instructions

Kit #50830

UTV Kawasaki Mule 600

PLOW MOUNT PARTS

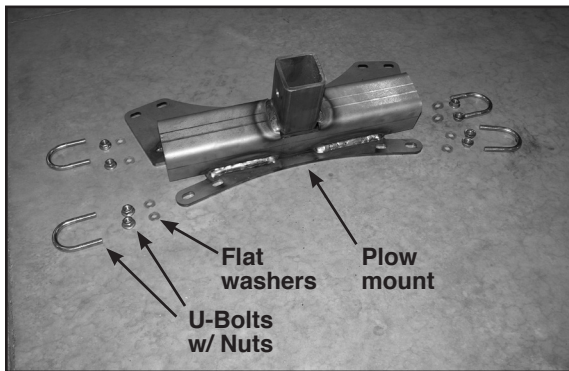

Tools Needed:

- a) Phillips screw driver #2
- b) 1/2 wrench
- c) Ft. lb. torque wrench
- d) Protective eyewear



1. Remove phillips head screws (3 on bottom and 2 on top) from bumper. Set bumper and screws aside.



2. Insert plow mount into frame as shown.




3. Mount should rest on frame with holes in position for U-bolts to clamp to frame.



4. Insert both upper U-bolts, add flat washers and nuts. Turn nuts snug tight. Then insert lower U-bolts, add flat washers and turn nuts snug tight.

Tighten nuts on all 4 U-Bolts

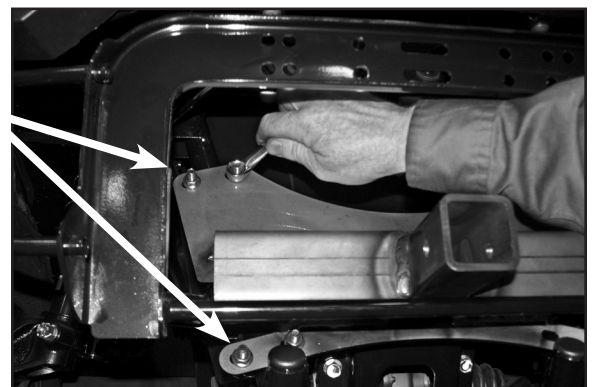

5. Now tighten both nuts evenly on all 4 U-bolts. **Torque bolts to 31 ft. lbs.** Then **replace front bumper.** Periodically, check mount bolts and re-torque if needed.