




Plow Mount Installation Instructions Kit #50830

UTV Kawasaki Mule 600

PLOW MOUNT PARTS

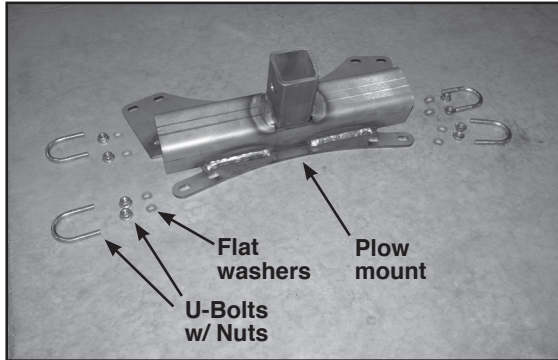


Tools Needed:


- Phillips screw driver #2
- 1/2 wrench
- Ft. lb. torque wrench
- Protective eyewear




- Remove phillips head screws (3 on bottom and 2 on top) from bumper. Set bumper and screws aside.

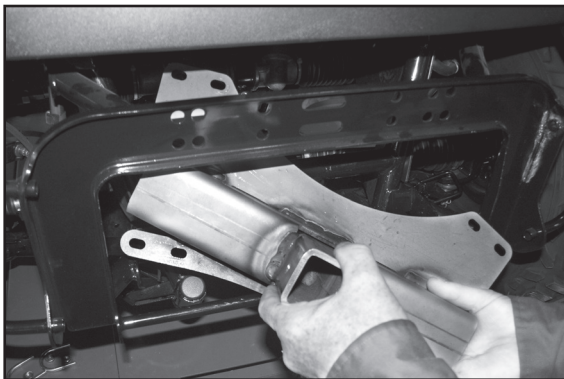

- Insert plow mount into frame as shown.

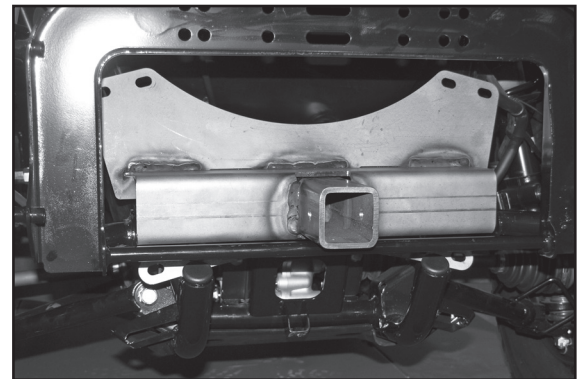


- Mount should rest on frame with holes in position for U-bolts to clamp to frame.

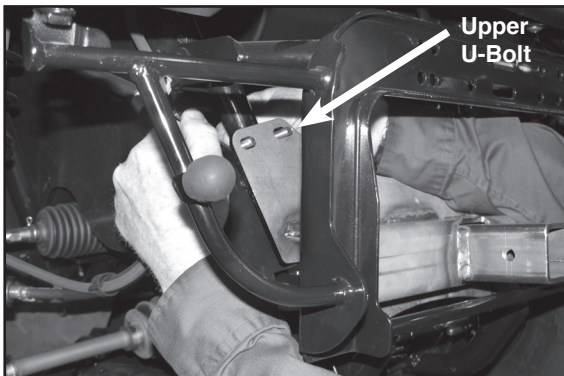

- Insert both upper U-bolts, add flat washers and nuts. Turn nuts snug tight. Then insert lower U-bolts, add flat washers and turn nuts snug tight.

Tighten nuts on all 4 U-Bolts

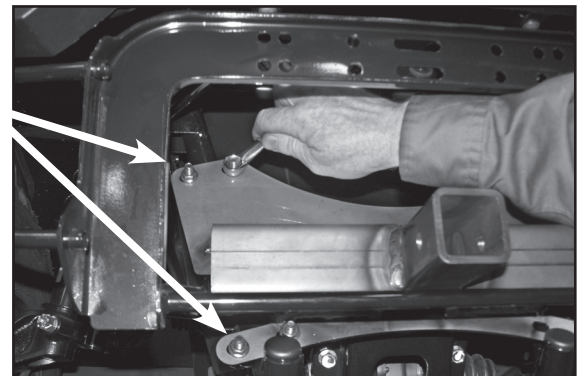

- Now tighten both nuts evenly on all 4 U-bolts. **Torque bolts to 31 ft. lbs. Then replace front bumper.** Periodically, check mount bolts and re-torque if needed.