




## Installation Instructions

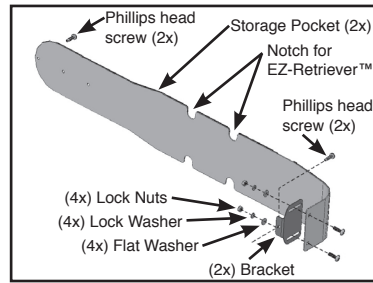

### IMPORTANT:

This product fastens to inside wheel well and box wall. Inspect these areas for hidden components—electric wiring ect., before drilling and make adjustments if needed.

### Tools Needed:

- 3/8 power drill w/ #3 phillips bit (3 inch long)
- 7/16 wrench
- marking pen
- protective eyewear

### Step 1:

- Preassemble Storage Pocket to bracket (see diagram).
- Hold assembly in place against wheel well and box wall by tailgate.
- Select best hole (1 of 3) by wheel well and make a mark for screw location.
- By tailgate, make another mark for screw location for bracket. Close tailgate, check to make sure pocket is not too far back.

### Step 2:

- Disassemble bracket from Storage Pocket. Align bracket with mark on box, hold and run self drilling screw into box wall. **Be careful, don't over tighten.**


### Step 3:

- Reassemble Storage Pocket to bracket. Leave nuts finger tight.
- Raise front of pocket to level height, hold and run self drilling screw into wheel well. **Be careful, don't over tighten.**
- Tighten bolts holding pocket to bracket. Repeat installation procedure for opposite side Storage Pocket.

### NOTE:

On some wheel wells, locating the screw lower down may provide a better fit. Drill a new 1/4" hole in Storage Pocket where screw will fasten to wheel well.


**Drop-in-bedliner:** drill through bedliner and let screw drill into steel wall behind bedliner.

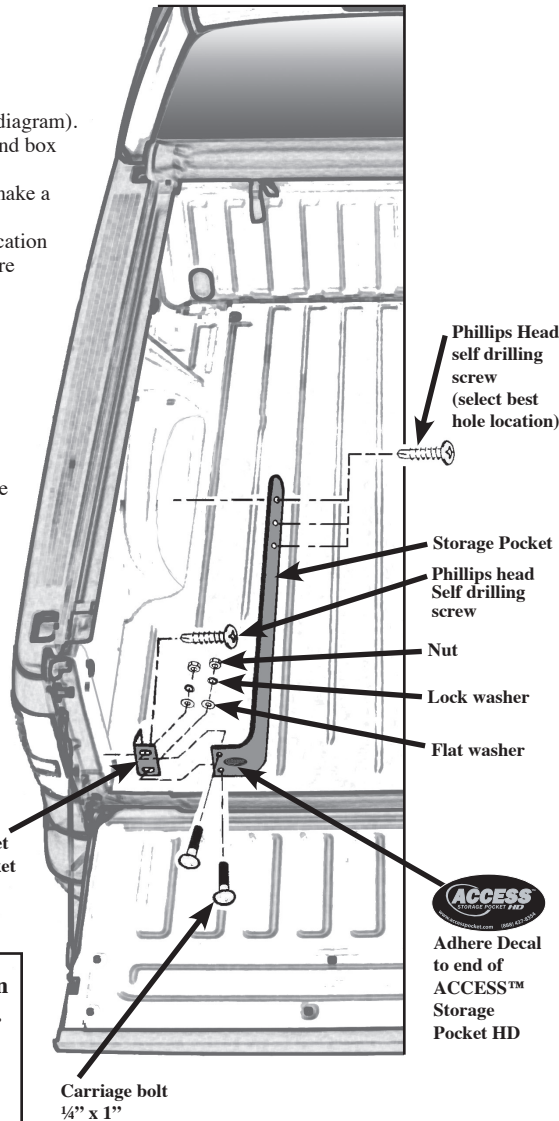

**Storage Pockets are notched to work in conjunction with your EZ-Retriever™. See back side for details. EZ-RETRIEVER™ IS NOT INCLUDED WITH STORAGE POCKET KIT**



## Installation Instructions

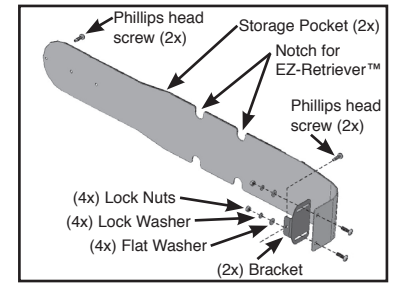

### IMPORTANT:

This product fastens to inside wheel well and box wall. Inspect these areas for hidden components—electric wiring ect., before drilling and make adjustments if needed.

### Tools Needed:

- 3/8 power drill w/ #3 phillips bit (3 inch long)
- 7/16 wrench
- marking pen
- protective eyewear

### Step 1:

- Preassemble Storage Pocket to bracket (see diagram).
- Hold assembly in place against wheel well and box wall by tailgate.
- Select best hole (1 of 3) by wheel well and make a mark for screw location.
- By tailgate, make another mark for screw location for bracket. Close tailgate, check to make sure pocket is not too far back.

### Step 2:

- Disassemble bracket from Storage Pocket. Align bracket with mark on box, hold and run self drilling screw into box wall. **Be careful, don't over tighten.**


### Step 3:

- Reassemble Storage Pocket to bracket. Leave nuts finger tight.
- Raise front of pocket to level height, hold and run self drilling screw into wheel well. **Be careful, don't over tighten.**
- Tighten bolts holding pocket to bracket. Repeat installation procedure for opposite side Storage Pocket.



### NOTE:

On some wheel wells, locating the screw lower down may provide a better fit. Drill a new 1/4" hole in Storage Pocket where screw will fasten to wheel well.

**Drop-in-bedliner:** drill through bedliner and let screw drill into steel wall behind bedliner.

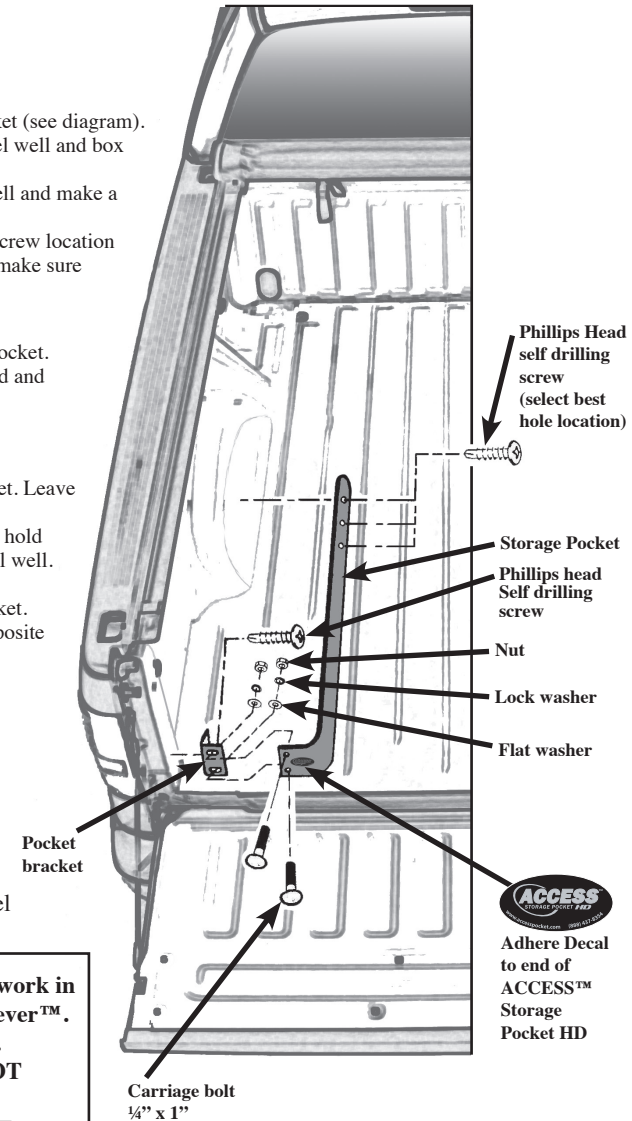

**Storage Pockets are notched to work in conjunction with your EZ-Retriever™. See back side for details. EZ-RETRIEVER™ IS NOT INCLUDED WITH STORAGE POCKET KIT**

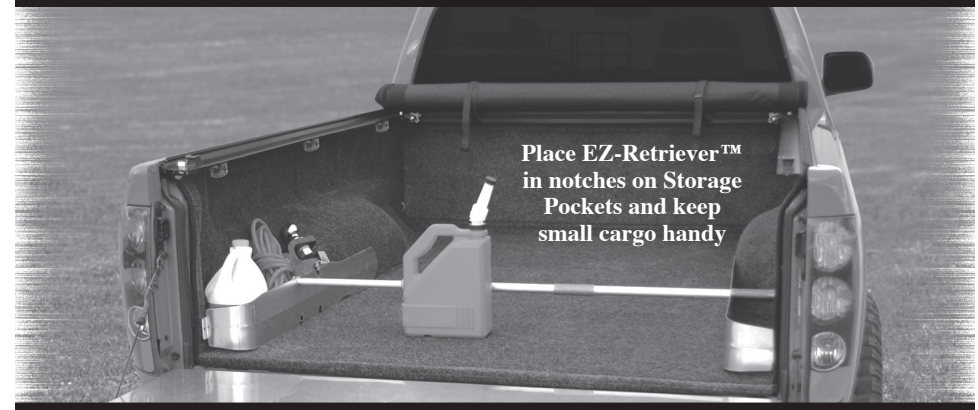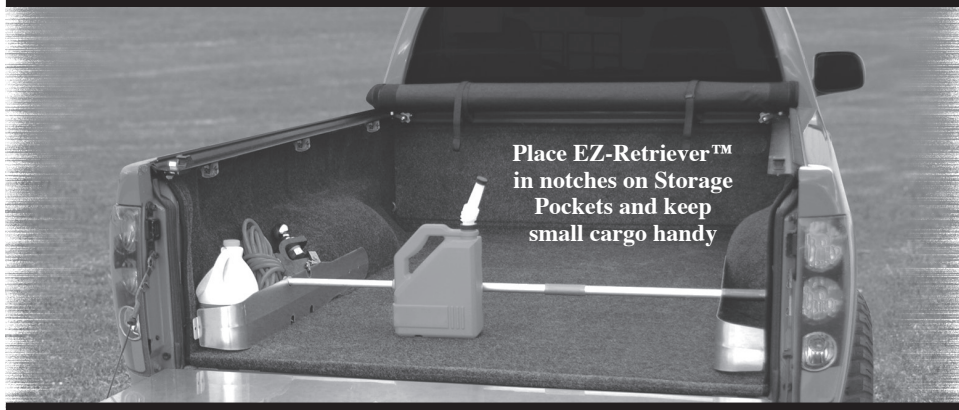

**EZ-Retriever™ sold separately - MSRP \$41.95**

Available online at <http://shop.agricover.com>  
or call us toll-free at (800)233-4655

**EZ-Retriever™ sold separately - MSRP \$41.95**

Available online at <http://shop.agricover.com>  
or call us toll-free at (800)233-4655



**EXTENDS TO 5' 9"**

Easily adjusts to the perfect length for any size truck bed

**GRAB IT, MOVE IT OR LOAD IT**

Instant cargo management at your fingertips.

**EXTENDS TO 5' 9"**

Easily adjusts to the perfect length for any size truck bed

**GRAB IT, MOVE IT OR LOAD IT**

Instant cargo management at your fingertips.

- Storage Pockets are notched to work in conjunction with your EZ-Retriever™
- Easily reach items that have slid to the front of the truck box
- Works great for vehicles with toppers, tonneaus or lids
- Manufactured from aircraft grade heavy-duty aluminum

- Storage Pockets are notched to work in conjunction with your EZ-Retriever™
- Easily reach items that have slid to the front of the truck box
- Works great for vehicles with toppers, tonneaus or lids
- Manufactured from aircraft grade heavy-duty aluminum