





## EZLOC® TARP RETURN BUNJI GUIDE INSTRUCTIONS

**Installers Note:** The instructions below show procedure updates to the Owner's Manual for Step 7 (C) and Step 12 (A) and (B) .

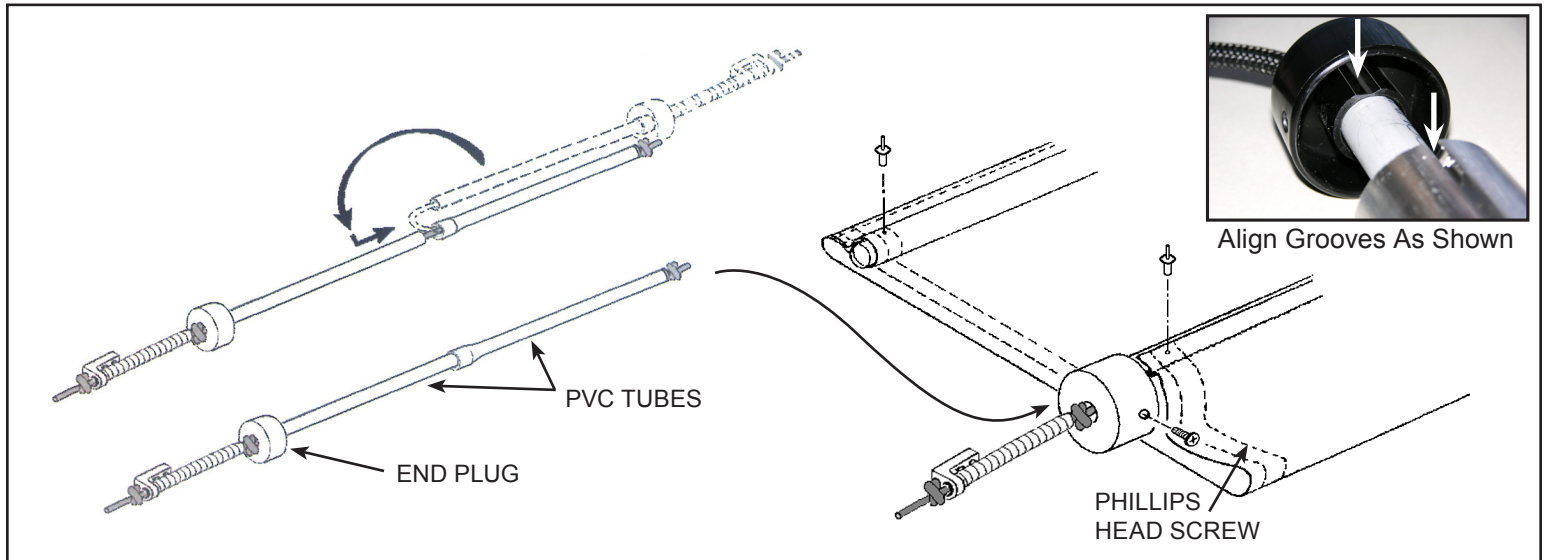

**Update to Step 7 C.** Unfold factory assembled cord return, align open ends and connect tubes together. Insert assembly into front end of roll tube. Align groove on end plug with groove inside roll tube and tap in place. Fasten with Phillips head self drilling screw. Then continue with rivet procedure in Step 7 of Owner's Manual.

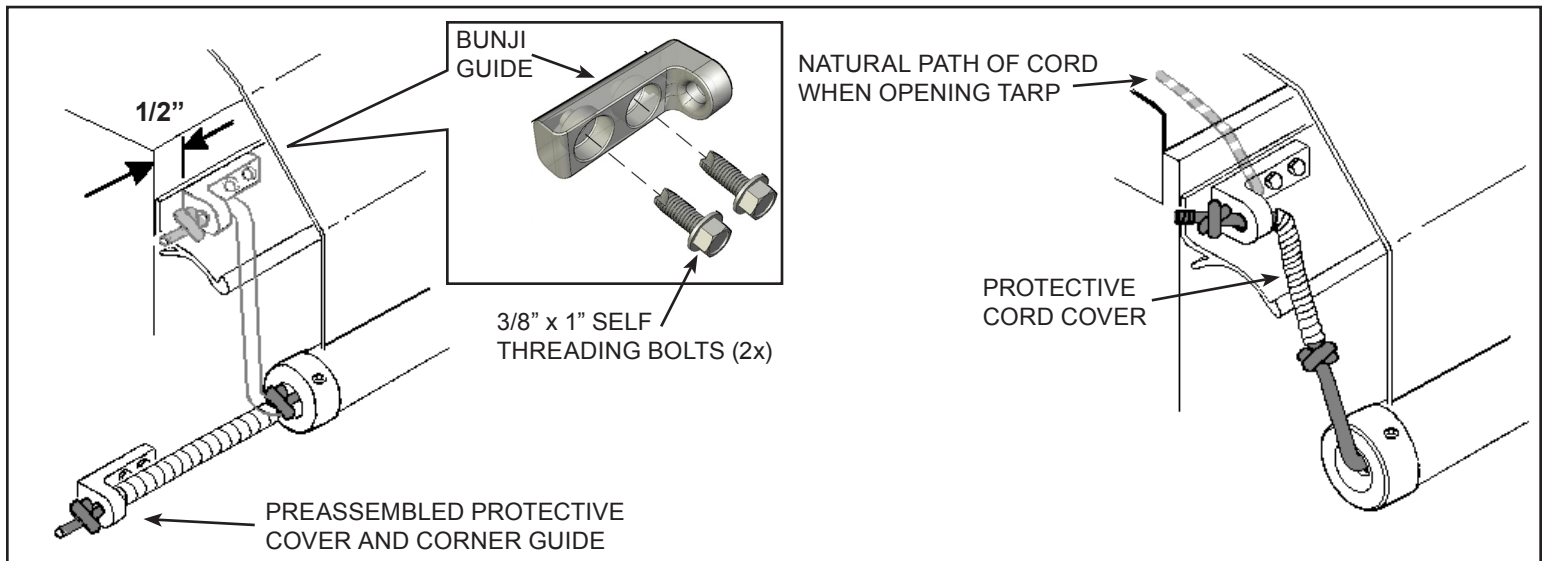

**Update to Step 12, A. and B.** Position bunji guide  $\frac{1}{2}$ " back from end cap/latch plate at front corner of box. Mark and drill two  $\frac{5}{16}$ " hole. Fasten bunji guide with two  $\frac{3}{8}$ " x 1" self threading bolts.

**NOTE:** Before installing, hold bunji guide at location and inspect path of cord. Cord should follow natural path on top of end cap without interference from edge of tarp or wind deflector on end cap. If any sharp edges, burrs or corners interfere with path of cord, remove where needed.