


REMOVE OLD SOLENOID

Tools for disassembly: Protective eye-wear, drill w/#3 Phillips bit and 1/2" wrench

- A** Disconnect solenoid wires beginning with number 1 as shown at right. Remove and discard old solenoid.

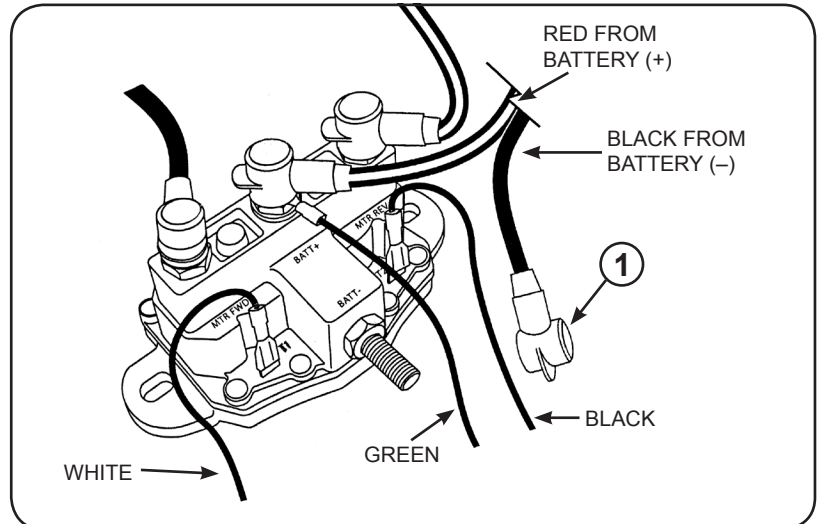

INSTALL NEW SOLENOID

Tools for assembly: Protective eyewear, wire cutter, stripper and crimper, drill with #2 Phillips bit, (2) 10mm wrenches (1 with open end)

- A** Mount new solenoid using #2 self drilling screws.
- B** Cut off existing terminals on wires and replace with new terminals as in diagram at right.
- C** Reattach wires to solenoid as in diagram at right. **NOTE: On solenoid post connections, always hold base nut while tightening top nut. Do not over tighten.**
- D** Check system operation. *If switch runs system backwards, reverse black and white tarp switch wires on solenoid.*

