

Installation Instructions

IMPORTANT:

This product fastens to inside wheel well and box wall. Inspect these areas for hidden components—electric wiring etc., before drilling and make adjustments if needed.

Storage

Pocket (2x)

Notch for EZ-Retriever™

Phillips head screw (4x)

Tools Needed:

- a) 3/8 power drill w/#3 phillips bit (3 inch long)
- b) marking pen
- c) protective eyewear

Step 1:

- Hold storage pocket in level position against wheel well and box wall by tailgate.
- Select best hole (1 of 3) by wheel well and make mark for screw location.
- Then by tailgate, make another mark for screw location. Close tailgate and make sure Storage Pocket is not too far back.

Step 2


- By tailgate, align storage pocket hole with mark on box wall. Run self drilling screw into wall, **be careful, don't over tighten**.
- By wheel well, align storage pocket with that mark and run another self drilling screw into wheel well.
 - **Be careful, don't overtighten**. Repeat procedure for Storage Pocket on opposite side.

NOTE:

On some wheel wells, locating the screw lower down may provide a better fit. Drill a new 1/4" hole in Storage Pocket where screw will fasten to wheel well.

Drop-in-bedliner: drill through bedliner and let screw drill into steel wall behind bedliner.



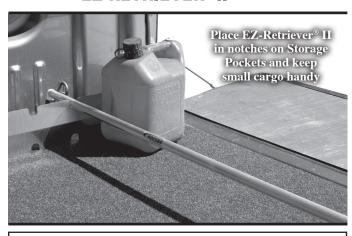

EZ-RETRIEVER® II

Sold Separately- MSRP \$19.95 (p/n 70950) available online at http://shop.agricover.com or call us toll free at (800) 233-4655

- •Storage Pockets are notched to work in conjunction with your EZ-Retriever® II
- •Easily reach items that have slid to the front of the truck box
- •Works great for vehicles with toppers, tonneaus or lids
- •Manufactured from aircraft grade heavy-duty aluminum



14 x 1 Phillips

location)

Self-Drilling screw (Select best hole

Storage Pocket

14 x 1 Phillips

Self-Drilling screw

ACCESS

Adhere Decal to end of Storage

Pocket

5' LONG Able to reach up to 8 ft.



GRAB IT, MOVE IT OR LOAD ITInstant cargo management at
your fingertips.