

2004-On COLORADO AND CANYON SPECIAL CLAMP INSTRUCTIONS

(All kits No. 224 and 225)

NOTE

The dual clamps in this kit function the same as standard clamps shown in the owners manual. Assemble the components as shown at right (1 long section and 2 small clamp sections make up 1 clamp assembly).

STEP 1

Install each clamp assembly as shown in *Illustration 1* & 2. Locate one at the front and one at the rear on each side-rail (use 2 clamp assemblies for each rail).

Tighten with 9/16" wrench, using second 9/16" wrench to hold nut on back side.

After rails are installed refer to owners manual for remainder of cover installation.

Actual shape of side rail may vary

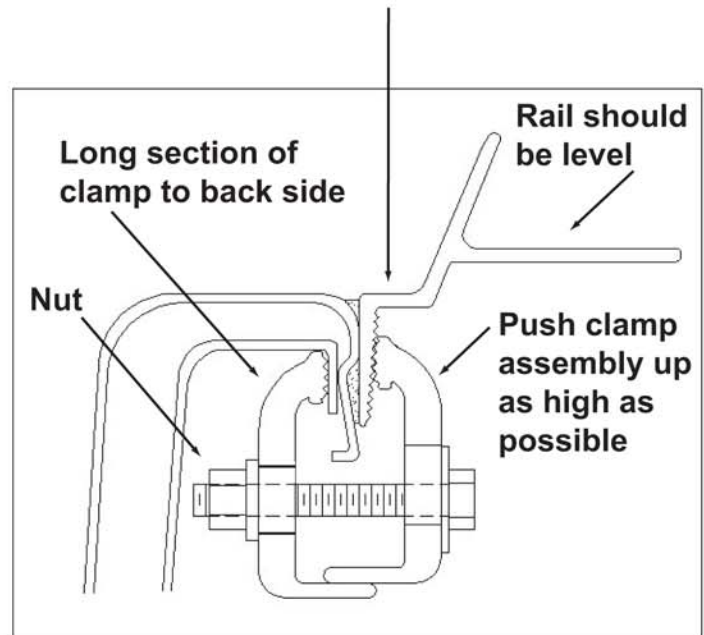


Illustration 1

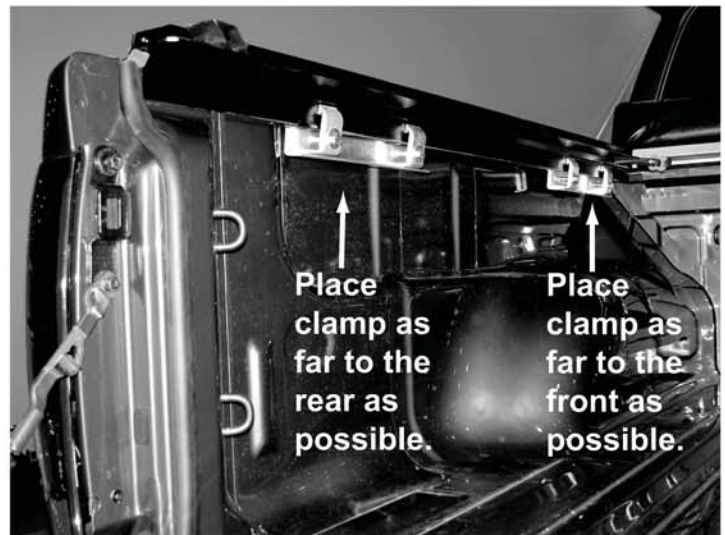


Illustration 2