

HARD TRI-FOLD COVER SPECIAL CLAMP INSTRUCTIONS



2019-ON CHEVY/GMC 1500

Read and follow these special instructions along with the standard instructions carefully before installing or using this cover.

NOTICE TO INSTALLER: Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these special instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read special instructions. Save these special instructions for future reference.

PREPARATION

TOOLS NEEDED

- 1/2" Wrench
- Ft-lbs torque wrench with 1/2" socket
- Protective eyewear

NOTE: Hardware appearance may vary.

▲ CAUTION: Over torquing hardware may damage components.



1: CLAMP LOCATIONS

NOTE: When installing clamps, position just before bends in box rail.

IMPORTANT: Install clamps where 2 layers of sheet metal are present.

A. Use standard instructions to position side rail and then install clamps at locations identified below.

NOTE: For 6' 6" covers, place second clamp at side rail splice.

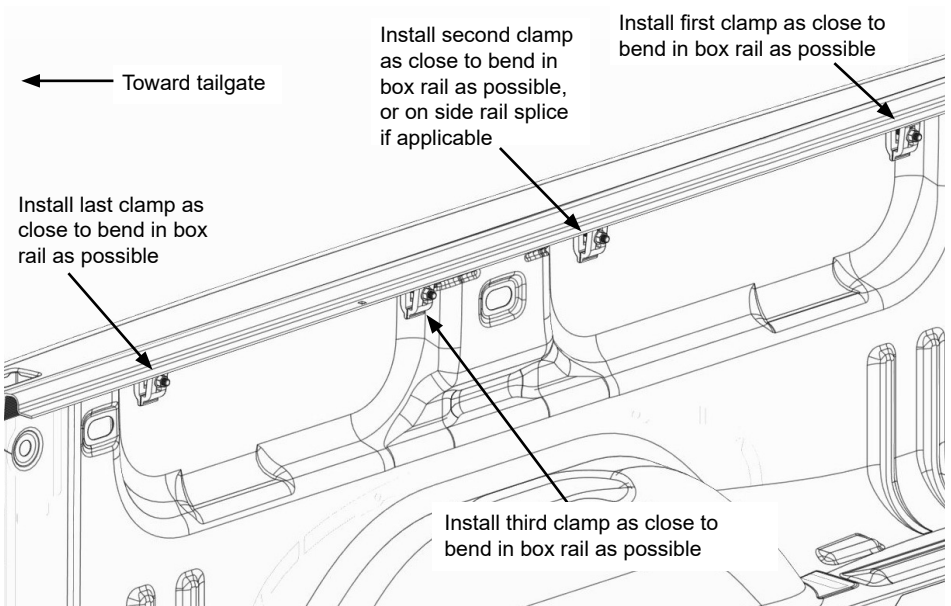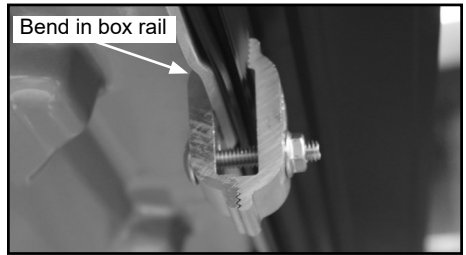

1: CLAMP LOCATIONS (Continued)

- B. Ensure side rail is level and then torque clamp nuts to 20 ft-lbs.
- C. Repeat Step 1 to install side rail on opposite side.
- D. **For remaining cover installation, refer to standard instructions.**

