


HARD TRUCK BOX COVER SECURING CHANNEL INSTRUCTIONS

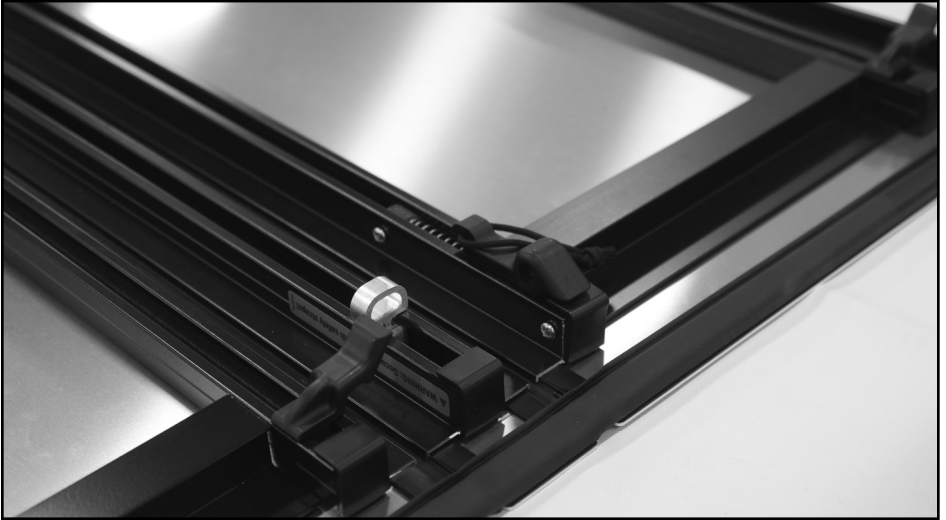

NOTICE: Use these instructions to secure a channel to your hard truck box cover. Even if familiar with product, read instructions prior to use as improvements may be made without notice. Always handle components with care.

PREPARATION

COMPONENTS

- Glue
- Alcohol pad

TOOLS NEEDED

- Protective eyewear
- Gloves
- Spring clamp

NOTE: Hardware appearance and components may vary.

▲ CAUTION: Before using glue, read and understand all directions, warnings and precautions. For more information, visit glue manufacturer's website.

▲ DANGER: Highly flammable liquid and vapor. Do not use or store glue near fire or flame. Use in well ventilated area. No smoking. Avoid contact with eyes. Do not breathe vapor. Keep out of reach of children. Wear protective gloves and eye/face protection. May be fatal if swallowed. May cause an allergic skin reaction. May cause drowsiness or dizziness.

IMPORTANT: Follow glue manufacturers recommendations for dry time.


NOTE: For best adhesion, ensure air and surface temperatures are above 60° F.

1: CHECKING HINGE PLACEMENT

A. Clean and prepare flat work area. Place cloth, cardboard or tarp on work area to protect cover finish.

NOTE: Ensure work area accommodates unfolded cover length, width and weight.

B. Check hinge on top of cover. Proper hinge placement should have ridges between panels. Improper placement will have ridges overlapping on panels.

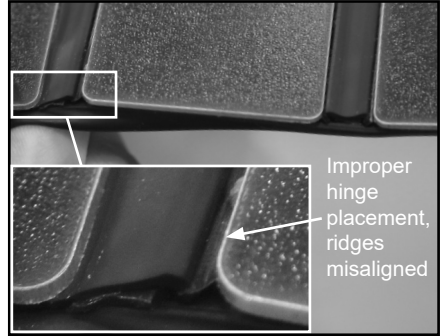

C. Position and unfold hard cover on work area with bottom facing up.

D. If ridges are overlapped peel back hinge and clean with alcohol pad.



NOTE: Shake glue bottle well before applying.

E. Apply glue to corners of each panel.




F. Center ridges in between both panels and hold hinge in place and allow glue to dry (as directed by glue packaging).




2: CHECKING CHANNEL

A. Locate channel toward front of cover in between two hinges.

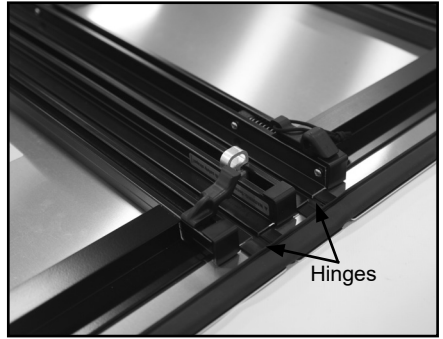

B. Lift each channel end to determine if fully secured.

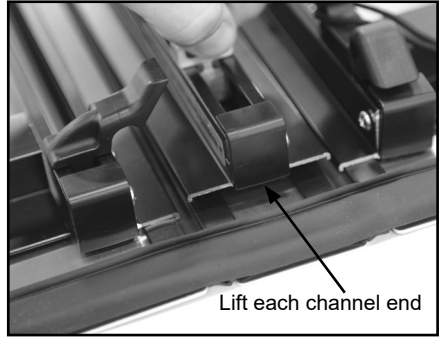

NOTE: Shake glue bottle well before applying.

C. Clean with alcohol pad and apply glue under each end that is not fully secured.



D. Secure channel with non-marring clamp and allow glue to dry (as directed by glue packaging).

