



CAB GUARD INSTALLATION INSTRUCTIONS

NOTICE TO INSTALLER: Even if familiar with product, read these instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read instructions. Save these instructions for future reference.



Questions? 866-630-8726
agricover.com

PREPARATION

REQUIREMENT: ADARAC™ models with bottom cross bar channel.

IMPORTANT: Cab Guards are intended to protect cab from forward shifting cargo.

COMPONENTS

- (2) Cab guards with hardware

TOOLS NEEDED


- Ft-lbs torque wrench with 9/16" socket
- In-lbs torque wrench
- Protective eyewear

⚠ CAUTION: Over torquing hardware may damage components.

NOTE: Hardware appearance and components may vary.

1: PREPARING CAB GUARDS


A. Pre-assemble cab guards with bolts and channel nuts. Ensure extended threads on channel nuts face up.

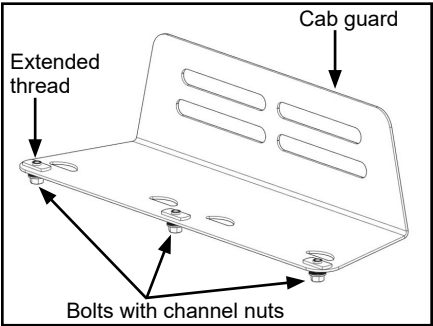

2: INSTALLING CAB GUARDS

A. From one side of the truck bed rack, loosen end cap bolt and remove end cap. Then remove (2) nuts connecting cross bar to upright.


B. Slightly raise cross bar and slide mounting bracket out of bottom cross bar channel.

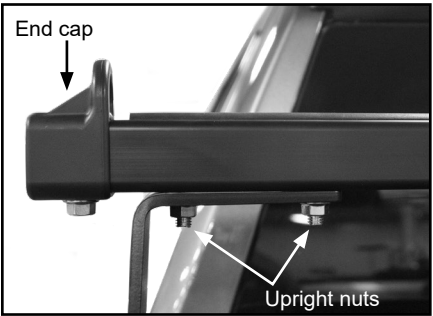

2: INSTALLING CAB GUARDS (Continued)


C. With cross bar still raised, slide channel nuts on cab guard assembly into bottom cross bar channel. Leave bolts loose for now.

D. Repeat with remaining cab guard.

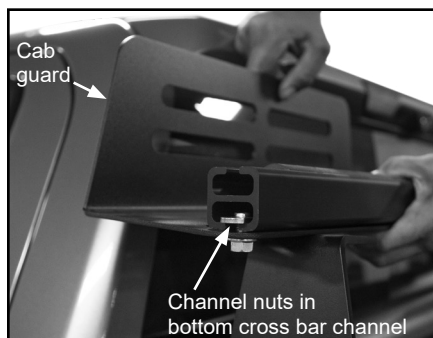

E. Reinsert mounting bracket into bottom cross bar channel.

F. Insert bolts through holes in upright, then finger tighten nuts.

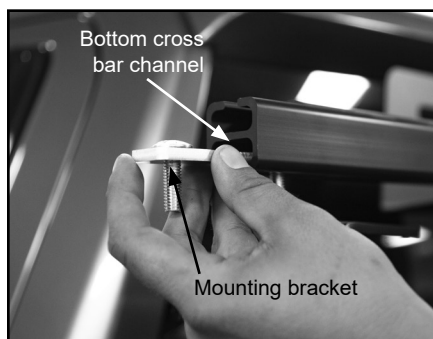

G. Reattach end cap and torque end cap bolt to 180 in-lbs (15 ft-lbs), then torque remaining bolts to 32 ft-lbs.



