

HARD TRUCK BOX COVER ANCHOR REPLACEMENT INSTRUCTIONS



NOTICE: Use these instructions to replace the anchors for your hard cover. Even if familiar with product, read instructions prior to use as improvements may be made without notice. Always handle components with care.

PREPARATION

COMPONENTS

- (2) Anchors
- Alcohol pad
- Primer

TOOLS NEEDED

- Marking tool
- Gloves
- Protective eyewear

▲ CAUTION: Air and surface temperatures must be above 60° F for proper adhesion.

▲ CAUTION: Before using primer, read and understand all directions, warnings and precautions. For more information, visit primer manufacturer's website.

▲ DANGER: Highly flammable liquid and vapor. Do not use or store primer near fire or flame. Use in well ventilated area. No smoking. Avoid contact with eyes. Do not breathe vapor. Keep out of reach of children. Wear protective gloves and eye/face protection. May be fatal if swallowed and enters airways. May cause an allergic skin reaction. May cause drowsiness or dizziness.

1: INSTALLING ANCHORS

NOTE: Anchor removal kit, PN 4005294, is available at additional cost.

A. With cover in vertical position, swing pivot links out from clips and attach anchors.


NOTE: Use caution if resting cover on cab during install.



B. With anchor's post toward cover, test placement on top of cab in flat area between ribs. Ensure pivot link is flat against anchor's post, then mark location. Repeat for opposite side.

IMPORTANT: Ensure minimum 1" space between cover and closest point on cab.

NOTE: Improper placement of anchors will require ordering replacements.

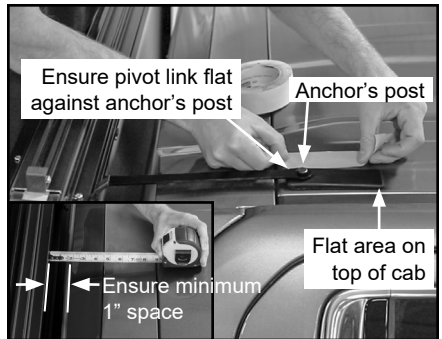

1: INSTALLING ANCHORS (Continued)

C. Release pivot link from anchor and secure in clip on each side.

▲ CAUTION: Air and surface temperatures must be above 60° F for proper adhesion.

D. Clean marked locations with alcohol pad.

E. Shake primer, squeeze at black dot to start liquid flow, then prime locations and allow to dry.

NOTE: Refer to primer manufacturers website for dry time.

▲ CAUTION: Strong magnetic pull may cause improper placement.

F. Peel adhesive liner from anchors and adhere to marked locations. Apply pressure for 10 seconds, then close cover.

NOTE: After installation, cover should remain in closed position for at least 48 hours. During this time period, anchors will bond to cab.



