


HARD TRUCK BOX COVER HINGE GAP KIT INSTRUCTIONS

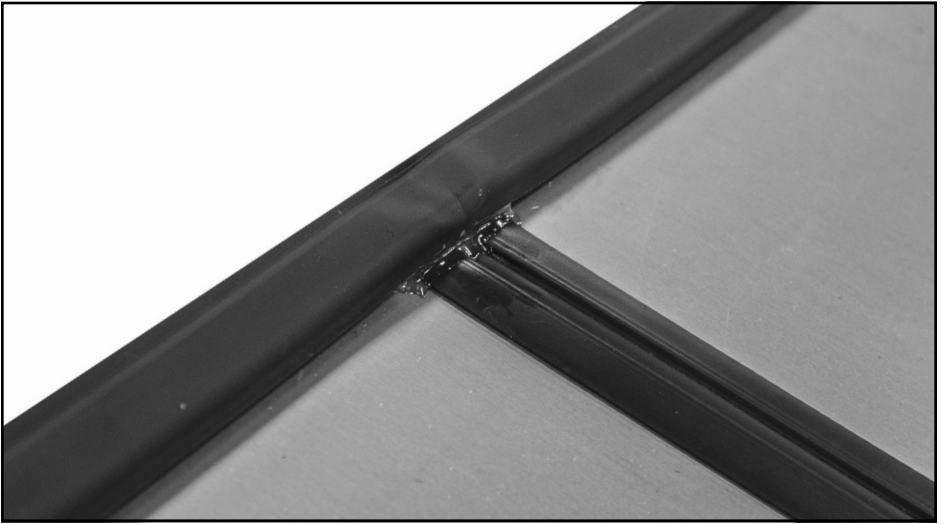

NOTICE: Use these instructions to seal gap at hinge on your hard truck box cover. Even if familiar with product, read instructions prior to use as improvements may be made without notice. Always handle components with care.

PREPARATION

COMPONENTS

- Adhesive
- Alcohol pad

TOOLS NEEDED

- Protective eyewear
- Gloves

NOTE: Hardware appearance and components may vary.

▲ CAUTION: Before using adhesive, read and understand all directions, warnings and precautions. For more information, visit adhesive manufacturer's website.

▲ DANGER: Highly flammable liquid and vapor. Do not use or store adhesive near fire or flame. Use in well ventilated area. No smoking. Avoid contact with eyes. Keep out of reach of children. Wear protective gloves and eye/face protection. May be fatal if swallowed.

IMPORTANT: Follow adhesive manufacturers recommendations for dry time.

NOTE: For best adhesion, ensure air and surface temperatures are above 60° F.

1: FILL HINGE GAP

A. Clean and prepare flat work area. Place cloth, cardboard or tarp on work area to protect cover finish.

NOTE: Ensure work area accommodates unfolded cover length, width and weight.

B. Remove hard cover from vehicle. Position and unfold hard cover on work area with bottom facing up.

C. Locate where seal and hinge overlap and clean area with alcohol pad.

D. Carefully lift up on seal and fill hinge gap with adhesive, then allow to dry.

