



UNIVERSAL CARGO NET INSTALLATION INSTRUCTIONS

NOTICE TO INSTALLER: Even if familiar with product, read these instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read instructions. Save these instructions for future reference.



Questions? 866-630-8726
agricover.com

PREPARATION

COMPONENTS

- Cargo net
- Mesh bag
- (12) Carabiners

TOOLS NEEDED

- Protective eyewear


SAFETY INFORMATION

⚠ CAUTION: Ensure cargo net is secured tightly over cargo. Do not leave loose. If not loaded and secured properly, cargo may shift during transportation.


- Always exercise safety and common sense with load placement and load capacity.
- Use caution and protective eyewear when stretching or fastening cargo net.
- Do NOT stretch net beyond twice normal size.
- Do NOT use cargo net when twisted or in a knot.
- Inspect cargo net and carabiners for signs of wear, replace if damaged or worn.
- Protect cargo net from abrasions, friction and sharp edges.
- Store in a clean, dry place, out of direct sunlight when not in use.
- Cargo net should not be used in place of tailgate.

1: INSTALLING UNIVERSAL CARGO NET

A. Spread cargo net out flat.

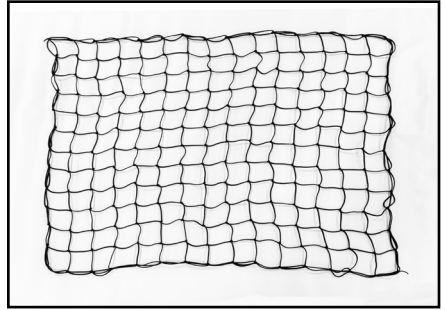

B. Attach a carabiner at each corner of cargo net.

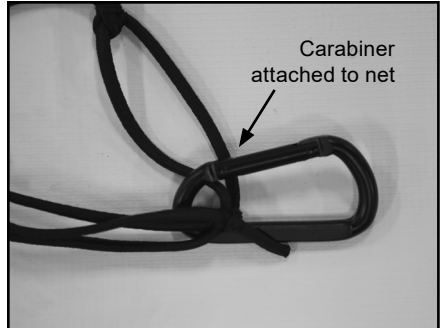

⚠ CAUTION: Use protective eyewear when attaching cargo net.

C. Place over cargo.

D. Attach carabiners to anchor points at evenly spaced distances.

E. Attach additional carabiners at various anchor points to secure cargo.

F. Ensure cargo net is securely fastened.

NOTE: If cargo net is loose, remove carabiner from anchor point, add additional loops of cargo net to carabiner and reattach to anchor point. Adjust cargo net equally on both sides.

