

# FULL WIDTH TOW FLAP SPECIAL BRACKET INSTRUCTIONS



## 2015-2020 FORD F-150

Read and follow these special instructions along with the standard instructions carefully before installing or using this tow flap.

**NOTICE TO INSTALLER:** Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read special instructions. Save these special instructions for future reference.

# PREPARATION

## TOOLS NEEDED


- Ratchet with 13 mm socket
- Protective eyewear

**▲ CAUTION:** Over tightening hardware may damage components or truck.

## 1: INSTALLING MOUNTING BRACKETS

A. At rear bumper, remove indicated bolt with ratchet and 13 mm socket.

**NOTE:** Factory bolts will be replaced by new hardware. Installer should return factory bolts to owner.

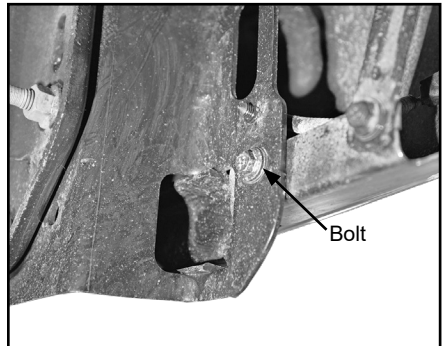


B. Place lock washer and flat washer on new bolt. Insert bolt through round hole in mounting bracket.

C. Position mounting bracket end with long slot toward front of box and insert bolt into bolt hole.

D. Tighten bolt with ratchet and 13 mm socket until snug, but not completely tight.

**NOTE:** Bolt will be fully tightened during tow flap installation.

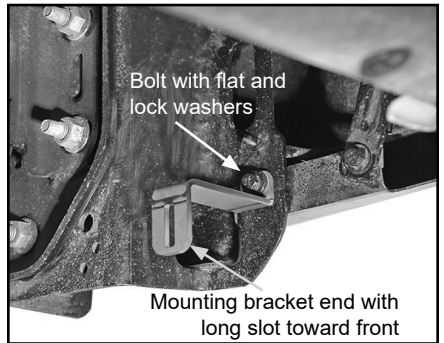

E. Repeat Steps 1A-D to install mounting bracket on opposite side.

**F. For remaining tow flap installation, refer to standard instructions.**



