

# FULL WIDTH TOW FLAP SPECIAL BRACKET INSTRUCTIONS



## 2009-ON RAM 1500 2010-ON RAM 2500/3500 2021-ON RAM 1500 TRX

Read and follow these special instructions along with the standard instructions carefully before installing or using this tow flap.

**NOTICE TO INSTALLER:** Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read special instructions. Save these special instructions for future reference.

# PREPARATION

## TOOLS NEEDED

- Ratchet with 15 mm socket
- Ratchet with 16 mm socket (TRX only)

**NOTE:** Bracket appearance may vary.


**NOTE:** Bracket may deform when tightening.

**▲ CAUTION:** Over tightening hardware may damage components or truck.

## 1: INSTALLING MOUNTING BRACKETS


A. At rear bumper, loosen indicated top bolt with ratchet and socket.

B. Remove indicated bottom bolt with ratchet and socket.

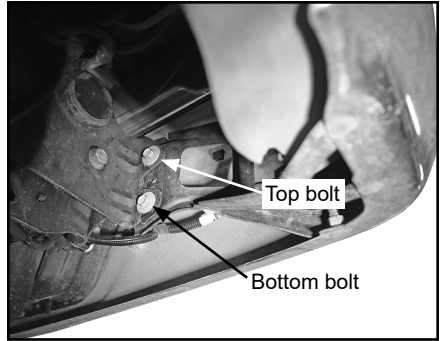

C. Position mounting bracket end with long slot toward inside of box and insert top of mounting bracket under indicated top bolt.

D. Insert removed bolt through bottom round hole in mounting bracket.

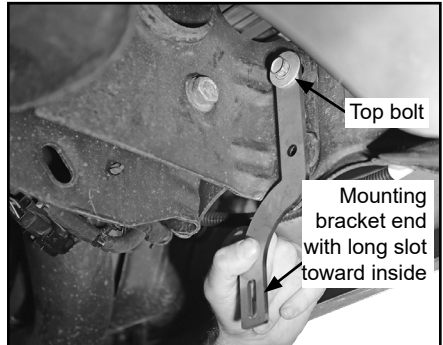

# 1: INSTALLING MOUNTING BRACKETS (Continued)

E. Tighten bolts with ratchet and socket.

F. Repeat Steps 1A-E to install mounting bracket on opposite side.

G. **For remaining tow flap installation, refer to standard instructions.**

