

# FULL WIDTH TOW FLAP SPECIAL BRACKET INSTRUCTIONS



## 09-18 RAM 1500 10-ON RAM 2500/3500

Read and follow these special instructions along with the standard instructions carefully before installing or using this tow flap.

**NOTICE TO INSTALLER:** Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read special instructions. Save these special instructions for future reference.

# PREPARATION

## TOOLS NEEDED

- Ratchet with 15 mm socket

**NOTE:** Bracket appearance may vary.


**NOTE:** Bracket may deform when tightening.

**▲ CAUTION:** Over tightening hardware may damage components or truck.

## 1: INSTALLING MOUNTING BRACKETS


A. At rear bumper, loosen indicated top bolt with ratchet and 15 mm socket.

B. Remove indicated bottom bolt with ratchet and 15 mm socket.

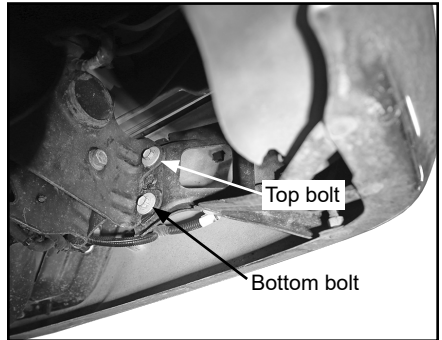

C. Position mounting bracket end with long slot toward inside of box and insert top of mounting bracket under indicated top bolt.

D. Insert removed bolt through bottom round hole in mounting bracket.

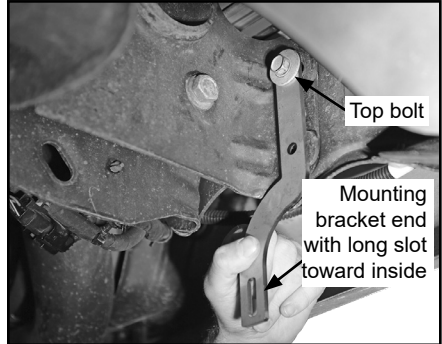

E. Tighten bolts with ratchet and 15 mm socket.

F. Repeat Steps 1A-E to install mounting bracket on opposite side.

**G. For remaining tow flap installation, refer to standard instructions.**

