

TOW FLAP EXTENSION INSTRUCTIONS



Read and follow these instructions along with the standard instructions carefully before installing or using this tow flap extension.

NOTICE TO INSTALLER: Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read instructions. Save these instructions for future reference.

PREPARATION

COMPONENTS

- (2) Tow flap extensions
- Hardware

TOOLS NEEDED

- Ratchet with 3/16" Allen head socket
- 1/2" Wrench
- Drill with 3/8" drill bit
- Marking pen
- Protective eyewear

⚠ CAUTION: Over tightening hardware may damage components or truck.


NOTE: Remove tow flaps from truck for ease of installation.

1: INSTALLING TOW FLAP EXTENSION

A. Align extension on outside edge of tow flap. Mark (2) holes using extension as a template.



B. Drill (2) holes with 3/8" drill bit.

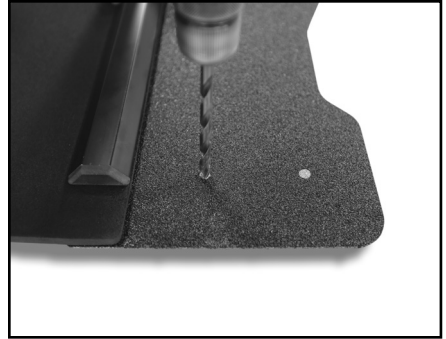

C. Align holes in extension and tow flap, then insert Allen button head bolts through face of tow flap with threads facing exhaust. Secure with nylock flange nut and tighten.

D. Repeat Steps 1A-C to install extension on opposite side.

E. If applicable, refer to standard instructions for remaining tow flap installation.

