

# TOW FLAP EXTENSION INSTRUCTIONS



Read and follow these instructions along with the standard instructions carefully before installing or using this tow flap extension.

**NOTICE TO INSTALLER:** Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read instructions. Save these instructions for future reference.

# PREPARATION

## COMPONENTS

- (2) Tow flap extensions
- Hardware

## TOOLS NEEDED

- Ratchet with 1/2" socket
- 1/2" Wrench
- Drill with 3/8" drill bit


**⚠ CAUTION: Over tightening hardware may damage components or truck.**

# 1: INSTALLING TOW FLAP EXTENSION

A. Align tow flap extension on tow flap half.  
Mark (2) holes using extension as a template.



B. Drill (2) holes with 3/8" drill bit.

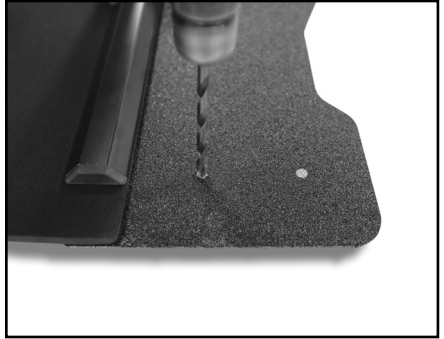

C. Align holes on tow flap extension and tow flap half. Insert 5/16" x 1" bolts through diamond plate side of tow flap. Secure with nylock flange nut and tighten.

D. Repeat Steps 1A-C to install tow flap extension on opposite side.

**E. If applicable, for remaining tow flap installation, refer to standard instructions.**

