

HARD TRUCK BOX COVER SPECIAL CLAMP INSTRUCTIONS



2022-ON NISSAN FRONTIER

Read and follow these special instructions along with the standard instructions carefully before installing or using this cover.

NOTICE TO INSTALLER: Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these special instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read special instructions. Save these special instructions for future reference.

PREPARATION

TOOLS NEEDED


- (1) 1/2" Wrench
- (1) Ft-lbs torque wrench with 1/2" socket
- (1) Protective eyewear

⚠ CAUTION: Over torquing hardware may damage components.

NOTE: Hardware appearance and components may vary.


1: SIDE RAIL INSTALLATION

A. For side rail positioning, refer to standard instructions.

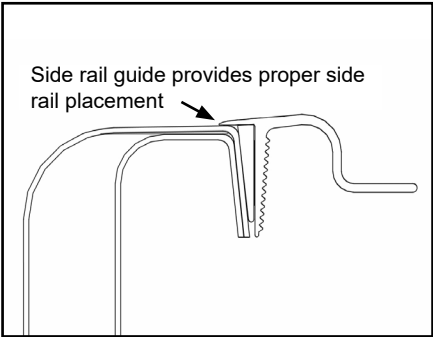

2: CLAMP INSTALLATION


A. Ensure clamps are in proper orientation. Place front clamp as close to bulkhead as possible, secure with nut.

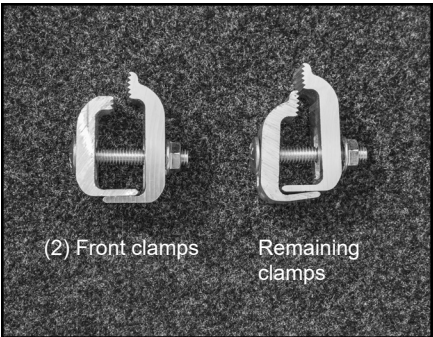

2: CLAMP INSTALLATION (Continued)


B. Measuring from bulkhead, locate slots under box rail for remaining clamp placement:

- 5' bed: 20", 35-1/2" and 45-3/4"
- 6' bed: 19", 49-1/2" and 60"

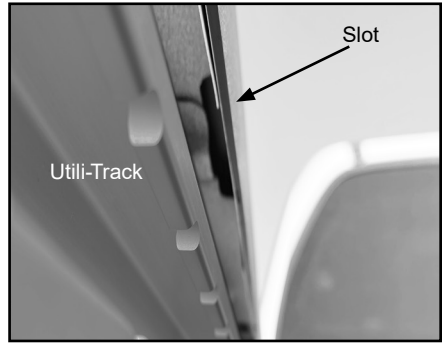

C. Loosen clamps and slide into slot in box rail, secure with nut.

NOTE: For trucks with Utili-Track System, install clamps above track.

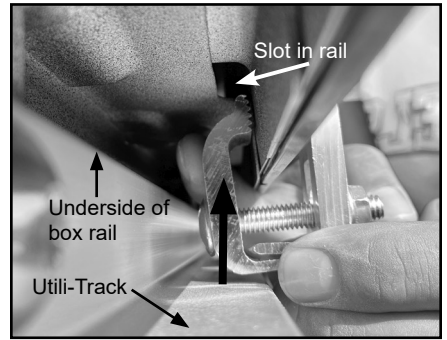

F. Verify side rail is level. If side rail is not level, refer to standard instructions.

G. Torque all clamps to 20 ft-lbs.

H. Repeat Steps 1A-G to install side rail on opposite side.

I. **For remaining cover installation, refer to standard instructions.**

