

FULL WIDTH TOW FLAP SPECIAL BRACKET INSTRUCTIONS



2021-ON FORD F-150 TREMOR

Read and follow these special instructions along with the standard instructions carefully before installing or using this tow flap.

NOTICE TO INSTALLER: Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read special instructions. Save these special instructions for future reference.

PREPARATION


TOOLS NEEDED

- Ratchet with T-40 Torx bit
- Protective eyewear


▲ CAUTION: Over tightening hardware may damage components or truck.

1: INSTALLING MOUNTING BRACKETS


A. At rear bumper, remove indicated bolt with ratchet and Torx bit, save for Step 1C.

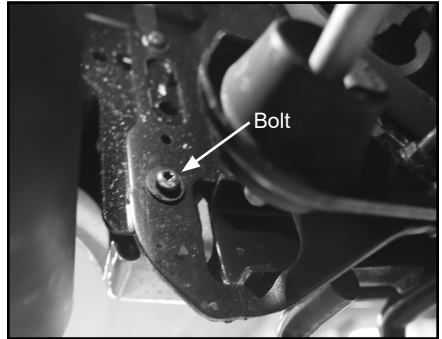

NOTE: Use proper orientation while installing brackets.


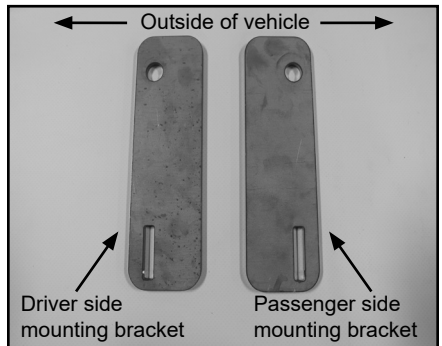


B. Align mounting bracket with holes toward outside of truck.

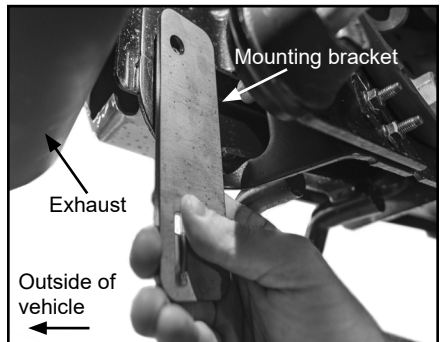

1: INSTALLING MOUNTING BRACKETS (Continued)

C. Insert Torx bolt from Step 1A through mounting bracket and secure.

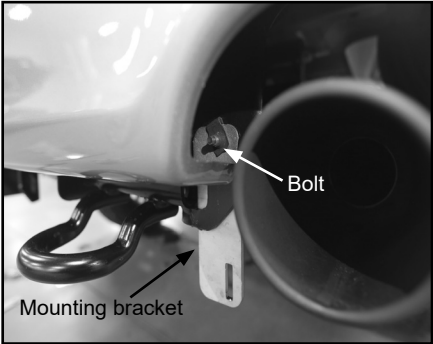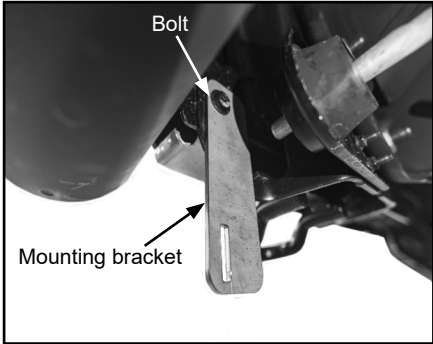

D. Repeat Steps 1A-C to install mounting bracket on opposite side.

E. **For remaining tow flap installation, refer to standard instructions.**

