


# TOW FLAP HEAT SHIELD INSTRUCTIONS

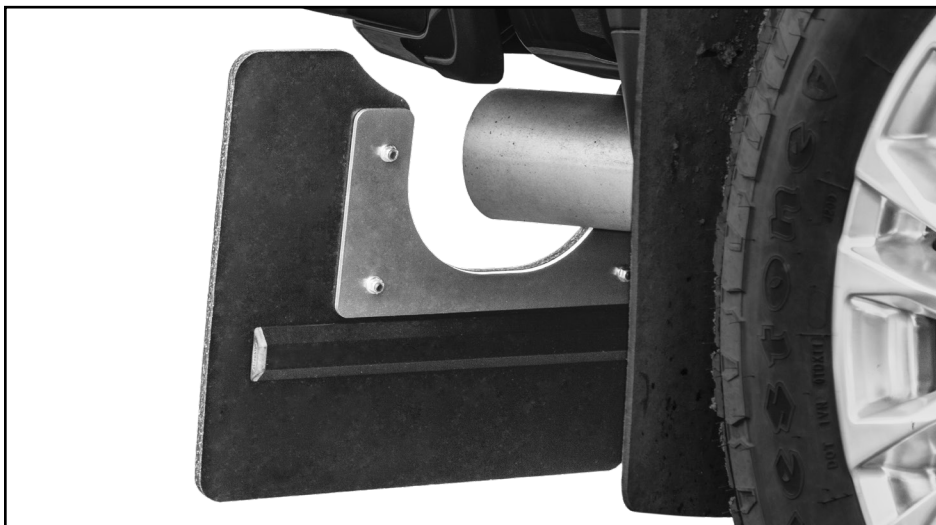

## **2015-19 GMC/CHEVY 2500, 3500 & 2020-ON GMC/CHEVY 2500, 3500**

Read and follow these instructions along with the standard instructions carefully before installing or using this mud flap.

**NOTICE TO INSTALLER:** Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read instructions. Save these instructions for future reference.

# PREPARATION

## TOOLS NEEDED

- Ratchet with 1/2" socket
- 3/16" Allen wrench
- Protective eyewear

**⚠ CAUTION:** Over tightening hardware may damage components or truck.


**⚠ CAUTION:** After installation, do not touch heat shield, hot exhaust results in high temperatures on heat shield.

**⚠ WARNING:** Ensure exhaust fumes are NOT directed or redirected toward any plastic or flaps, including on the vehicle. Additional precautionary measures may need to be taken to divert exhaust.

**NOTE:** Hardware appearance and components may vary.

## 1: INSTALLING HEAT SHIELD

A. Heat shield mounts to exhaust side of tow flap. With tow flap installed on truck, align holes in heat shield and tow flap. Insert Allen button head bolts through face of tow flap and heat shield with threads facing exhaust, secure with nylock flange nuts and tighten.

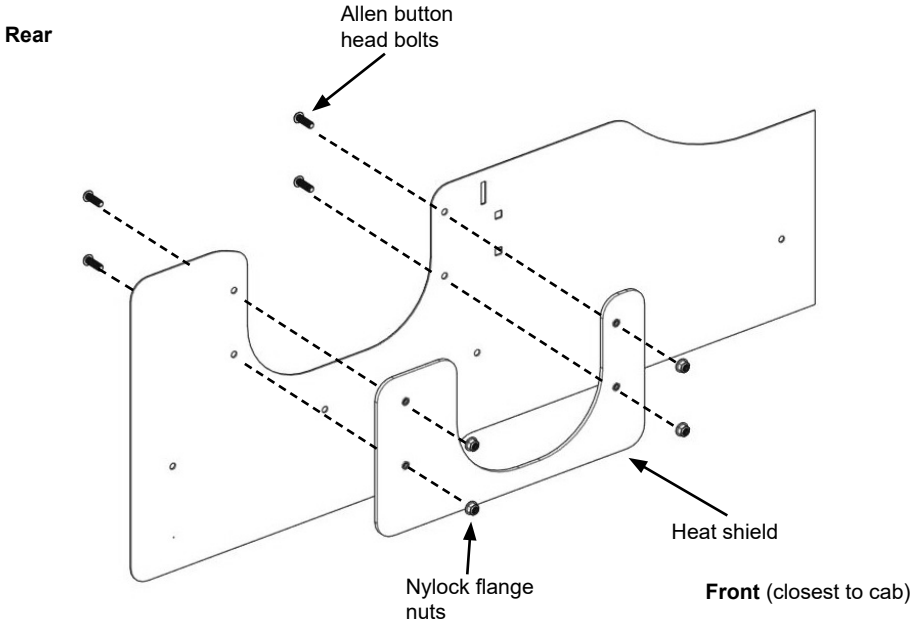

# 1: INSTALLING HEAT SHIELD (Continued)

**NOTE:** Heat shield is reversible for 2015-2019 2500 and 3500 models. Install for best fit, ensuring heat shield does not contact exhaust.

