




092322 4007505

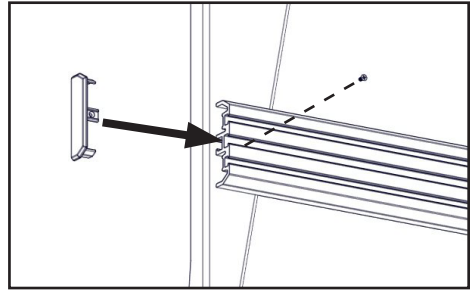

B. Repeat for remaining end caps.

screw.


A. Insert end cap into accessory track then fully tighten

and Phillips screwdriver

**TOOLS:** Protective eyewear, ratchet and 9/16" socket

**REQUIREMENT:** ADATRAC™ Accessory Tracks

## END CAP INSTRUCTIONS

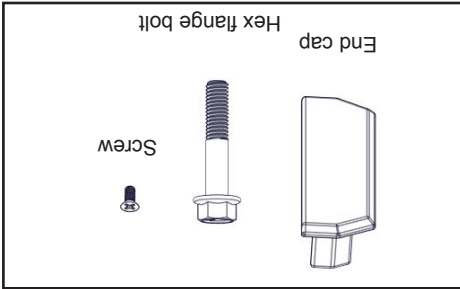

**CONTENTS:** (4) End caps, (4) Screws and (8) 3/8" x 2" Hex flange bolts



## END CAP KIT

- Finishes ADATRAC™ appearance
- Expands mounting options
- Easy installation

Reorder #4007506

