

# TRUCK BOX COVER SPECIAL SIDE RAIL INSTRUCTIONS



## 2022-ON RIVIAN R1T WITH OEM TONNEAU TRACK

Read and follow these special instructions along with the standard instructions carefully before installing or using this cover.

**NOTICE TO INSTALLER:** Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these special instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read special instructions. Save these special instructions for future reference.

**NOTICE TO INSTALLER/CONSUMER:** These instructions supersede the side rail installation step found in the standard instructions. After side rails are installed, resume standard instructions.

# PREPARATION

**⚠ CAUTION:** If equipped, disable automatic tonneau cover prior to installation.

**IMPORTANT:** Truck is equipped with a trunk-like lid on box floor. Lid remains functional, however, restricted from fully opening. Avoid forcing lid beyond its limit.

## TOOLS NEEDED


- Ratchet with 1/2" socket
- Ft-lb Torque wrench with 1/2" socket
- Protective eyewear

**⚠ CAUTION:** Over torquing hardware may damage components.


**NOTE:** Hardware appearance and components may vary.

## 1: SIDE RAIL INSTALLATION

A. Orientation of clamp hardware.


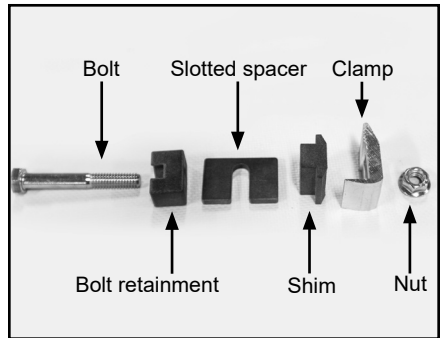


B. On one side, place bolt retention on bolt, then insert into OEM tonneau tack ensuring bolt retention is fully seated.


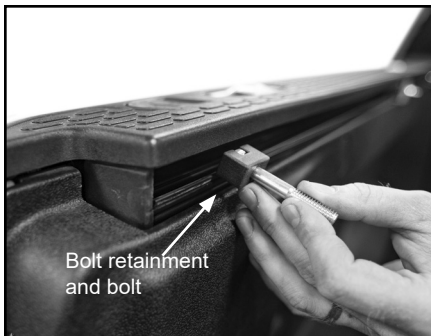


# 1: SIDE RAIL INSTALLATION (Continued)

C. Place slotted spacer on bolt and insert into OEM tonneau track.

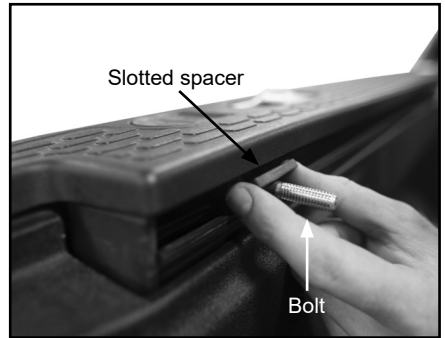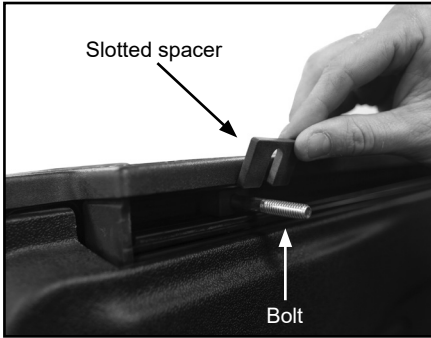


D. Place shim on bolt, gently lift up on bed cap and insert into OEM tonneau track.

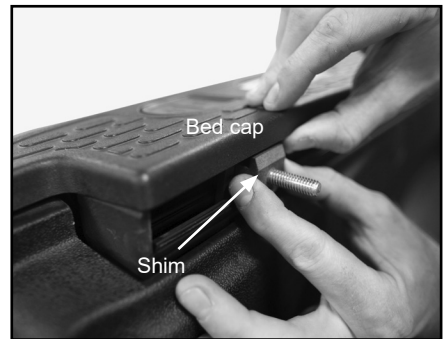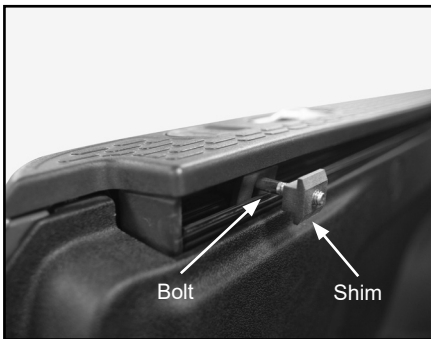


E. Place clamp on bolt and start nut.

F. Repeat for remaining clamps.

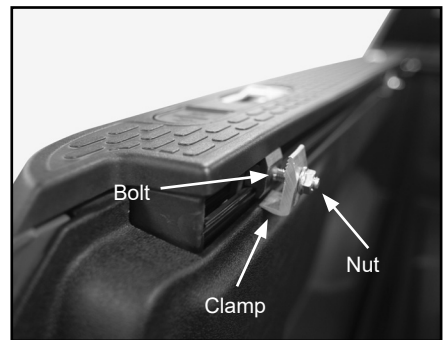

# 1: SIDE RAIL INSTALLATION (Continued)

G. Ensure notch in side rail is closest to cab.

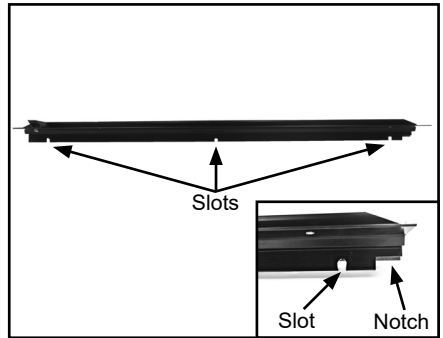

H. Position clamp assemblies to fit in (3) slots in side rail.

I. Place side rail between clamps and inside of box until it rests on clamp assemblies. Use standard instructions for the correct height and position of side rail.

J. Repeat Step 1 to install side rail on opposite side.

K. Torque all nuts to 10 ft-lbs.

L. **For remaining cover installation, refer to standard instructions.**

