

# TRUCK BED RACK SPECIAL UTILITY RAIL INSTRUCTIONS



## 2022-ON RIVIAN R1T

Read and follow these special instructions along with the standard instructions carefully before installing truck bed rack or rails.

**NOTICE TO INSTALLER:** Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read these instructions. Save these instructions for future reference.

# PREPARATION

## TOOLS NEEDED

- 9/16" Wrench
- Protective eyewear

**NOTE:** Hardware appearance and components may vary.


**⚠ CAUTION:** Over tightening hardware may damage components.

## 1: PREPARING RAILS


A. Refer to Step 1 in the standard instructions to prepare rails.

## 2: INSTALLING RAILS

A. Tie a knot on one end of cord, insert down through one of the inner holes of threaded bracket and up through the other. Tie a knot on opposite end of cord.

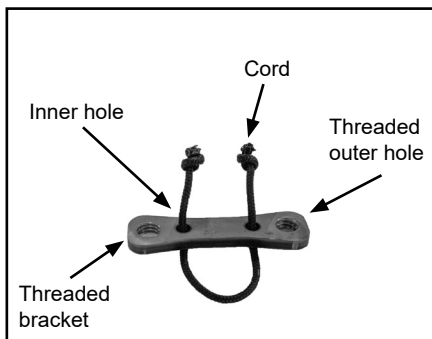


B. Route threaded bracket assembly under OEM rack system hook ensuring knotted cord is on both sides of OEM rack system hook.

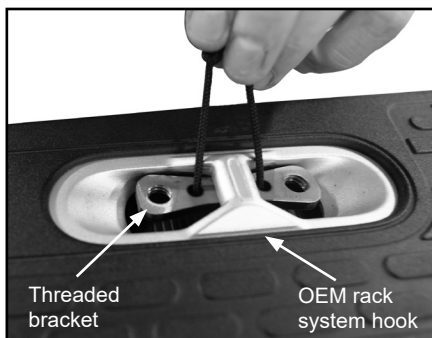

## 2: INSTALLING RAILS (Continued)

**NOTE:** Rails are side specific. Left side rail has (2) circular holes for access to tailgate and gear tunnel functions.

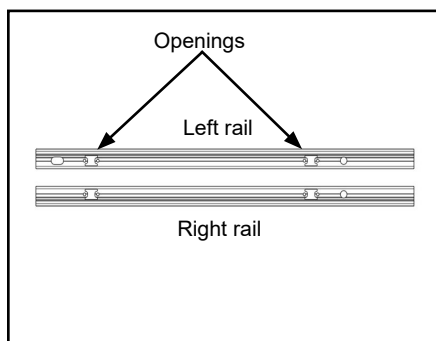

C. Align holes in rail over OEM rack system hooks, lift rail and route knots in cord through opening in rail, then turn (2)  $\frac{3}{8}$ " x  $\frac{3}{4}$ " hex bolts into threaded bracket and fully tighten.

D. Repeat for front OEM rack system hook.

E. Repeat Step 2 on opposite side.

**F. For remaining truck rack installation, refer to standard instructions.**

