

TRUCK BOX COVER SPECIAL CLAMP AND SEAL INSTRUCTIONS



2024-ON FORD RANGER

Read and follow these special instructions along with the standard instructions carefully before installing or using this cover.

NOTICE TO INSTALLER: Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these special instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read special instructions. Save these special instructions for future reference.

PREPARATION

TOOLS NEEDED


- 7/16" Wrench
- Ratchet with 7/16" socket
- Ft-lbs Torque wrench
- Body panel tool or flathead screwdriver
- Scissors
- Protective eyewear

▲ CAUTION: Over torquing hardware may damage components.


NOTE: Hardware appearance and components may vary.

1: INSTALLING SIDE RAILS


A. Starting at front of box, remove 1st, 2nd and 4th body panel clips from bed cap using body panel tool.

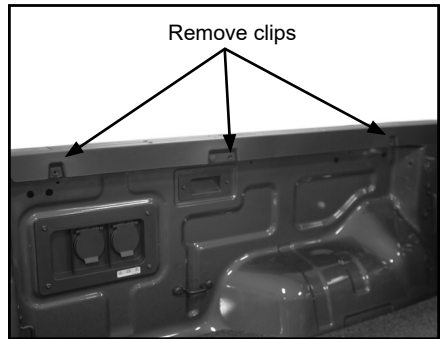

B. Orientation of clamp hardware.

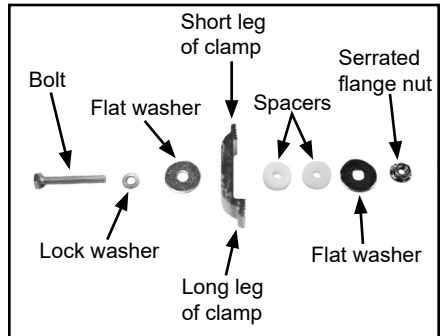

C. Insert clamp assemblies into bed cap with short leg up, place flat washer on back side of bolt and loosely tighten serrated flange nut.

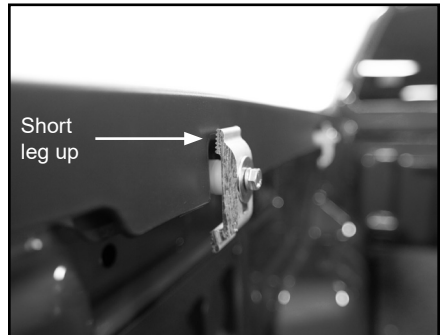

1: INSTALLING SIDE RAILS (Continued)


D. Place rail between clamps and inside of box, then slide forward until end of rail is flush with bulkhead.

E. Use standard instructions to determine correct height and position of side rail.

F. Ensure side rail is level, starting at the front tighten all bolts.

G. Torque all bolts to 10 ft-lbs.

H. Repeat on opposite side.

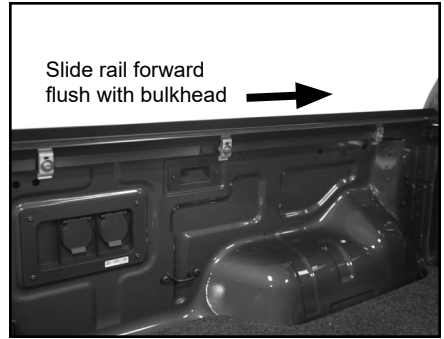

2: APPLYING FRONT SEAL

NOTE: For best adhesion, ensure air and surface temperatures are above 60° F.

NOTE: With a spray-in bed liner, better adhesion is possible by smoothing surface and applying an adhesion promoter.

A. Ensure bulkhead is clean, wipe top surface with alcohol pad.



B. Starting at one end, peel protective backing as you go. Align and adhere seal gasket against front of side rail and inside edge of box to opposite corner and cut to length.

IMPORTANT: For roll up covers, pull vinyl flap out for this application.

C. **For remaining cover installation, refer to standard instructions.**



