

TRUCK BED RACK SPECIAL UTILITY RAIL INSTRUCTIONS



2024-ON FORD RANGER

Read and follow these special instructions along with the standard instructions carefully before installing truck bed rack or rails.

NOTICE TO INSTALLER: Even if familiar with product, read these instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read instructions. Save these instructions for future reference.

PREPARATION

TOOLS NEEDED

- Ratchet with 9/16" deep well socket
- Cutting tool
- Flathead screwdriver
- Protective eyewear

⚠ CAUTION: Over tightening hardware may damage components.

⚠ CAUTION: Always cut away from yourself and others.

NOTE: Hardware appearance and components may vary.

1: PREPARING RAILS

A. Refer to Step 1 in the standard instructions to prepare rails.

2: INSTALLING RAILS

A. Remove front and rear bed cap covers using flathead screwdriver.




B. Place (3) alignment plates where bed cap covers were removed.




2: INSTALLING RAILS (Continued)

C. Align rail and long slotted holes over alignment plates. Cut slit in seal over (2) holes in alignment plates.

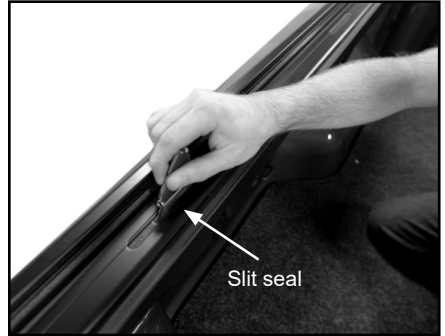

D. Insert (2) carriage bolts into slits made in seal.

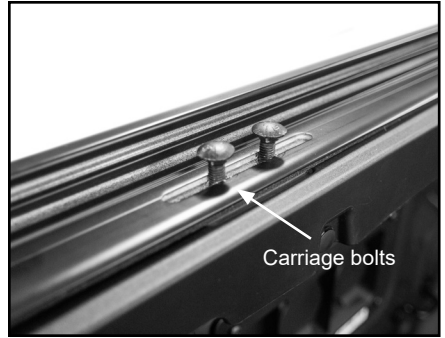

E. Secure with (2) flat washers and (2) nylock flange nuts, fully tighten.

F. Repeat on other end.

G. Repeat on opposite side.

H. **For remaining truck rack installation, refer to standard instructions.**

NOTE: If water protection is desired, locate and apply sealant at bolt locations.

