



## H2 TRUCK BED POCKETS WITH HITCH HOLDER INSTALLATION INSTRUCTIONS

**NOTICE TO INSTALLER:** Even if familiar with product, read these instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read instructions. Save these instructions for future reference.

# PREPARATION

## TOOLS NEEDED

- Drill with 1/4" bit
- Ratchet with 7/16" and 1/2" socket
- Marking pen
- Protective eyewear

**▲ CAUTION:** Over tightening hardware may damage components.

**▲ WARNING:** Always secure hitch in hitch holder with pin when storing in box.


**IMPORTANT:** Ensure special features in truck box do not cause interference.

**IMPORTANT:** Inspect inside wheel well and box wall for hidden components such as electrical wiring before drilling holes, make adjustments as needed.

**NOTE:** Drop in bedliners require drilling through bedliner to reach steel box wall behind.


## 1: INSTALLING TRUCK BED POCKET

A. Align hitch holder with holes in truck bed pocket, then align adjustable bracket on exterior of truck bed pocket as shown.

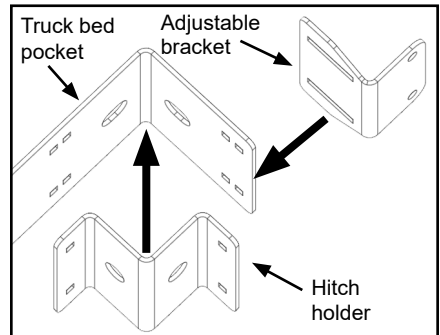

B. Insert (4) carriage bolts, then place (4) nylock flange nuts on bolts. Finger tighten nylock flange nuts on adjustable bracket and fully tighten remaining nylock flange nuts.



**NOTE:** Test fit hitch in hitch holder.

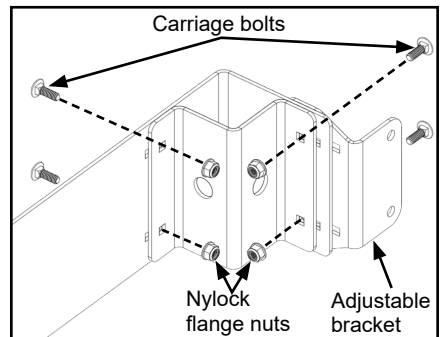

# 1: INSTALLING TRUCK BED POCKET (Continued)


C. Select best of three holes on wheel well and mark for screw location. Make (2) marks by tailgate for adjustable bracket.

D. Close tailgate and ensure bed pocket does not interfere with tailgate operation.

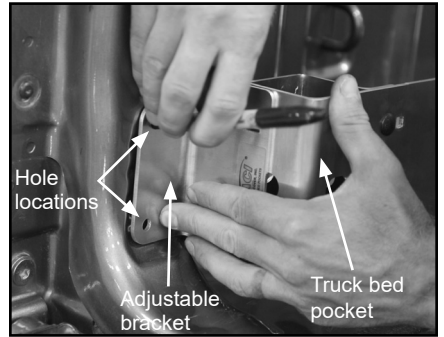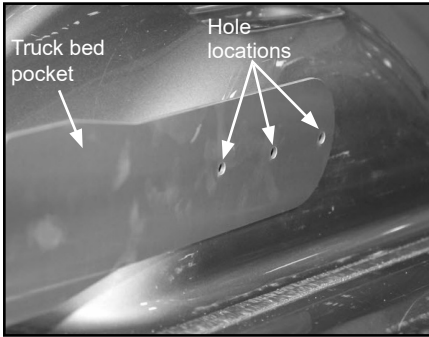

E. Drill (2) 1/4" holes at marked locations, then fully secure adjustable bracket with self-threading flange bolts.


F. Align adjustable bracket so bed pocket is flush at wheel well. Fully tighten nylock flange nuts left loose in Step 1B.

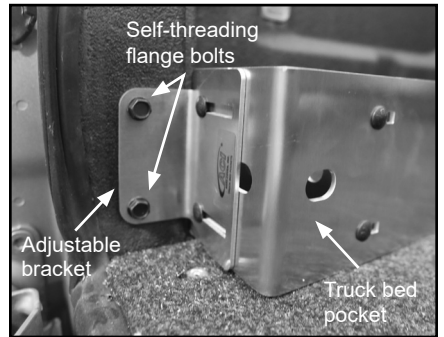

G. Drill 1/4" hole at marked location, then fully secure self-threading flange bolt.

**NOTE:** Secure all self-threading flange bolts with serrated flange nuts when possible.

H. If applicable, repeat installation process for bed pocket on opposite side.

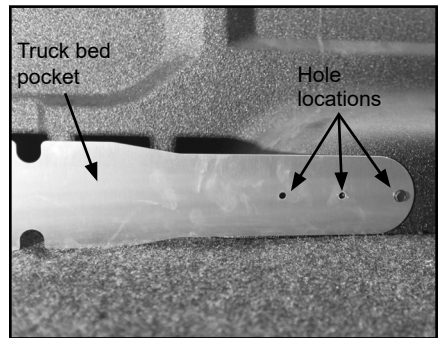



Agri-Cover, Inc.  
Customer Service Dept  
3000 Hwy 281 SE  
Jamestown, ND 58402  
Phone: 888-858-3918

**Hours: 8:00 am - 5:00 pm CST Monday through Friday, except Holidays**