

# HARD TRUCK TOPPER SPECIAL STAKE POCKET INSTRUCTIONS



## 2019-ON GMC CARBONPRO™ BOX

Use these instructions to locate and trim stake pockets to prepare them for hard truck topper clamping hardware.

**NOTICE TO INSTALLER:** Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

**NOTICE TO CONSUMER:** Before using this product, read these instructions. Save these instructions for future reference.

# PREPARATION

## TOOLS NEEDED

- Protective eyewear
- Utility knife
- Ratchet with 9/16" socket

**NOTE:** Hardware appearance and components may vary.


**NOTE:** Box or stake pocket appearance may vary.

## SAFETY INFORMATION

- Always exercise caution when using a utility knife.
- Always cut way from yourself and other people.


## 1: PREPARING FRONT STAKE POCKET

A. Using a utility knife, carefully cut out front stake pocket and remove plastic piece.

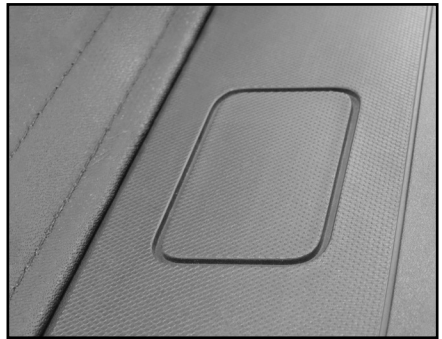

## 2: INSTALLING SIDE RAIL

A. Position middle flange of pocket bracket toward outside of box. Loop cord around extended threads on pocket bracket. Route cord through slot in side rail, then tie knot at top of cord.

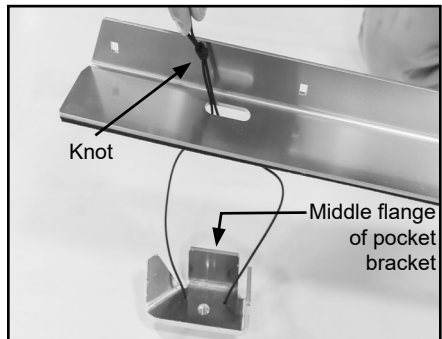


## 2: INSTALLING SIDE RAIL (Continued)

B. Lift side rail and insert pocket bracket into stake pocket.



C. Move cord until pocket bracket lines up with stake pocket. Pull cord tight and place side rail on bed rail.

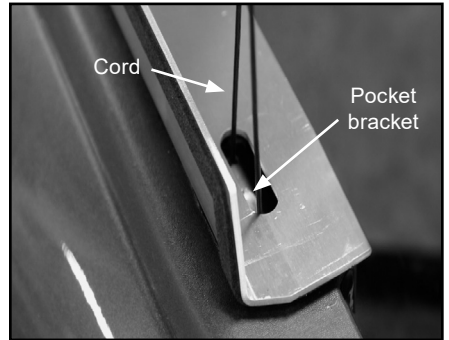

D. Turn hex bolt and flat washer into pocket bracket until finger tight.

E. Refer to standard instructions to install side rail to front stake pocket.

F. Repeat Steps 1-2 to install side rail on opposite side.

G. **For remaining topper installation, refer to standard instructions.**

