


FULL WIDTH TOW FLAP SPECIAL BRACKET INSTRUCTIONS

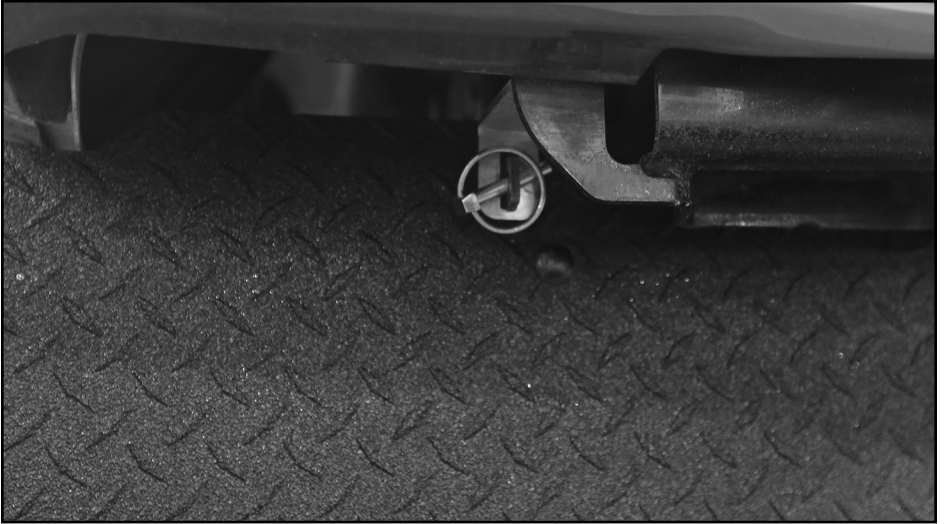

2024-ON TOYOTA TACOMA

Read and follow these special instructions along with the standard instructions carefully before installing or using this tow flap.

NOTICE TO INSTALLER: Even if familiar with product, read special instructions prior to installation as improvements may be made without notice. Always handle components with care. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read special instructions. Save these special instructions for future reference.

PREPARATION

TOOLS NEEDED


- Ratchet with 7/16" socket
- 7/16" Wrench
- Protective eyewear

NOTE: Hardware appearance and components may vary.

▲ CAUTION: Over tightening hardware may damage components or truck.


1: INSTALLING MOUNTING BRACKETS

A. On one side, locate (2) mounting holes in bottom of high lift jack housing in frame.

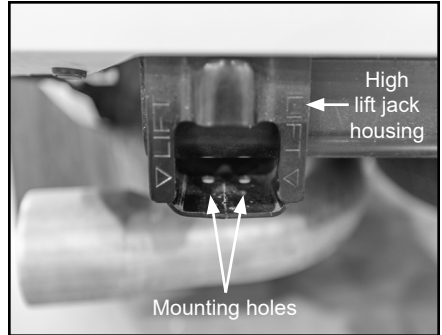


B. Place mounting bracket in high lift jack housing.

C. Place washer on bolt, then insert through high lift jack housing and mounting bracket.

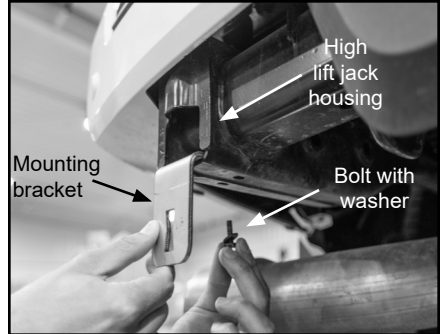

D. Using wrench, slide nylock flange nut back towards bolt with washer. Lower bolt with washer enough to move nylock flange nut in place, then thread bolt with washer into nylock flange nut. Do not fully tighten.

E. Repeat Steps 1C-D for other mounting hole.

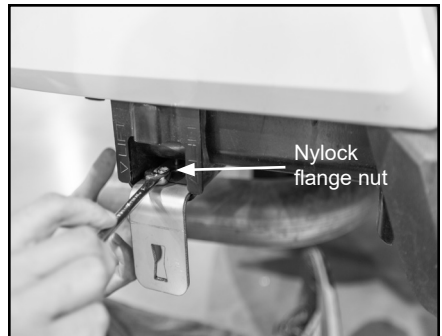

1: INSTALLING MOUNTING BRACKETS (Continued)


NOTE: Hardware will be fully tightened during tow flap installation.

F. Repeat Steps 1A-E for opposite side.

G. For remaining tow flap installation, refer to standard instructions.

IMPORTANT: Mounting brackets are slotted. For maximum clearance with exhaust, pushed outward is recommended. Ensure both mounting brackets are in the same position.

PUSHED INWARD

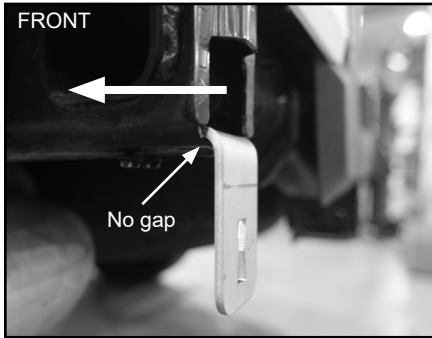

PUSHED OUTWARD

